

PRIME DESIGN


A Safe Fleet Brand

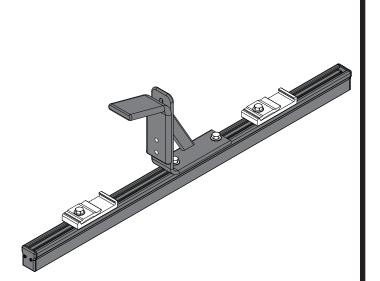


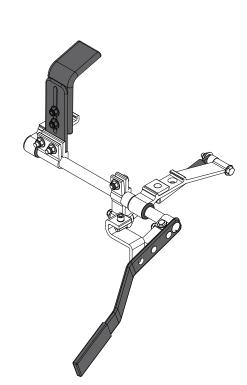



AluRack, Adjustable

CONTENTS OVERVIEW 1—Quick Clamp Asembly (Qty 1) Right Hand, Rear, w/Handle 2—Rear Clamp Support Assembly......(Qty 1) AluRack 3—Clamp Down Handle Assembly(Qty 1) Right Hand, 14.00", Bent w/Hardware 4—Lock Bracket Assembly.....(Qty 1) AluRack, w/Hardware 5—Quick Clamp Front Hook Assembly(Qty 1)

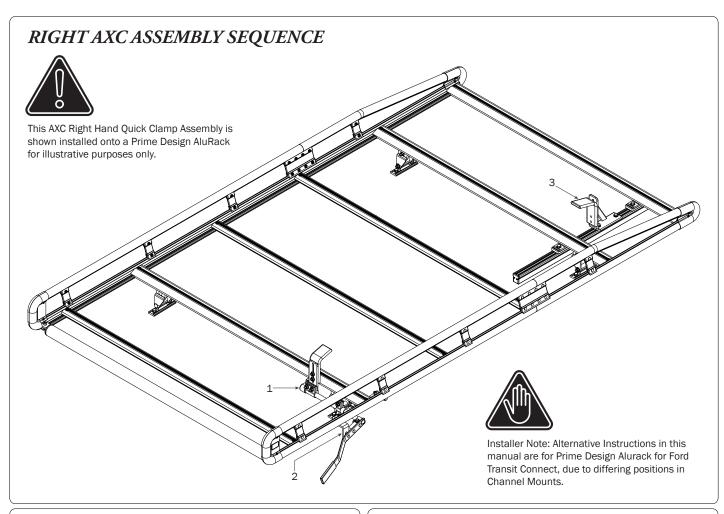


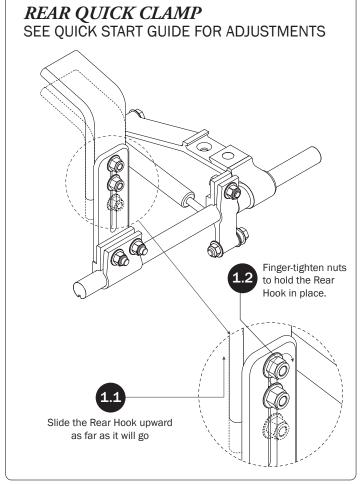

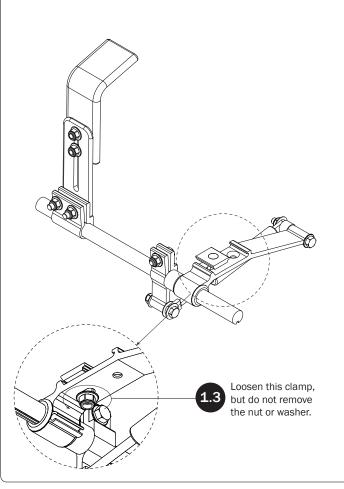


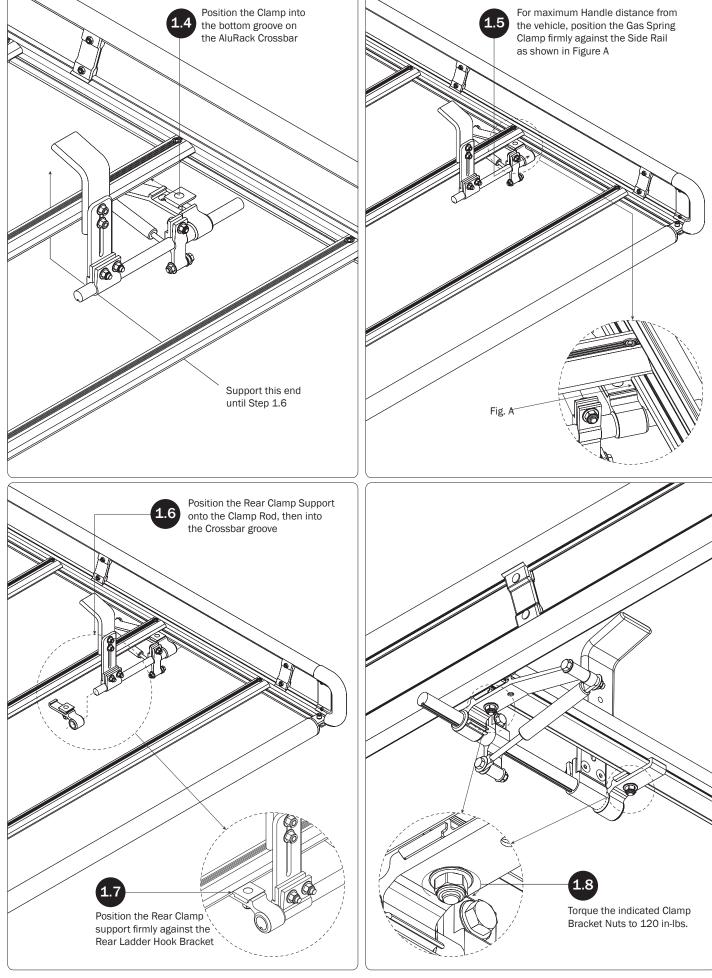



Torque the indicated Clamp Bracket Nuts to 120 in-lbs.

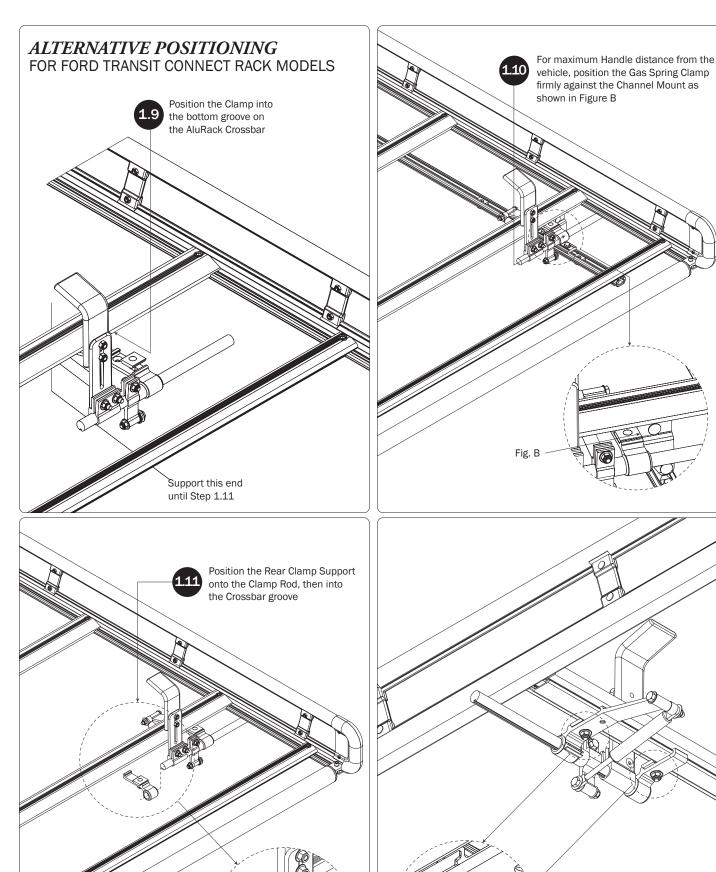



Position the Rear Clamp \ support firmly against the Rear Ladder Hook Bracket

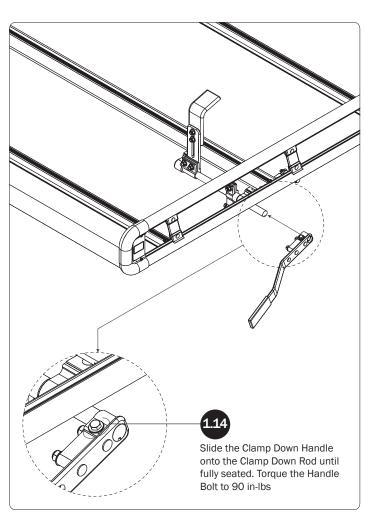


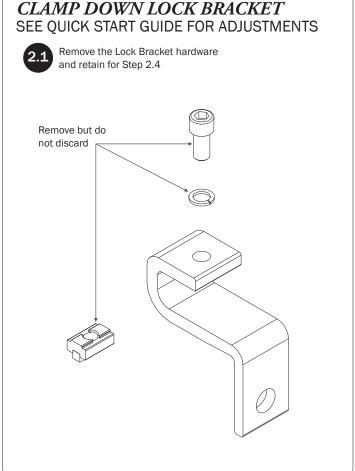

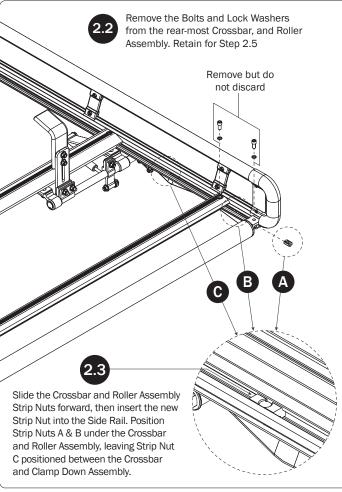

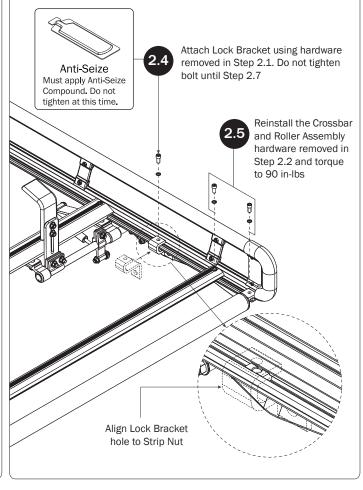


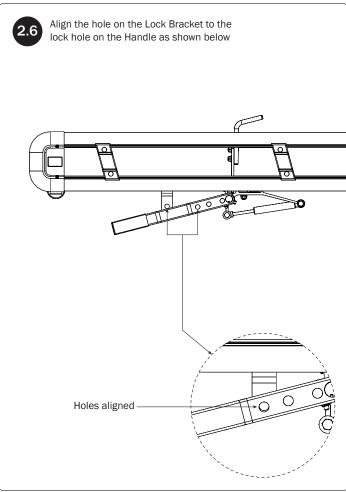


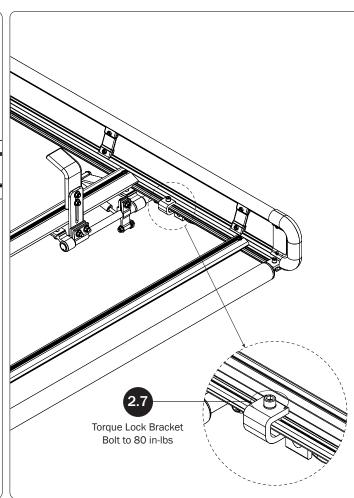

FRONT HOOK ASSEMBLY SEE QUICK START GUIDE FOR ADJUSTMENTS

3.1 Loosen, but do not remove, the indicated bolts on the Front Ladder Assembly

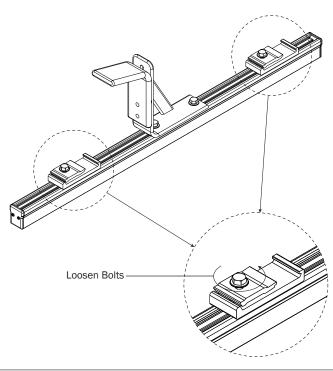

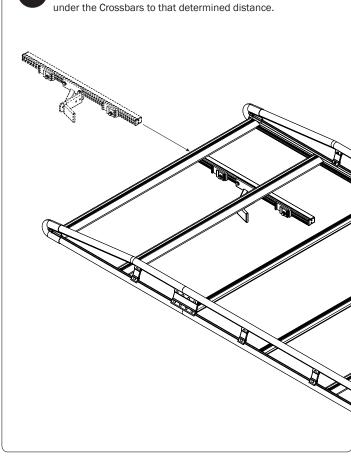

After determining Front to Rear Ladder Hook spacing

based upon ladder size, slide the Front Hook Assembly

