


PRIME DESIGN™

A Safe Fleet Brand

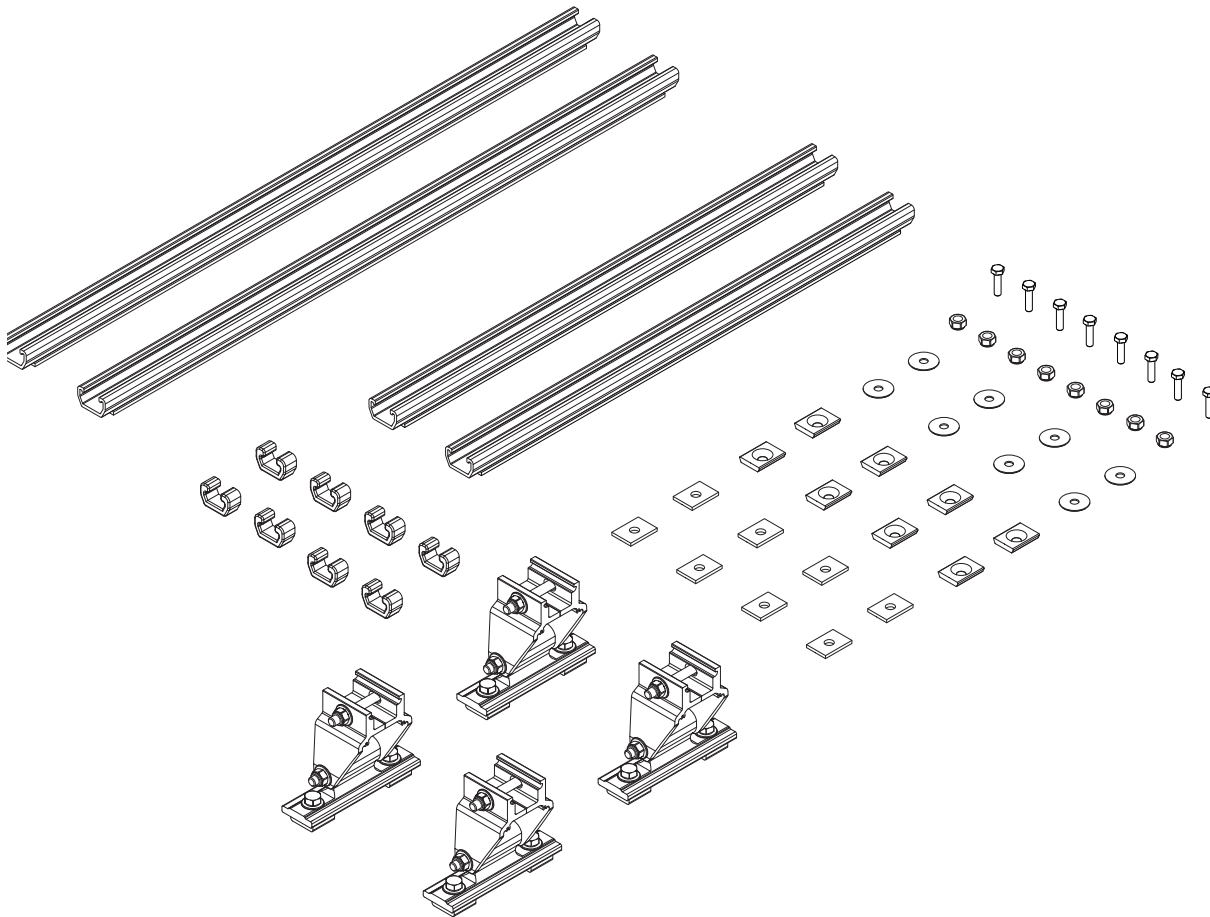

2014+ Ford Transit Connect L1/L2 Universal Base Mounting Kit

Page 2	Packaging Contents
Pages 3-7	Short Wheelbase (L1H1)
Pages 7-10	Medium Wheelbase (L2H1)


PRIME DESIGN, A SAFE FLEET BRAND

Address: 580 Opperman Drive, Eagan, MN 55123 • Toll Free: 1.8.PRIME.RACK
Fax: 651-552-1799 • Email: info@primedesign.net • Website: www.primedesign.net

FBM-1012

CONTENTS OVERVIEW

TWO CROSSBAR CONFIGURATION

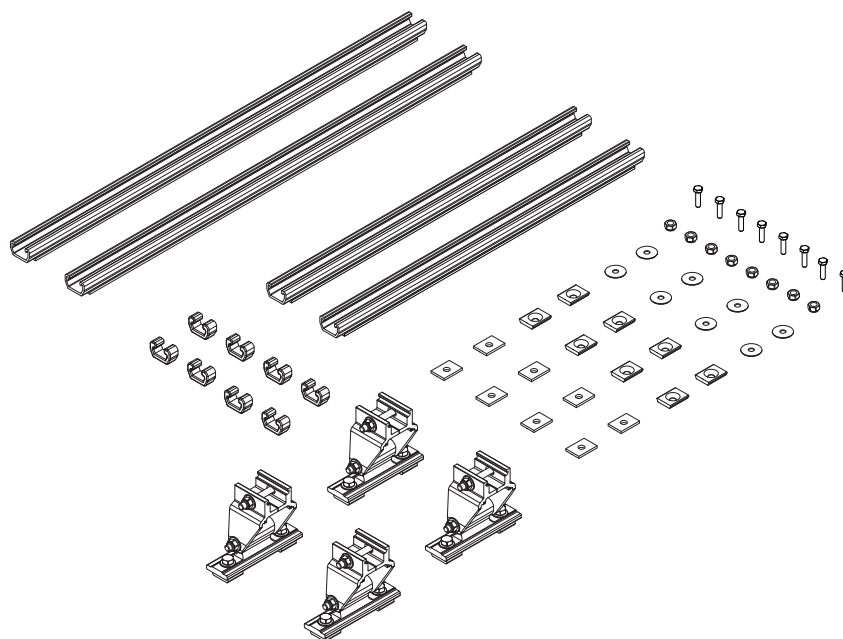

1—FBM-1012..... (Qty 1)
Channel Pairs, w/Hardware Kit

20" Channels (2X)



26" Channels (2X)



M6 Locknut (8X)




M6 x 30MM Bolt (8X)




End Caps (8X)




Brackets (4X)

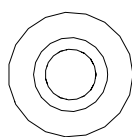


M6 Sealing Washer (8X)

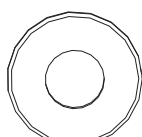


1/4" Flat Washer (8X)

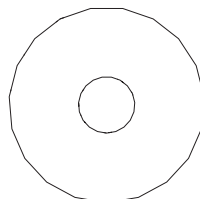

1/4" Washer (8X)

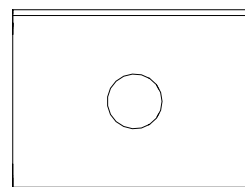


Mounting Plate (8X)

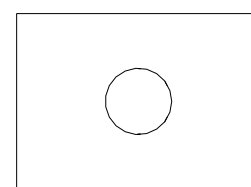


Foam Pad (8X)

2—Crossbars (shown for illustrative purposes only)
Ordered separately


ErgoRack, Gen4

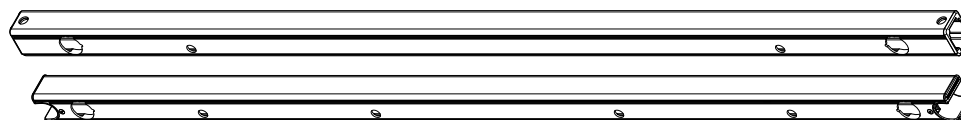

AluRack

 

L1 FBM ASSEMBLY SEQUENCE

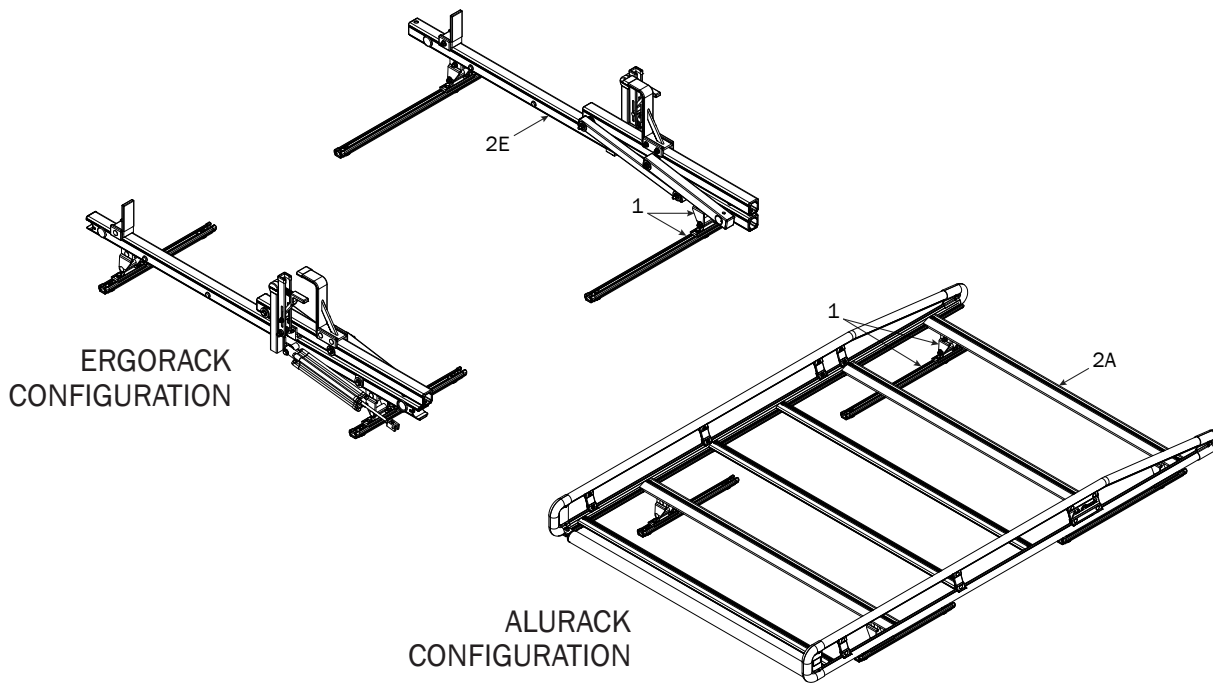


NOTE: Base, Rotation, Crossbar, and Side Rail features are shown for illustrative purposes only. These features are not included with this Base Mounting Kit, and must be purchased separately.


L1 FBM-1012 CHANNELS TO ROOF

- 1.1** Front Mounting Brackets only: remove and save the hardware from the rear Bracket Nut as shown.


Set Front Mounting Brackets aside until Steps 1.5–1.6

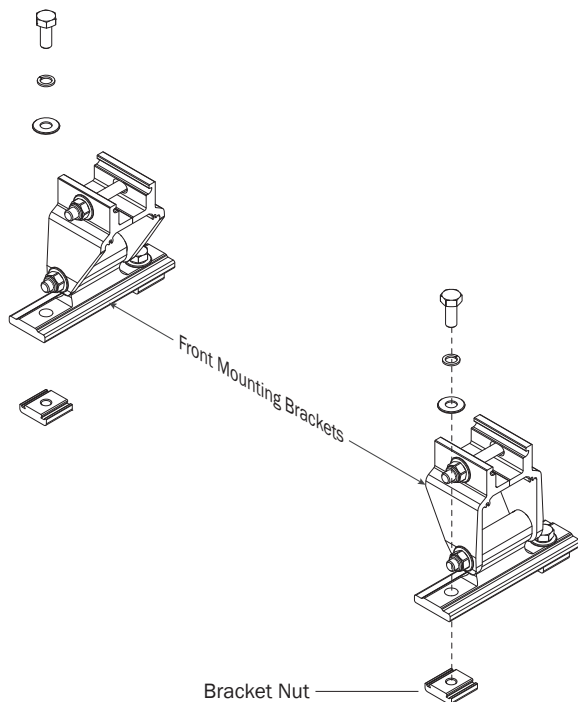


- 1.2** Slide the Bracket Nuts from Step 1.1 into the Front Channels as shown.

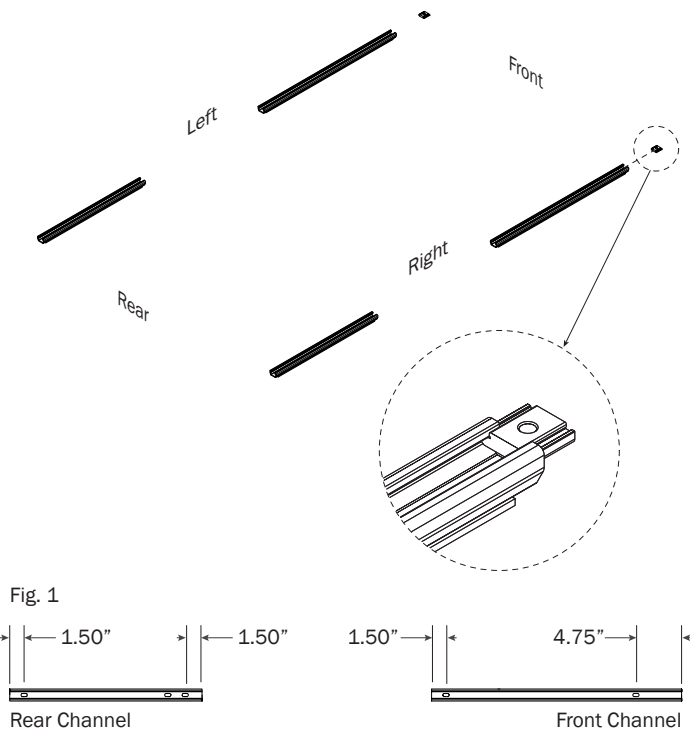


- 1.3** Install Channel Hardware as shown below.

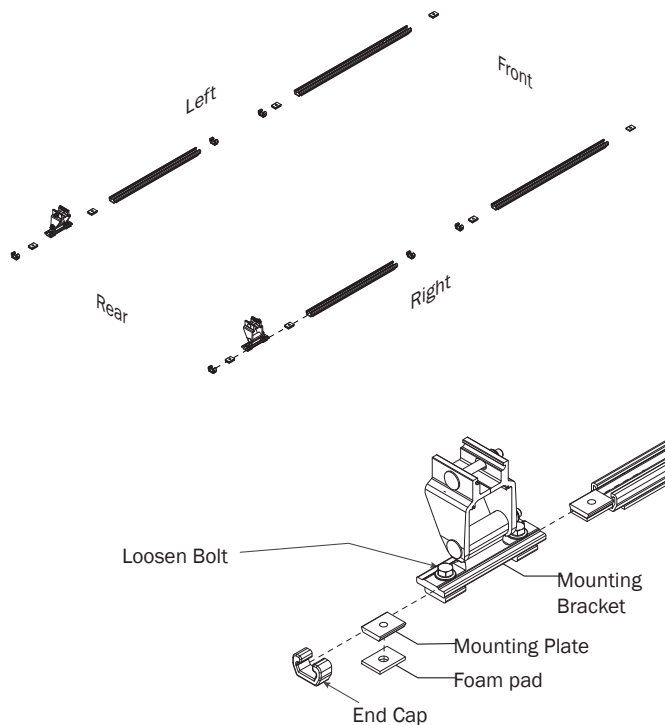


- 1.4** Install fastening hardware through the Channels as shown then torque the nuts to 60 in-lbs.

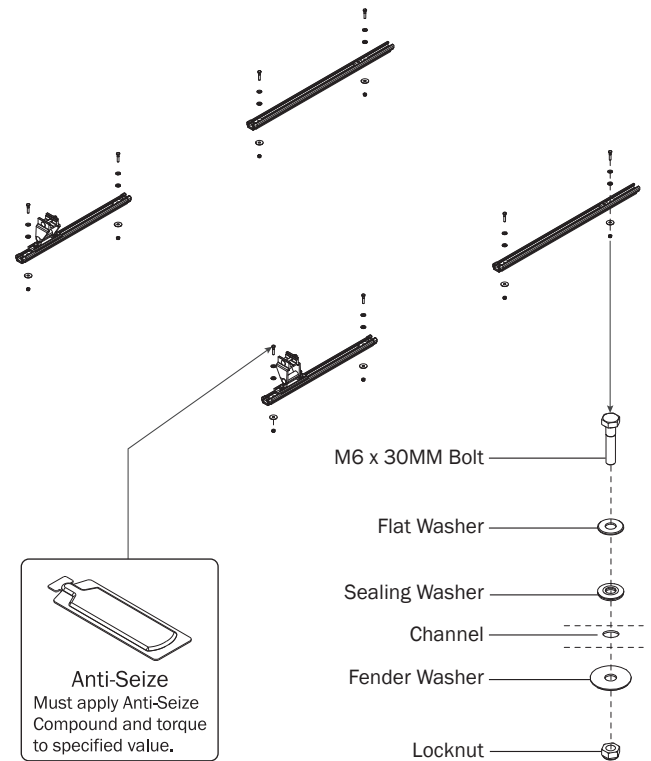


- 1.5** Install the Front Mounting Brackets from Step 1.1 as shown and slide into position over the Bracket Nut.

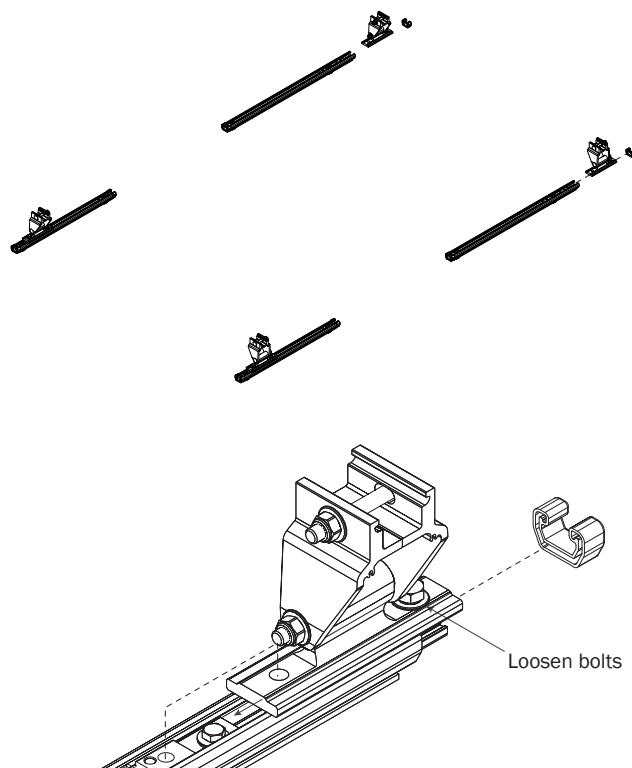

- 1.6** Reinstall the Mounting Bracket Nut hardware as shown, and set Mounting Brackets to distances shown in Fig. 2. Finger-tighten into position—do not torque until Steps 2.3–2.4.

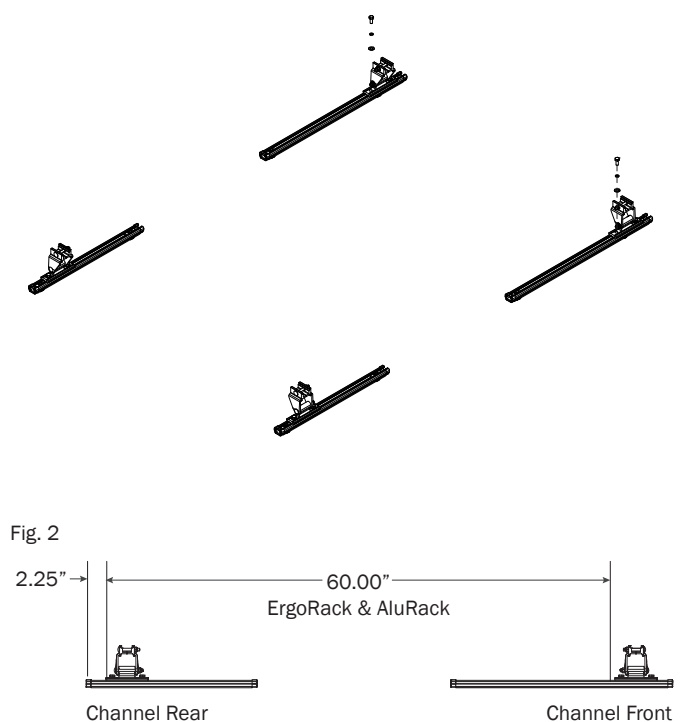

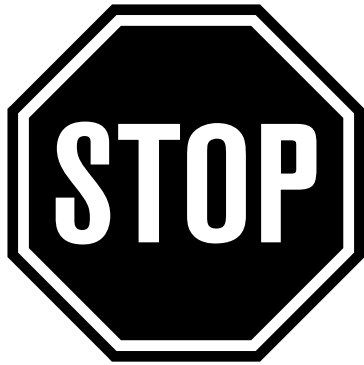

Do not mount the Crossbars to this FBM system at this time.


Refer to the respective FEA or AR Assembly Manual(s) included with your chosen rack configuration features. Depending upon the features chosen, you may need to perform a complete feature assembly onto the Crossbars or Side Rails as noted in that feature's Assembly Manual.

WARNING: Failure to position the Crossbars as shown in this FBM Assembly Manual may result in damage to the sliding door and/or ladder rack.


NOTE: Crossbars, Side Rails, Base, Clamp Down, or Rotation features are not included in this FBM kit, and must be purchased separately. To purchase applicable features and accessories, please contact your authorized distributor, or a Prime Design Sales & Service Representative.

L1 CROSSBARS (ERGORACK)

Shown with LH Base, and RH Rotation for illustrative purposes only

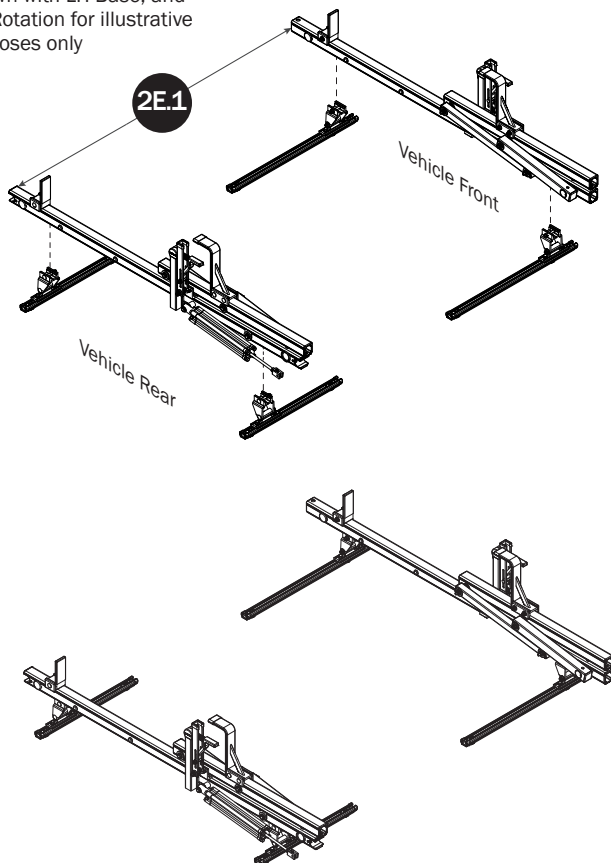


CROSSBAR ADJUSTMENT

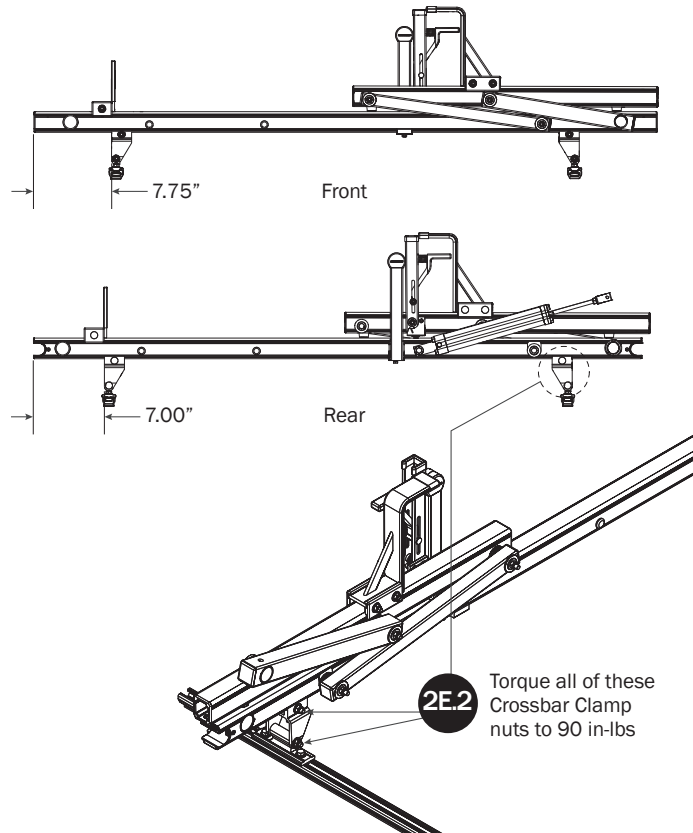

2E.3


Verify the specified distance from the ends of both Mounting Bracket to the ends of both Channels.

2.25"

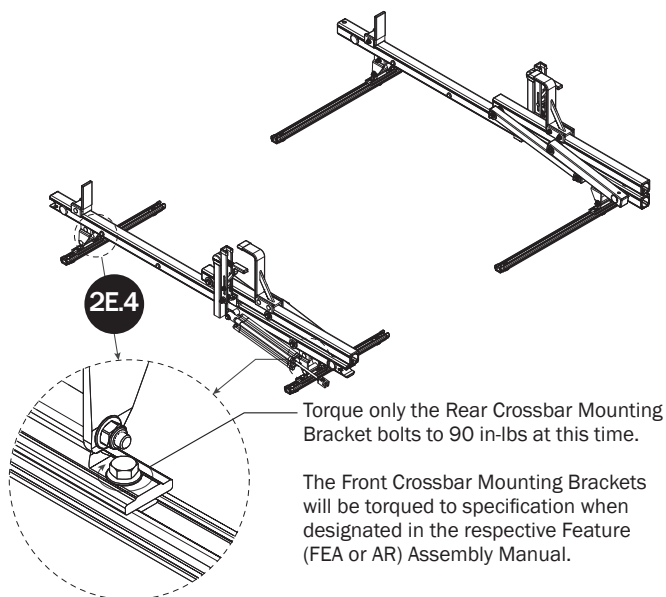


L1 CROSSBARS (ALURACK)

Shown with L1 AluRack for illustrative purposes only

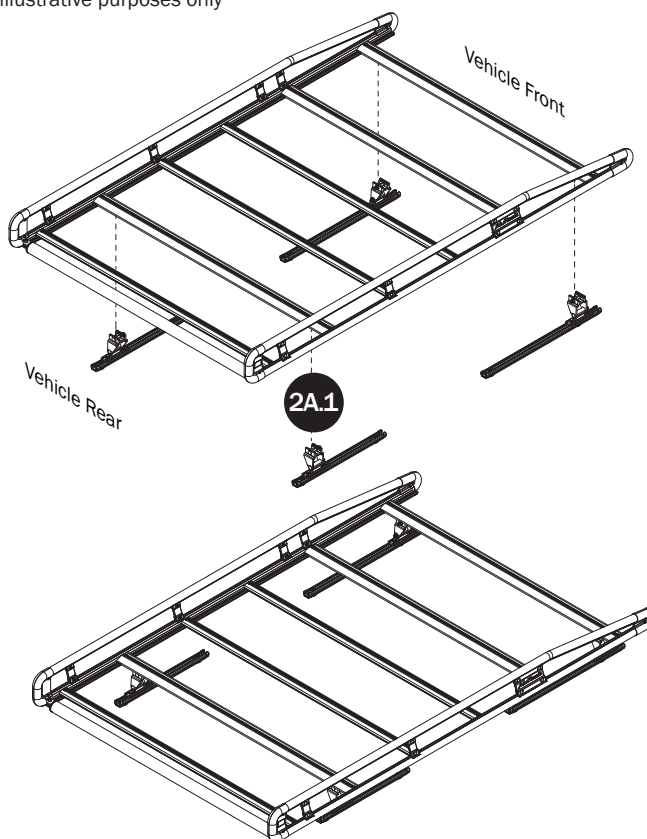


CROSSBAR ADJUSTMENT

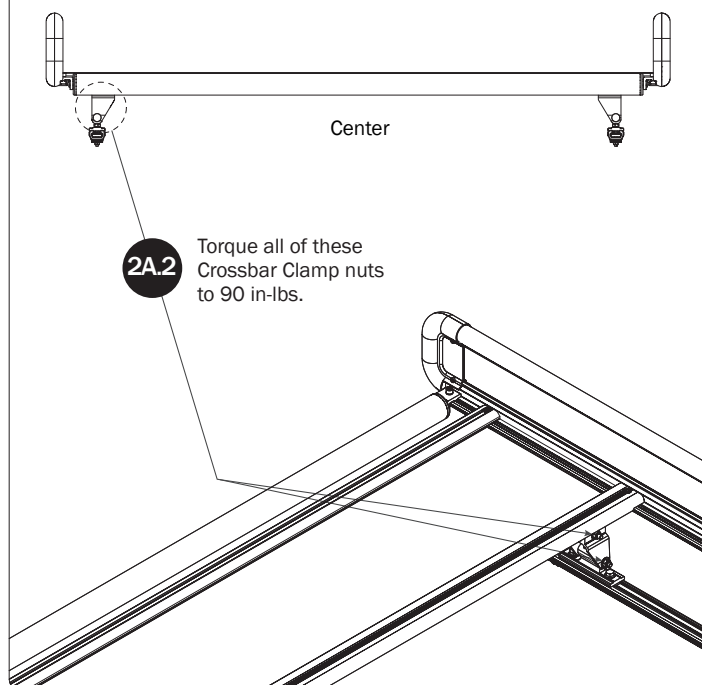


2A.3

Verify the specified distance from the ends of both Mounting Bracket to the ends of both Channels.

2.25"

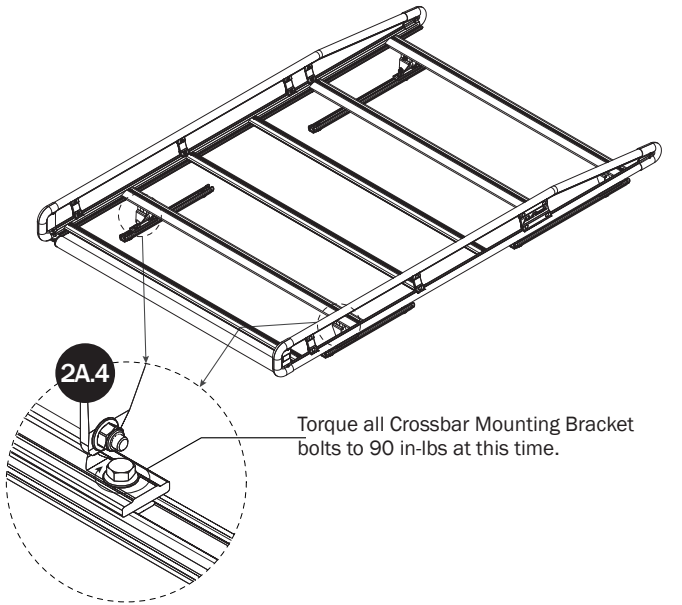
**2A.4**

Torque all Crossbar Mounting Bracket bolts to 90 in-lbs at this time.

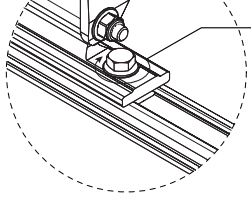


L2 FBM ASSEMBLY SEQUENCE

ERGORACK
CONFIGURATION

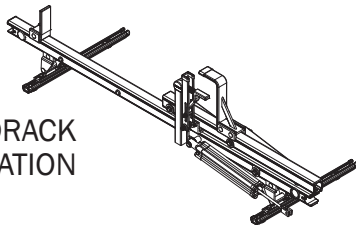


2E

1

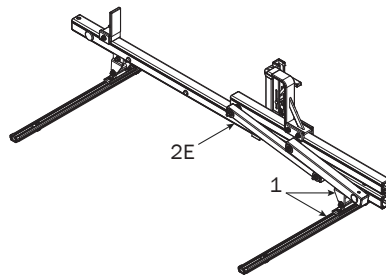


ALURACK
CONFIGURATION

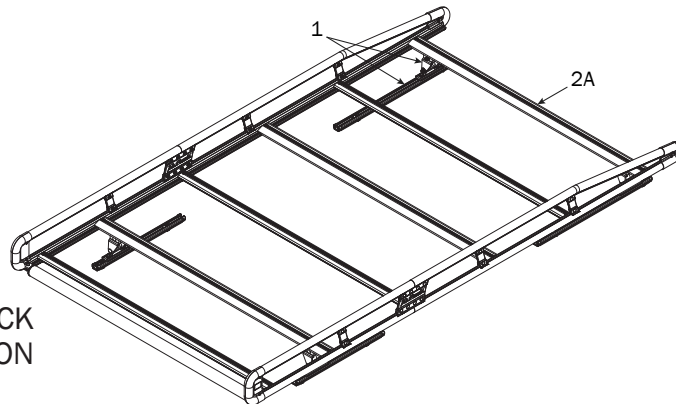


NOTE: Rotation, Crossbar, and Side Rail features are shown for illustrative purposes only. These features are not included with this Base Mounting Kit, and must be purchased separately.

L2 FBM-1012


- 1.1** Install Channel Hardware as shown below.

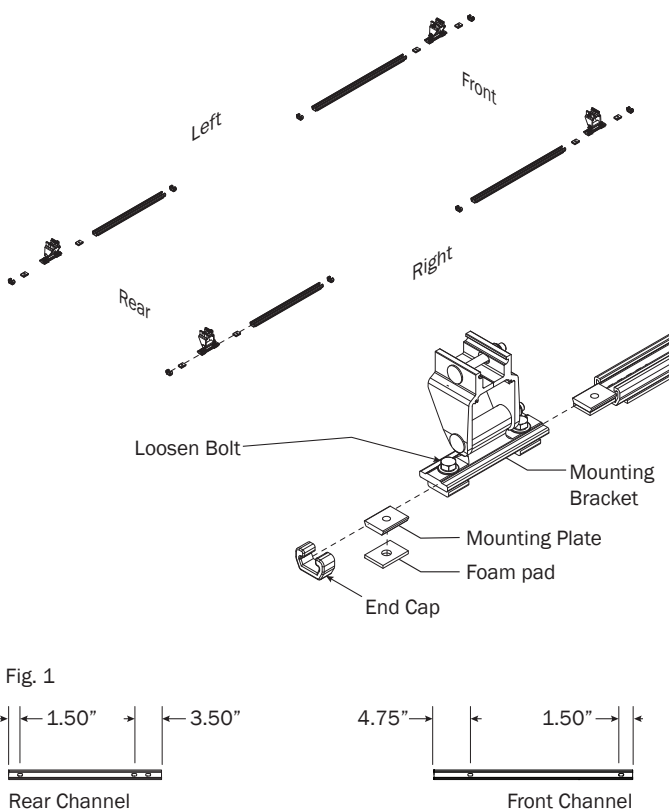

- 1.3** Set Mounting Brackets to distances shown in Fig. 2. Finger-tighten into position—do not torque until Steps 2.3–2.4.

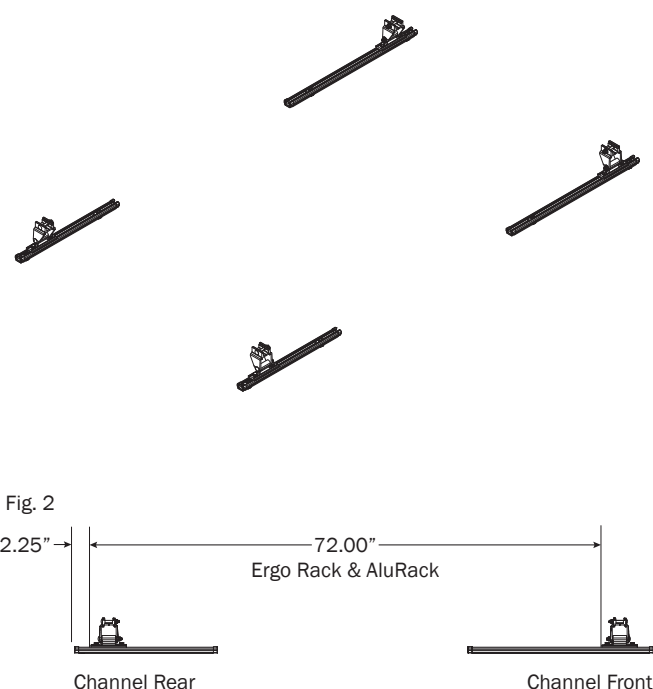

- 1.2** Install fastening hardware through the Channels as shown then torque the nuts to 60 in-lbs.

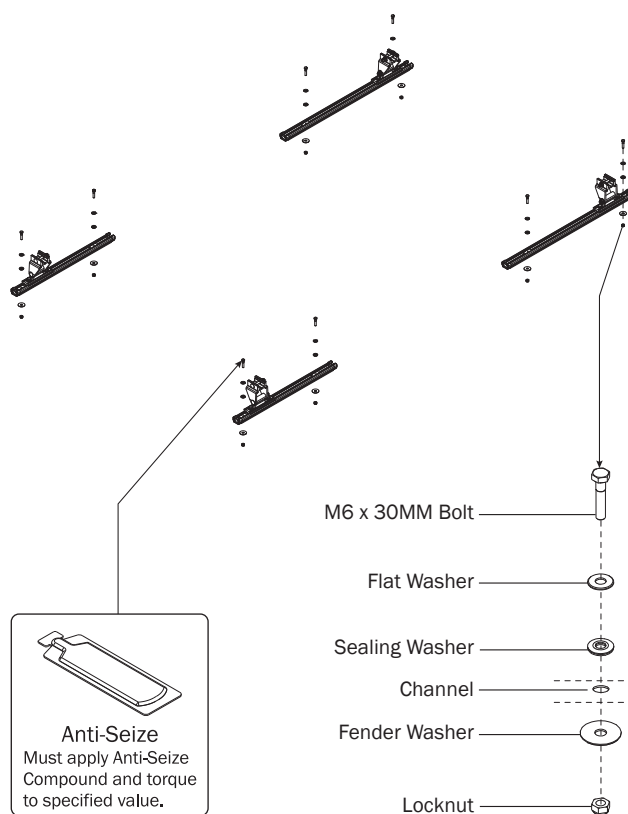

Do not mount the Crossbars to this FBM system at this time.


Refer to the respective FEA or AR Assembly Manual(s) included with your chosen rack configuration features. Depending upon the features chosen, you may need to perform a complete feature assembly onto the Crossbars or Side Rails as noted in that feature's Assembly Manual.

WARNING: Failure to position the Crossbars as shown in this FBM Assembly Manual may result in damage to the sliding door and/or ladder rack.


NOTE: Crossbars, Side Rails, Base, Clamp Down, or Rotation features are not included in this FBM kit, and must be purchased separately. To purchase applicable features and accessories, please contact your authorized distributor, or a Prime Design Sales & Service Representative.

L2 CROSSBARS (ERGORACK)

Shown with LH Base, and
RH Rotation for illustrative
purposes only

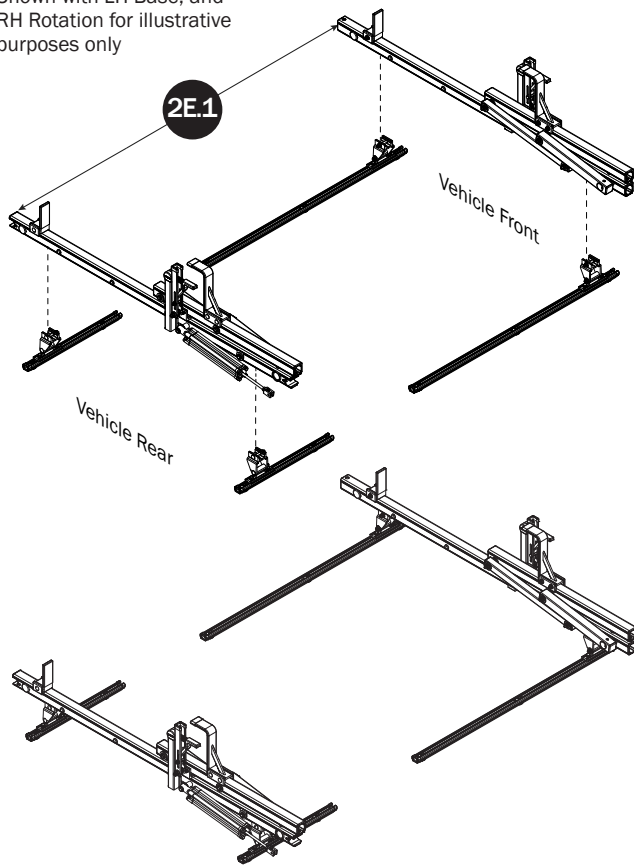


CROSSBAR ADJUSTMENT

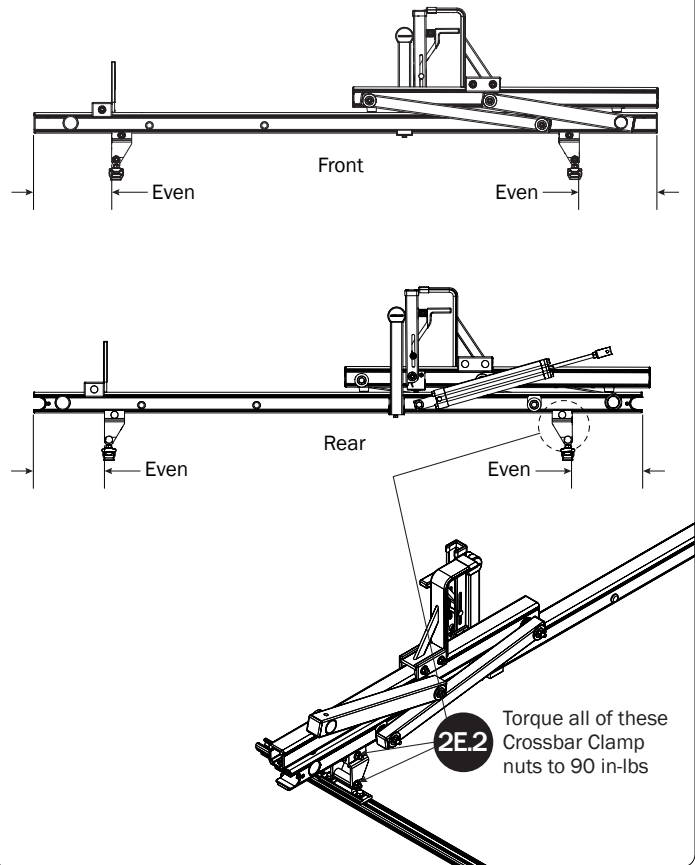

2E.3



Verify the specified
distance from the
ends of both Mounting
Bracket to the ends of
both Channels.

2.25"

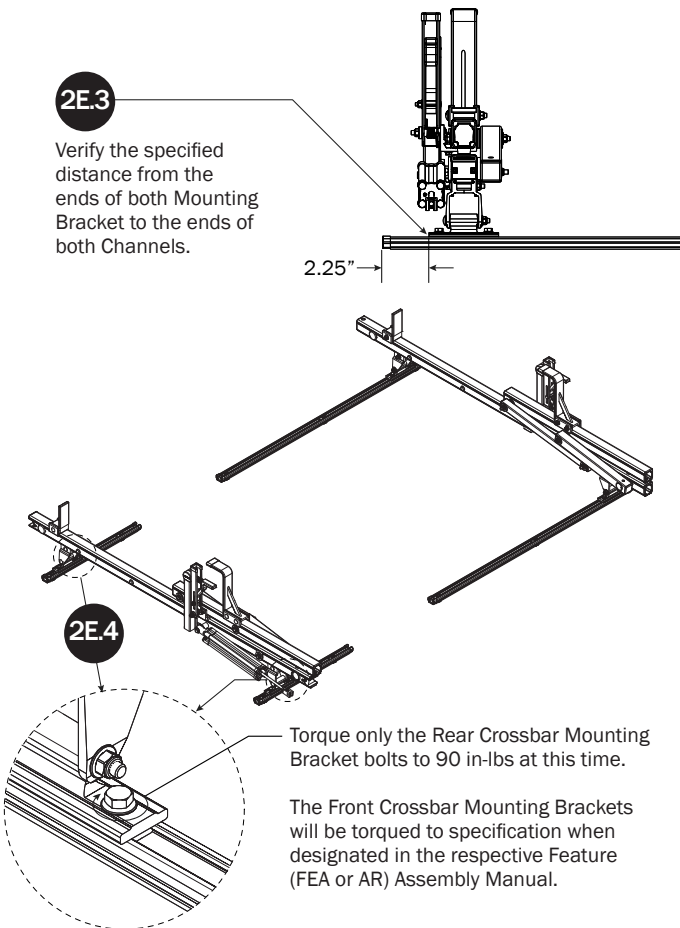


L2 CROSSBARS (ALURACK)

Shown with L2 AluRack for illustrative purposes only

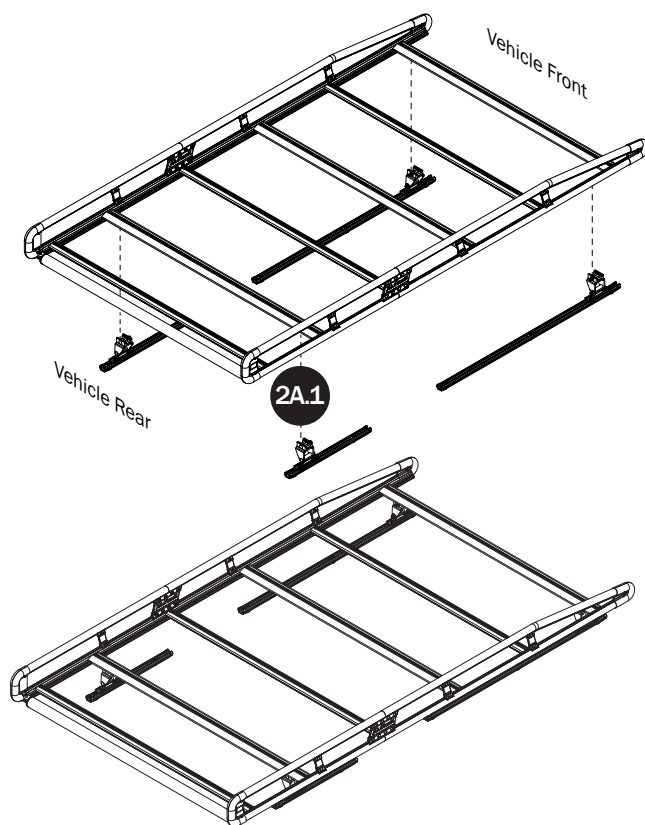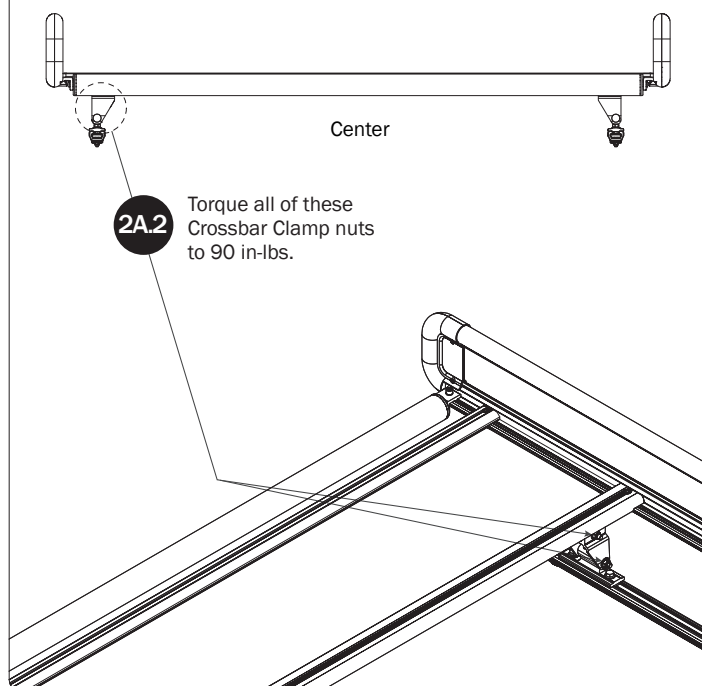**CROSSBAR ADJUSTMENT****2A.3**

Verify the specified distance from the ends of both Mounting Bracket to the ends of both Channels.

2.25"

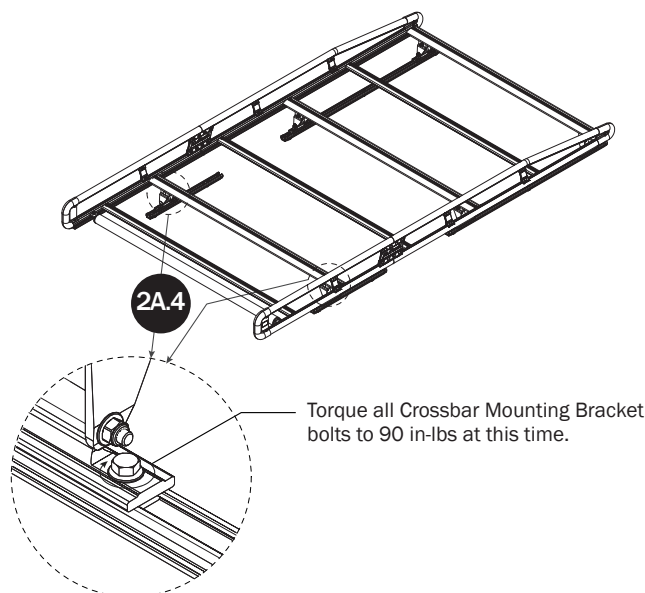

Torque all Crossbar Mounting Bracket bolts to 90 in-lbs at this time.

Page Intentionally Left Blank

