# PRIME DESIGN


A Safe Fleet Brand




2014+ Ram ProMaster Low/High Roof Base Mounting K	۲it
---	-----

	, , , , , , , , , , , , , , , , , , , ,
Page 2	Packaging Contents
Pages 3-7	L1H1 (118" Wheelbase)
Pages 8-12	L2H1 (136" Wheelbase)
Pages 13-16	L2H2 (Med Roof/136" Wheelbase)
Pages 17-21	L4H2 (159" Wheelbase)
Pages 22-26	L5H2 (159+" Wheelbase, Ext.)

PRIME DESIGN, A SAFE FLEET BRAND • Address: 1689 Oakdale Avenue #102, West St Paul, Minnesota 55118 Toll Free: 1.8.PRIME.RACK • Fax: 651-552-1799 • Email: info@primedesign.net • Website: www.primedesign.net

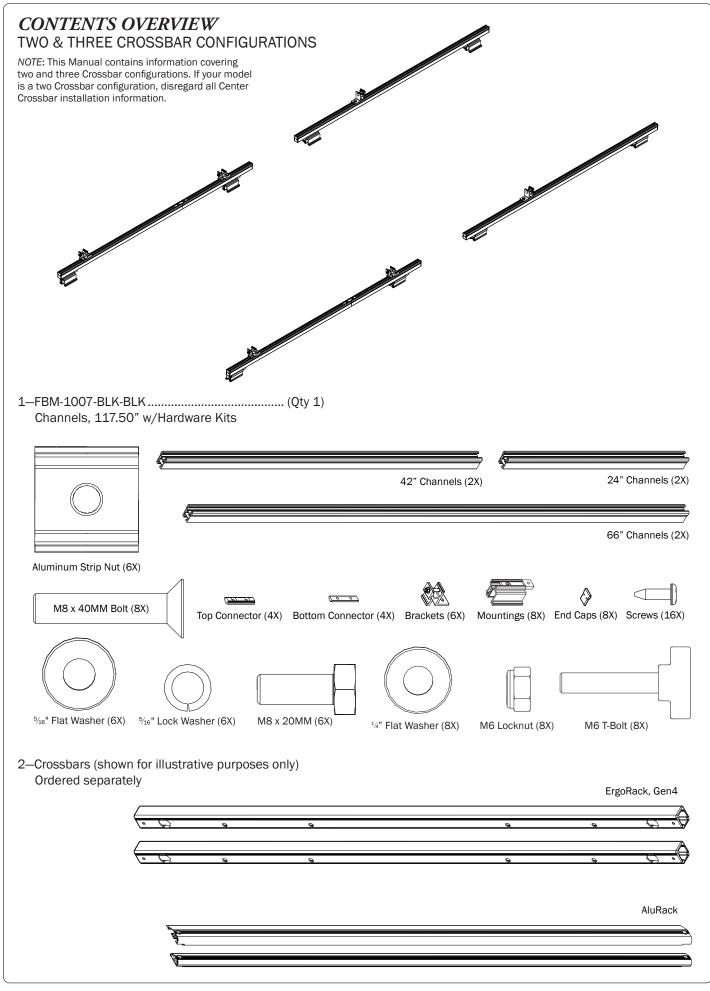


#### L1H1 (118.00") FBM ASSEMBLY SEQUENCE

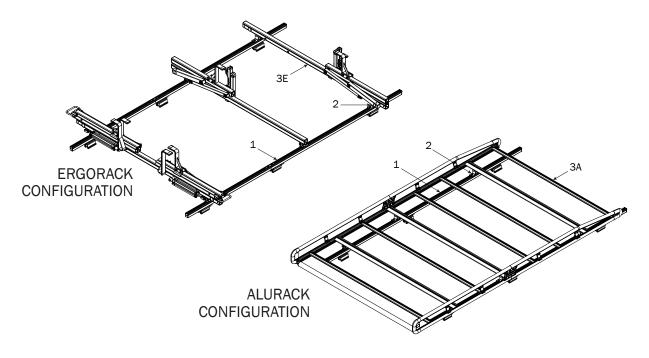






NOTE: Base, Rotation, Crossbar, and Side Rail features are shown for illustrative purposes only. These features are not included with this Base Mounting Kit, and must be purchased separately.


## CHANNEL MOUNTINGS

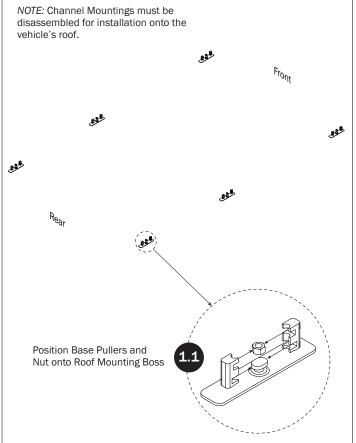

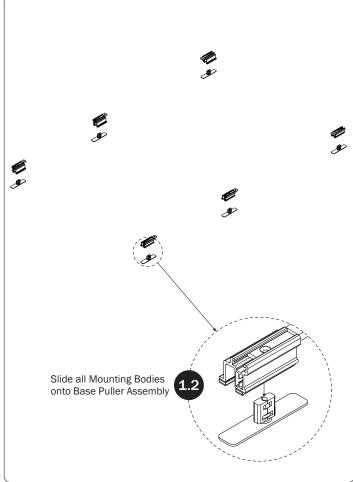


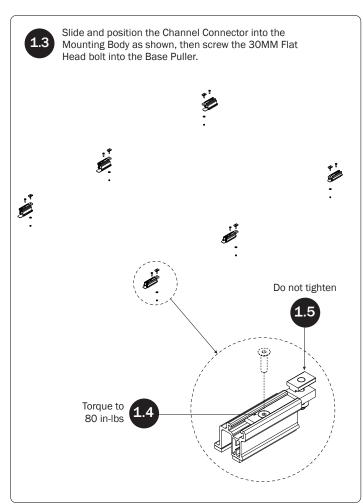


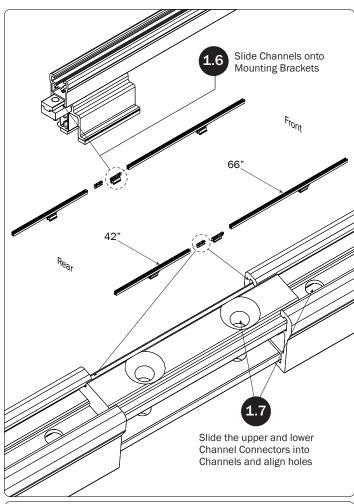

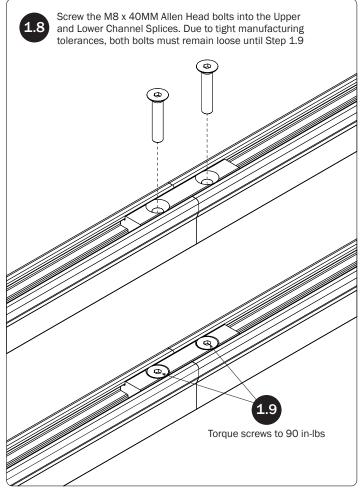



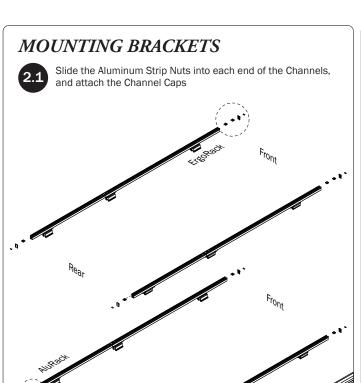

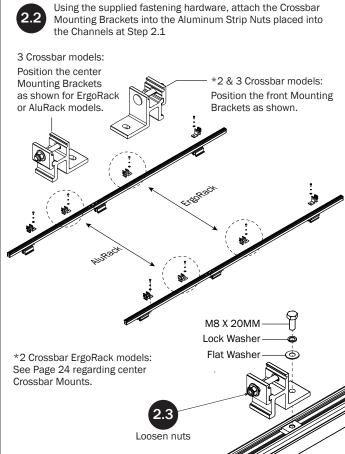

Set to distances shown below:
Use Dimensions A for 2 Crossbar models.
Use Dimensions B for 3 Crossbar models.

Do not torque the Crossbar Mounting Brackets until Step 3.4.
Finger-tighten them into designated dimension to hold them in place, then proceed to your Feature (FEA) Assembly Manual.

11.375"

(A) 96.00" ErgoRack
72.50" AluRack

(B) 48.00" ErgoRack

29.00" AluRack

Crossbar Rear



Do not mount the Crossbars to this FBM system at this time.

Refer to the respective FEA or AR Assembly Manual(s) included with your chosen rack configuration features. Depending upon the features chosen, you may need to perform a complete feature assembly onto the Crossbars or Side Rails as noted in that feature's Assembly Manual.


WARNING: Failure to position the Crossbars as shown in this FBM Assembly Manual may result in damage to the sliding door and/or ladder rack.


NOTE: Crossbars, Side Rails, Base, Clamp Down, or Rotation features are not included in this FBM kit, and must be purchased separately. To purchase applicable features and accessories, please contact your authorized distributor, or a Prime Design Sales & Service Representative.


(B) 48.00" ErgoRack


43.50" AluRack


Crossbar Front

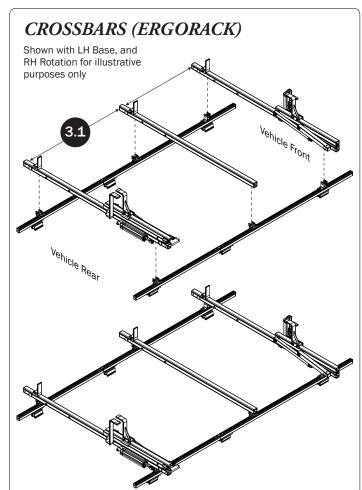


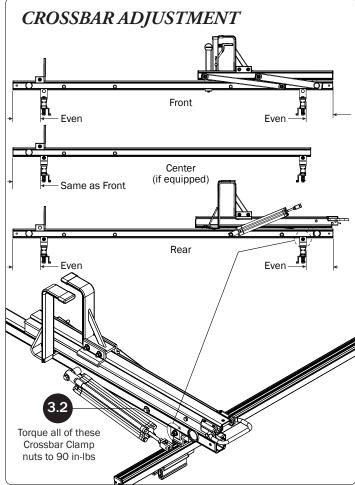


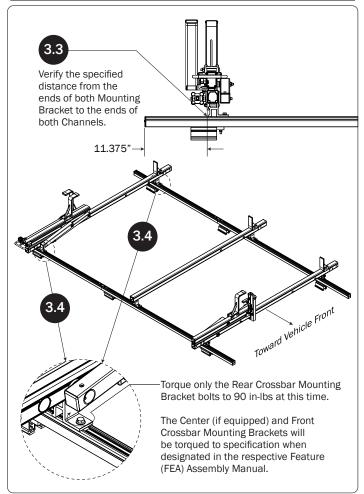


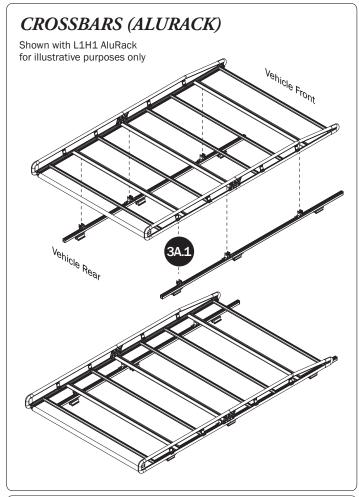


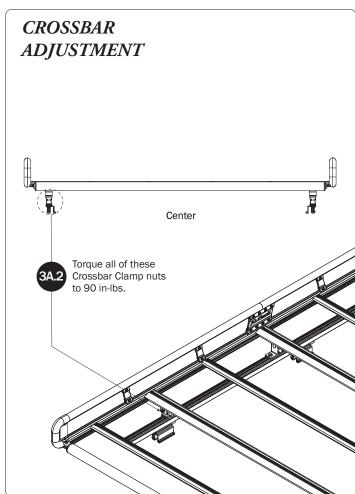


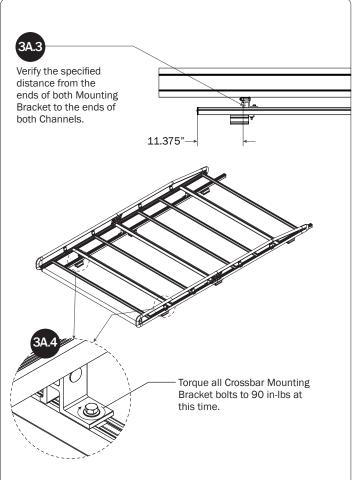


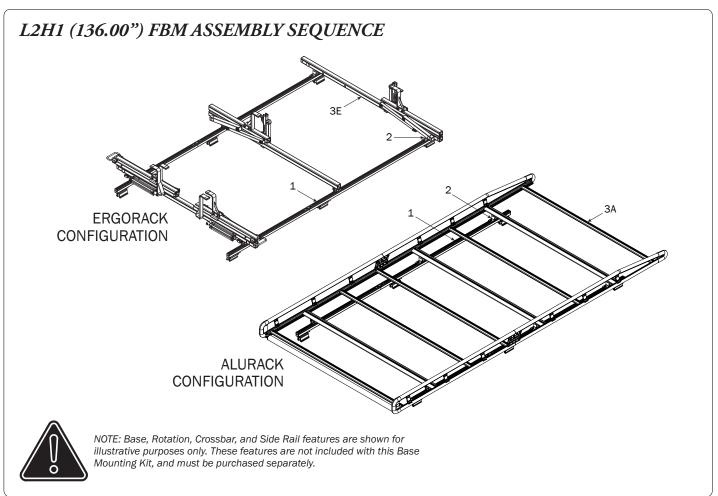


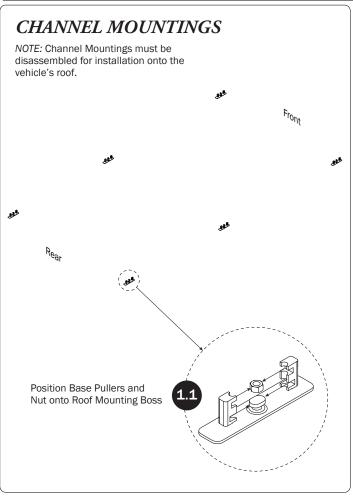


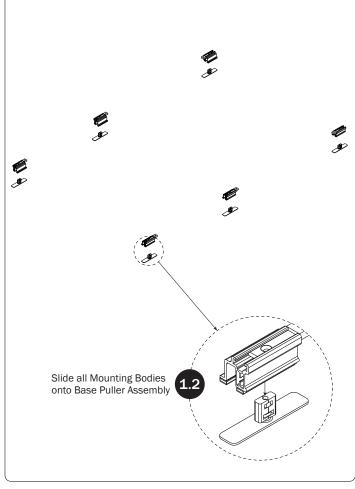

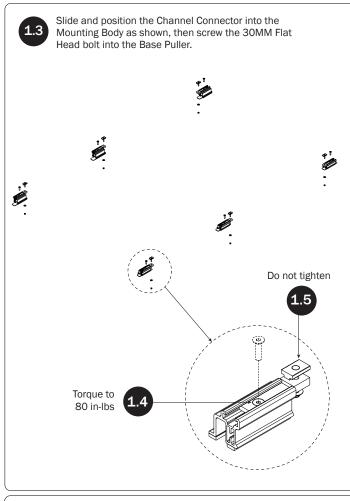


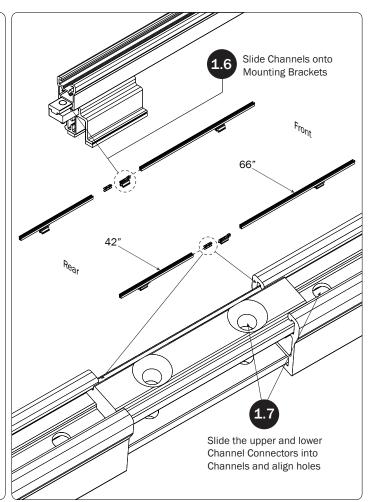


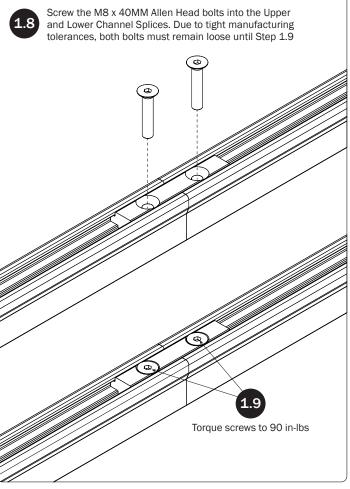

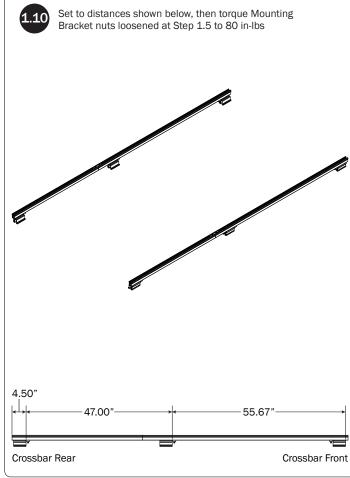



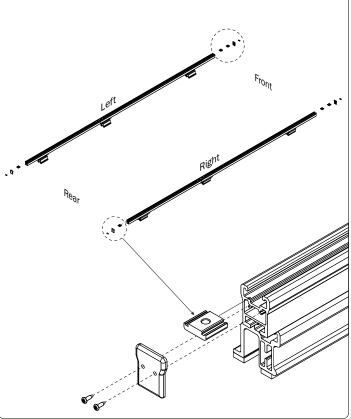

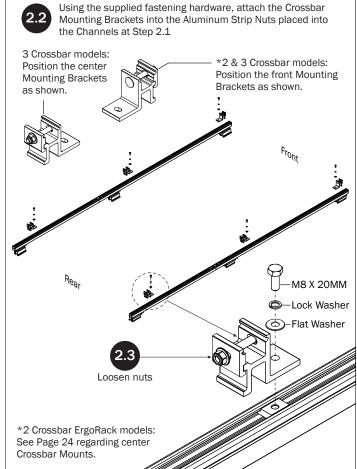

Use Dimensions A for 2 Crossbar models.
Use Dimensions B for 3 Crossbar models.

Do not torque the Crossbar Mounting Brackets until Step 3.4. Finger-tighten them into designated dimension to hold them in place, then proceed to your Feature (FEA) Assembly Manual.

9.125"

(A) 96.00" ErgoRack
92.50" AluRack

(B) 48.00" ErgoRack
55.50 AluRack

(B) 48.00" ErgoRack
37.00" AluRack

(Crossbar Front

Set to distances shown below:





Do not mount the Crossbars to this FBM system at this time.


Refer to the respective FEA or AR Assembly Manual(s) included with your chosen rack configuration features. Depending upon the features chosen, you may need to perform a complete feature assembly onto the Crossbars or Side Rails as noted in that feature's Assembly Manual.


WARNING: Failure to position the Crossbars as shown in this FBM Assembly Manual may result in damage to the sliding door and/or ladder rack.


NOTE: Crossbars, Side Rails, Base, Clamp Down, or Rotation features are not included in this FBM kit, and must be purchased separately. To purchase applicable features and accessories, please contact your authorized distributor, or a Prime Design Sales & Service Representative.

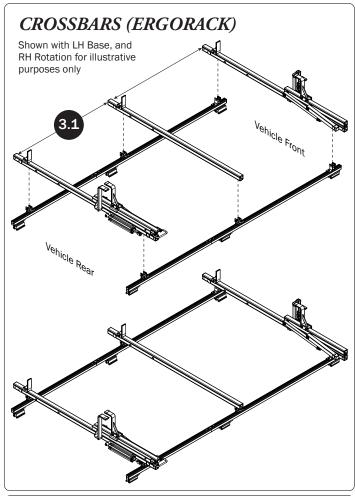


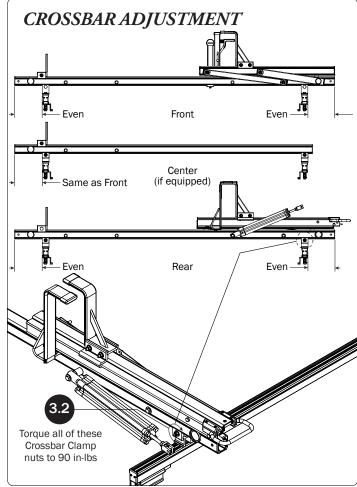

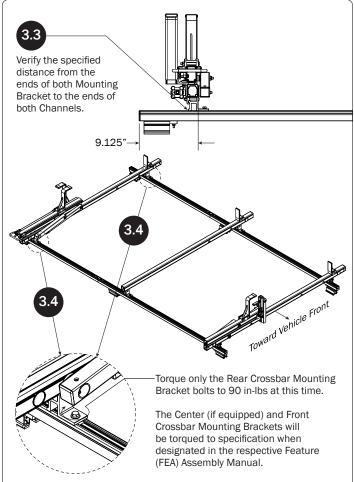


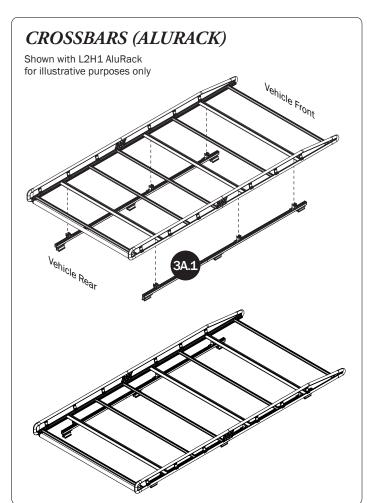

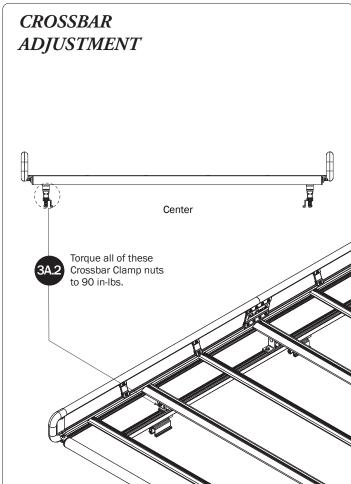

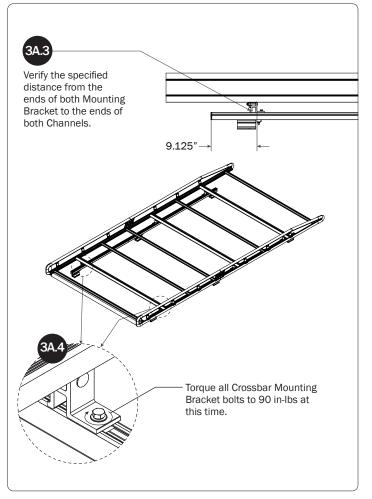

# L2H2 (136.00") FBM ASSEMBLY SEQUENCE-ALURACK ONLY

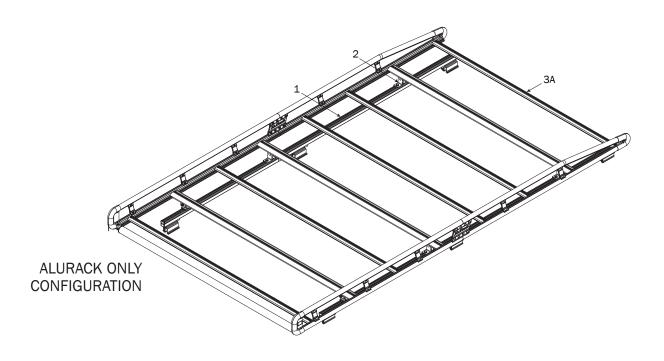






NOTE: Base, Rotation, Crossbar, and Side Rail features are shown for illustrative purposes only. These features are not included with this Base Mounting Kit, and must be purchased separately.


# **CHANNEL MOUNTINGS**


NOTE: Channel Mountings must be

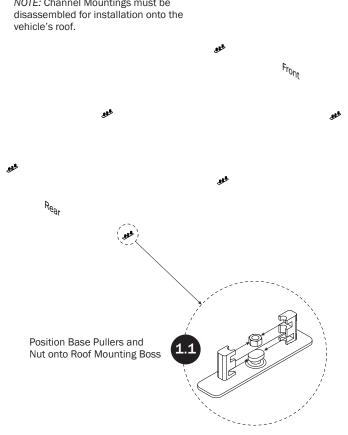


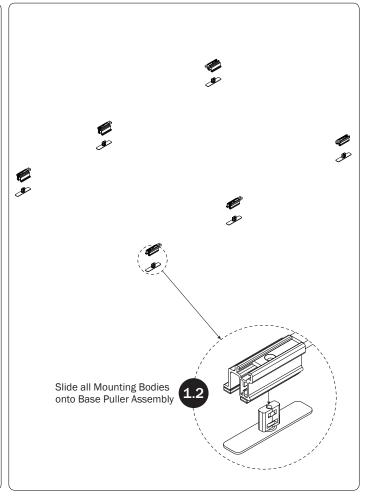

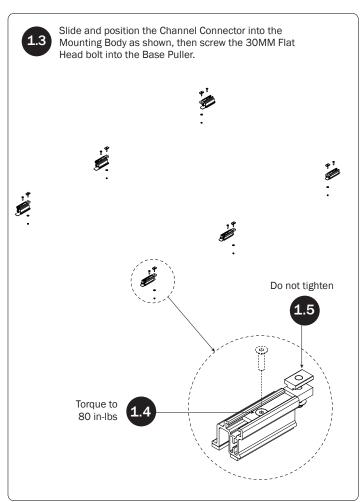

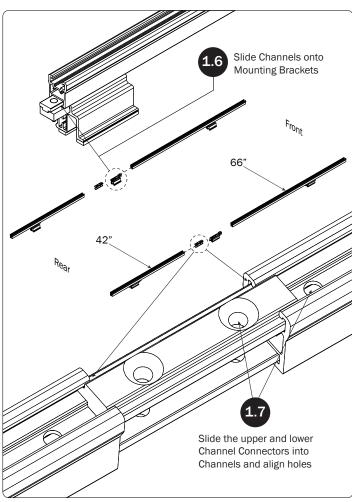

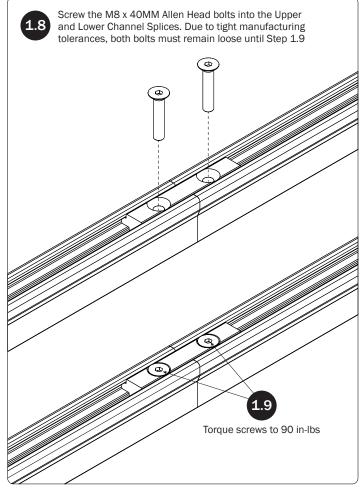


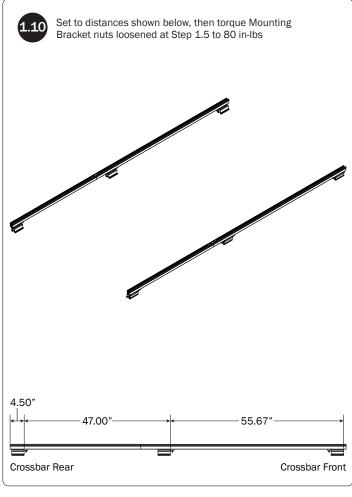


#### **MOUNTING BRACKETS**

2.1

Slide the Aluminum Strip Nuts into each end of the Channels, and attach the Channel Caps

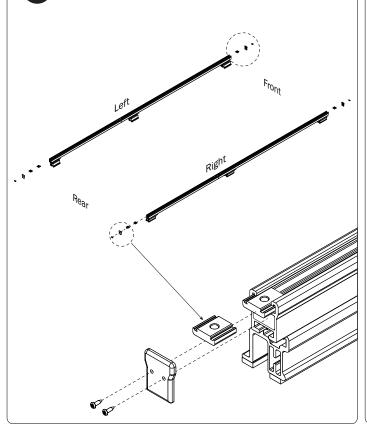


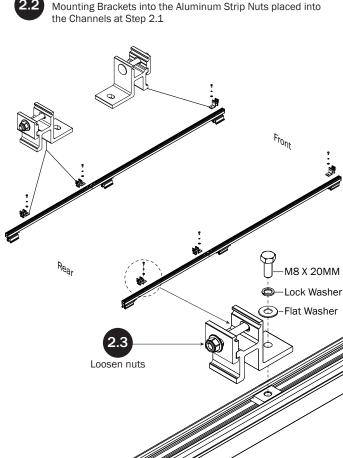

Using the supplied fastening hardware, attach the Crossbar

2.4

Set to distances shown below (AluRack only). Do not torque the Crossbar Mounting Brackets until Step 3.4. Finger-tighten them into designated dimension to hold them in place, then proceed to your Feature (FEA) Assembly Manual.

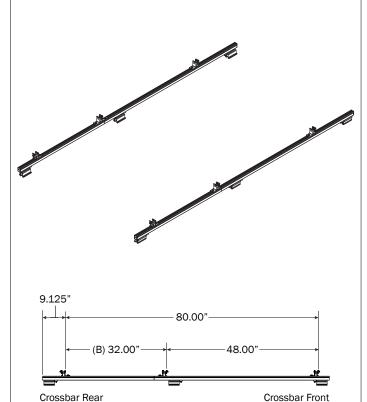





Do not mount the Crossbars to this FBM system at this time.


Refer to the respective FEA or AR Assembly Manual(s) included with your chosen rack configuration features. Depending upon the features chosen, you may need to perform a complete feature assembly onto the Crossbars or Side Rails as noted in that feature's Assembly Manual.

WARNING: Failure to position the Crossbars as shown in this FBM Assembly Manual may result in damage to the sliding door and/or ladder rack.


NOTE: Crossbars, Side Rails, Base, Clamp Down, or Rotation features are not included in this FBM kit, and must be purchased separately. To purchase applicable features and accessories, please contact your authorized distributor, or a Prime Design Sales & Service Representative.

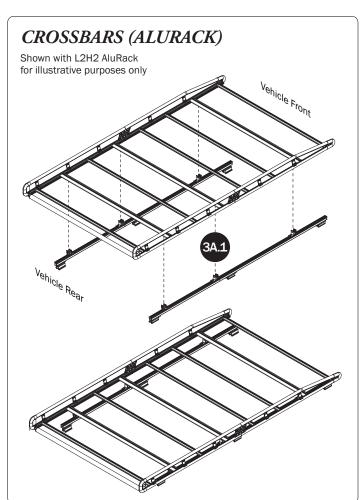

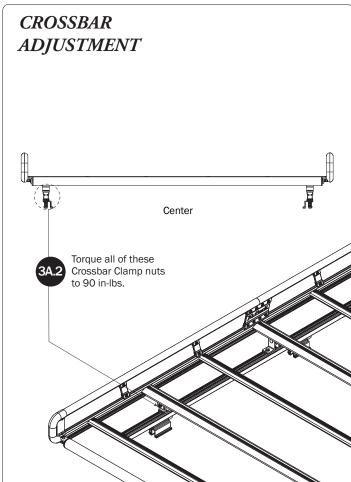

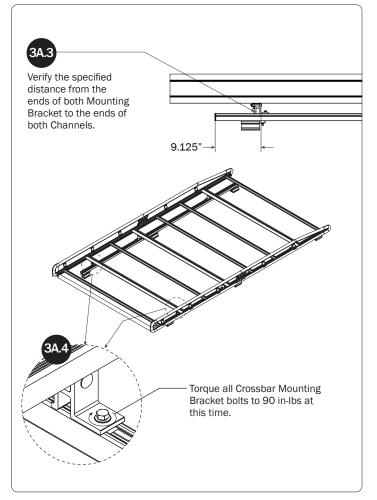

#### L4H2 (159.00") FBM ASSEMBLY SEQUENCE

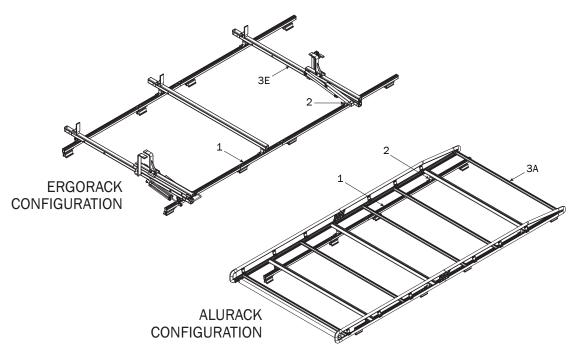






NOTE: Base, Rotation, Crossbar, and Side Rail features are shown for illustrative purposes only. These features are not included with this Base Mounting Kit, and must be purchased separately.


## **CHANNEL MOUNTINGS**


NOTE: Channel Mountings must be

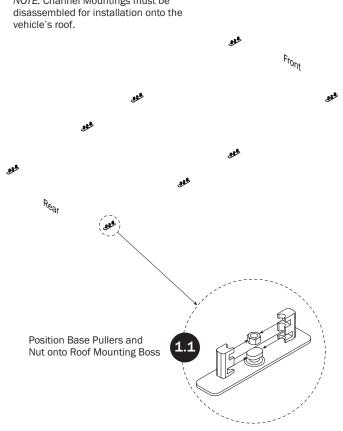


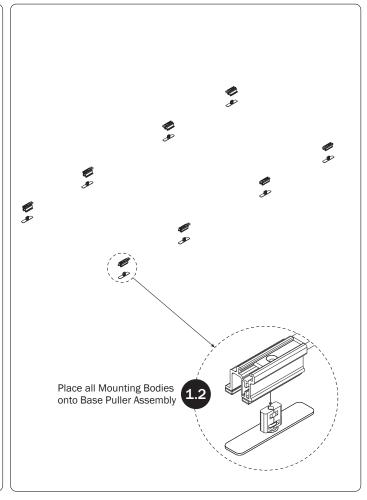

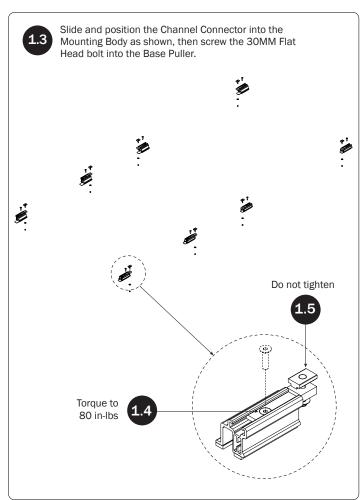


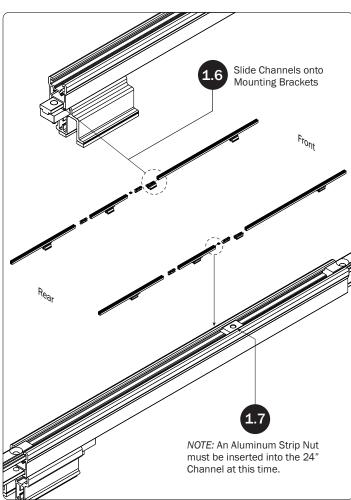


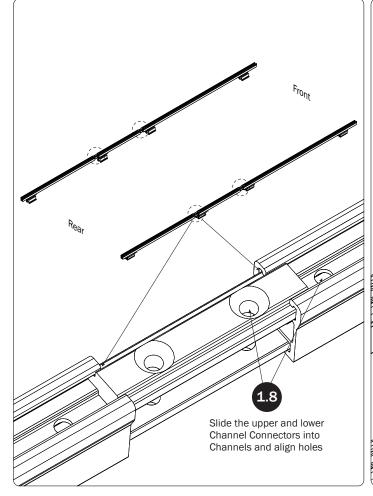


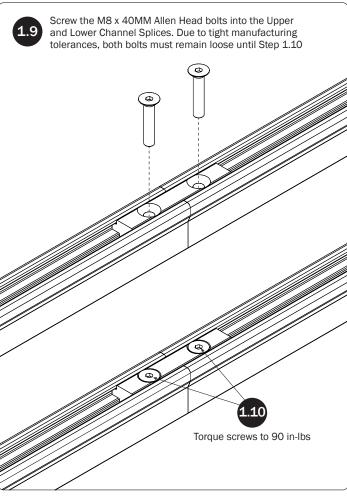



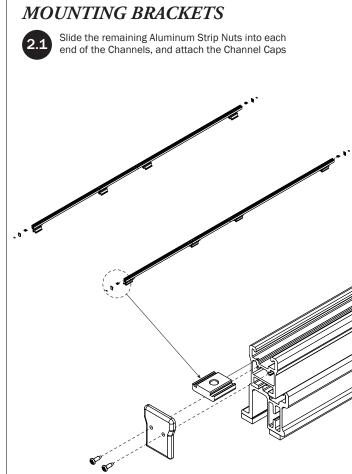

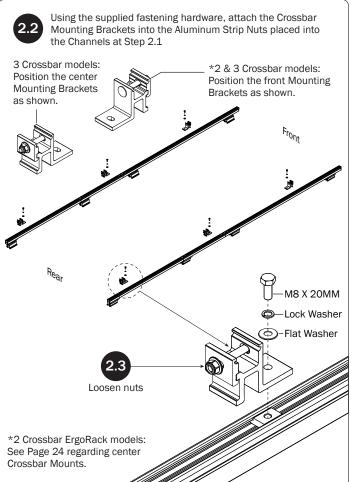

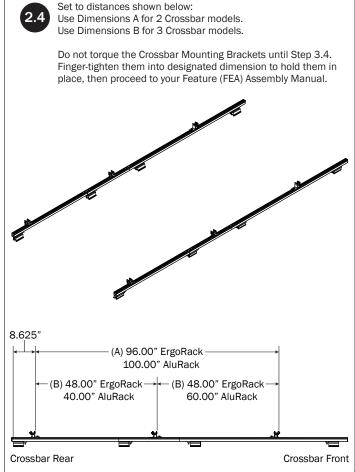





Do not mount the Crossbars to this FBM system at this time.


Refer to the respective FEA Assembly Manual(s) included with your chosen rack configuration features. Depending upon the features chosen, you may need to perform a complete feature assembly onto the Crossbars as noted in that feature's Assembly Manual.


WARNING: Failure to position the Crossbars as shown in this FBM Assembly Manual may result in damage to the sliding door and/or ladder rack.


NOTE: Base, Clamp Down, or Rotation features are not included in this FBM kit, and must be purchased separately. To purchase applicable features and accessories, please contact your authorized distributor, or a Prime Design Sales & Service Representative.

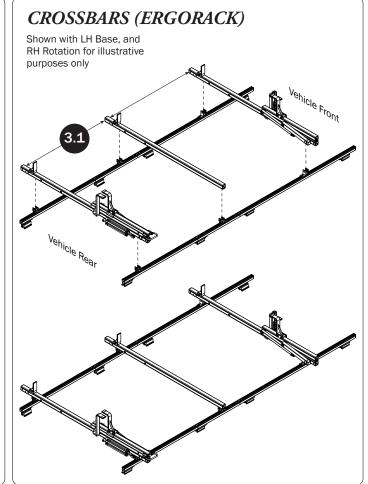


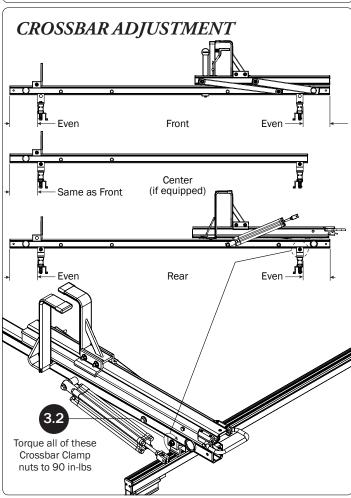

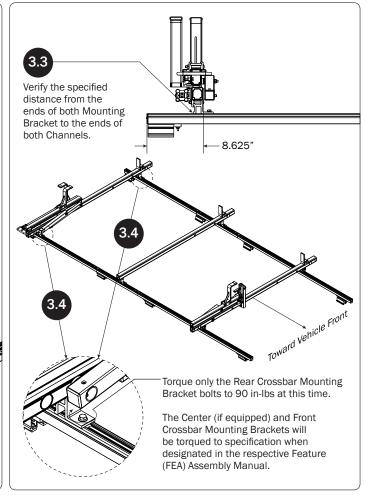


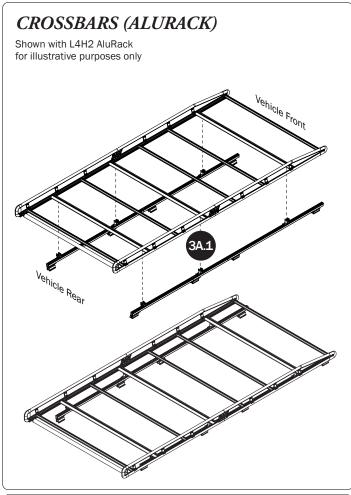

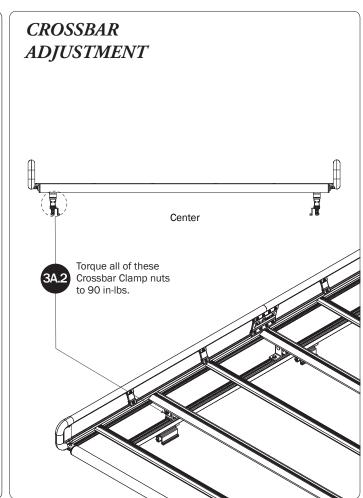

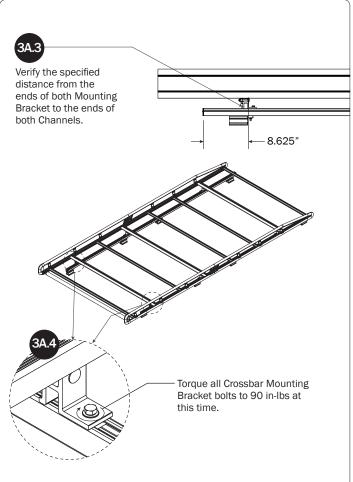


#### L5H2 (159.00"+) FBM ASSEMBLY SEQUENCE

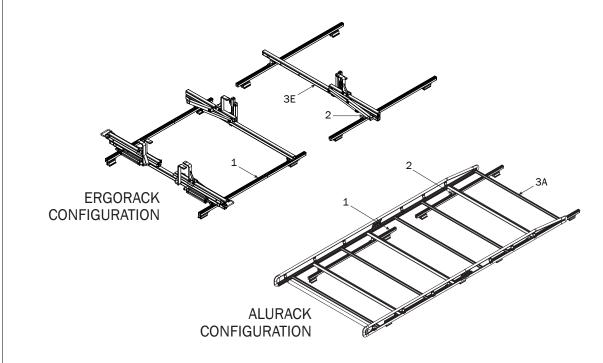






**CHANNEL MOUNTINGS** 


NOTE: Base, Rotation, Crossbar, and Side Rail features are shown for illustrative purposes only. These features are not included with this Base Mounting Kit, and must be purchased separately.

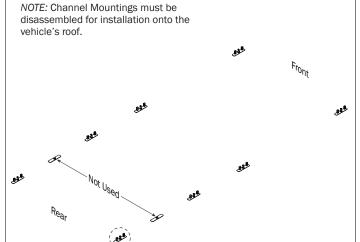


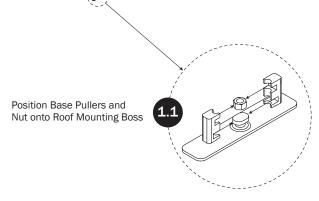


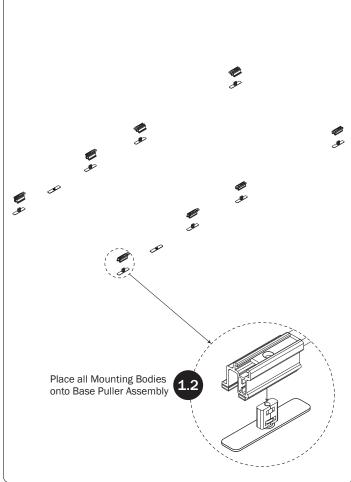


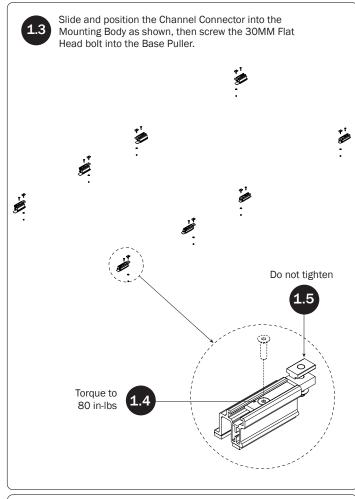


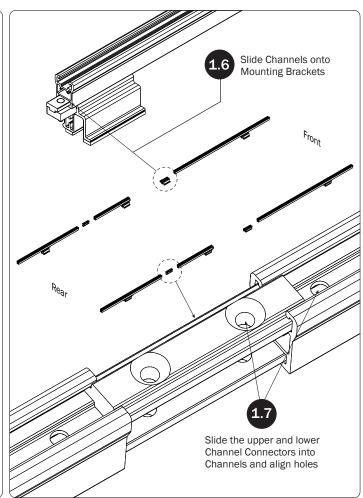

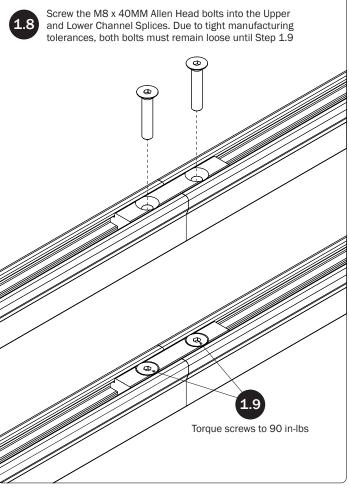

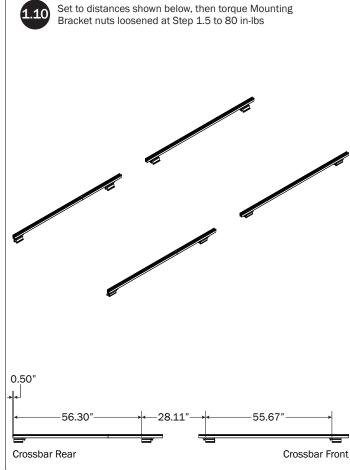

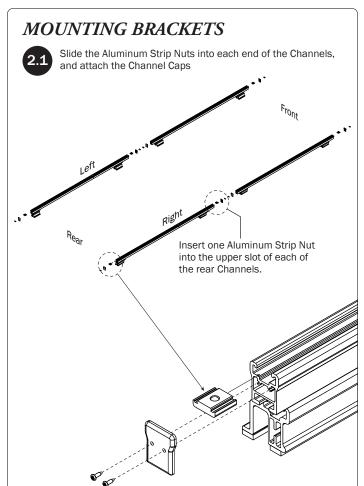

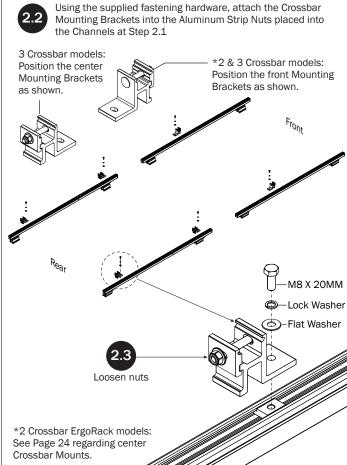

Use Dimensions A for 2 Crossbar models.
Use Dimensions B for 3 Crossbar models.

Do not torque the Crossbar Mounting Brackets until Step 3.4. Finger-tighten them into designated dimension to hold them in place, then proceed to your Feature (FEA) Assembly Manual.

9.125"

(A) 96.00" ErgoRack
102.50" AluRack
(B) 48.00" ErgoRack
41.00" AluRack
(B) 48.00" ErgoRack
61.50" AluRack
Crossbar Rear

Crossbar Front

Set to distances shown below:



Do not mount the Crossbars to this FBM system at this time.

Refer to the respective FEA Assembly Manual(s) included with your chosen rack configuration features. Depending upon the features chosen, you may need to perform a complete feature assembly onto the Crossbars as noted in that feature's Assembly Manual.

WARNING: Failure to position the Crossbars as shown in this FBM Assembly Manual may result in damage to the sliding door and/or ladder rack.

NOTE: Base, Clamp Down, or Rotation features are not included in this FBM kit, and must be purchased separately. To purchase applicable features and accessories, please contact your authorized distributor, or a Prime Design Sales & Service Representative.

