



PRIME DESIGN

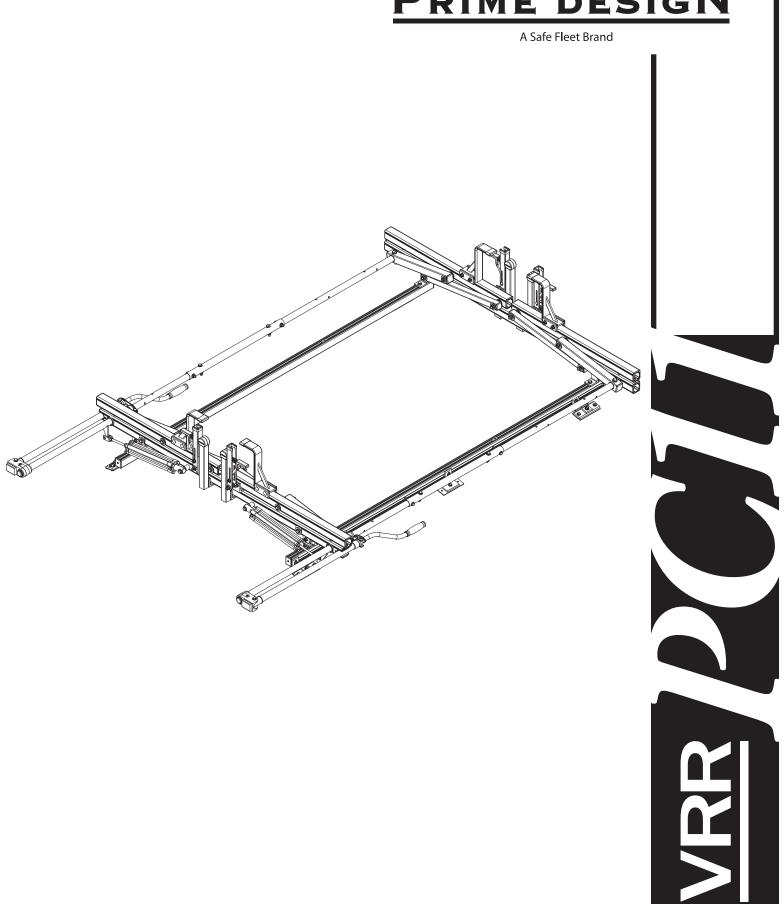


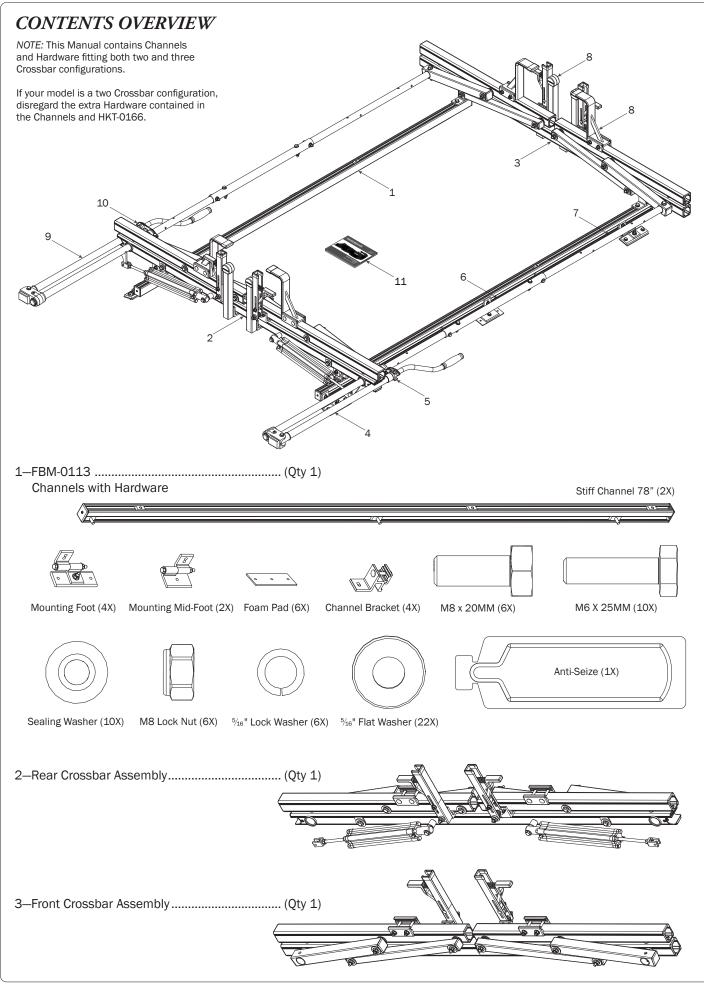



4—Rear Drive Shaft(Qty 1) Right Hand, B4 Version, 46.00"	
5—Handle Latch Assembly (Qty 1) Right Hand	
6—Connecting Bar (Qty 2) 24.00"	
7—Front Drive Shaft (Qty 2) B Version, 35.75"	
8-L & Z Post Kit(Qty 1) Adj. Z Post, 7.25", L Post, w/HKT-0160	
M6 x 20MM (2X) 1/4 Lock Washer (2X) 1/4 Flat Washer (2X)	L Post Bracket Clamp (2X) Z Post (2X) L Post (2X)
9—Rear Drive Shaft(Qty 1) Right Hand, B4 Version, 46.00"	2 Tost (2X) 2 Tost (2X)
10—Handle Latch Assembly(Qty 1) Left Hand	
11—USQSG-Ergorack(Qty 1) Quick Start Guide, Rotation	PRIME DESIGN TO THE PRIME PRIM
* Once rack installation is complete, place the Quick Start Guide into the vehicle's glove box for future ladder setup and adjustment.	Quick Start Guide Rotation
12—HKT-8163-Rotation Hardware Kit (Qty 2) (Not called out in Overview)	Keep in vehide for reference
Clevis Pin (1X) M8 x 50MM	%" x 2.25" (2X)
Cotter Pin (1X) M8 x 25MM (1X)	
M8 Lock Nut (5X) 3/8" Lock Nut (2X) 5/16" Flat Washer (10X) 3/8" Flat Washer (4X)
1.00" Sealing Sticker (16Y)	Anti-Seize (1X)
Stickers (16X)	Lubricant (1X)

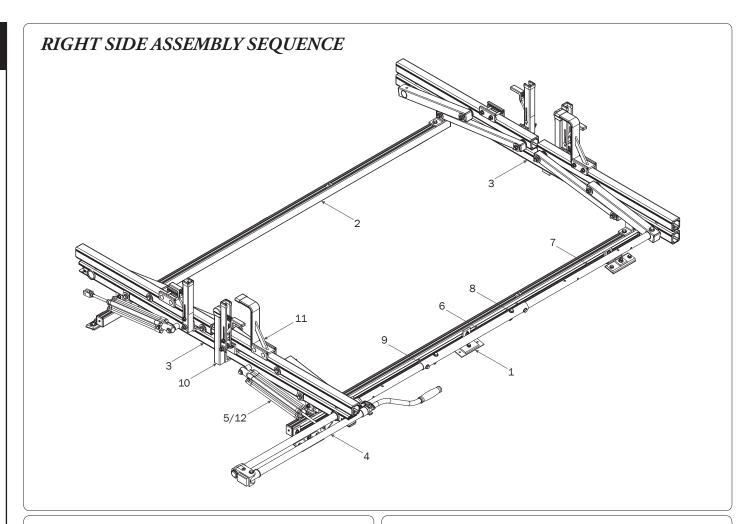

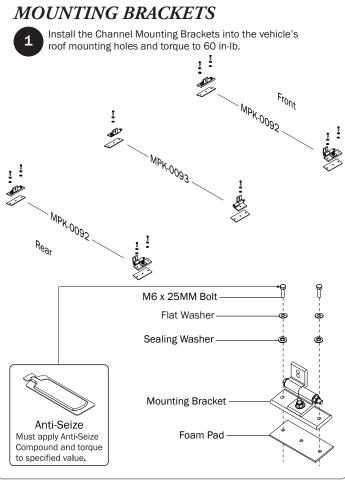


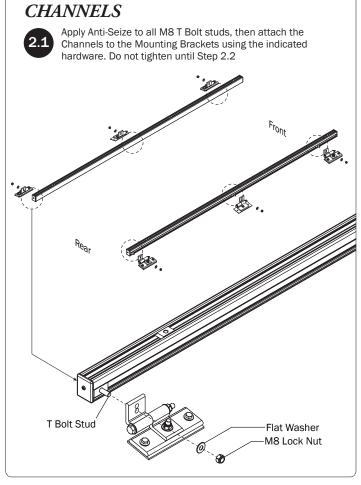


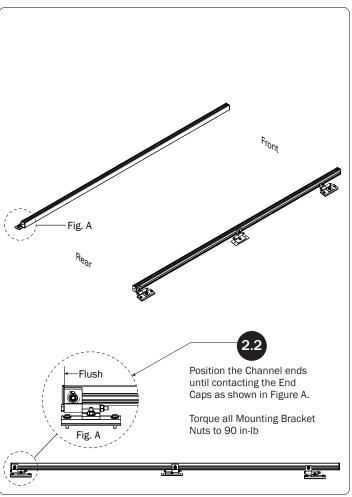


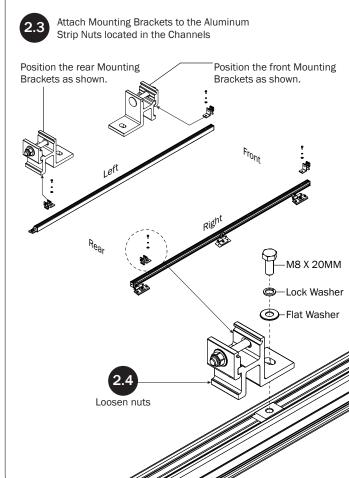





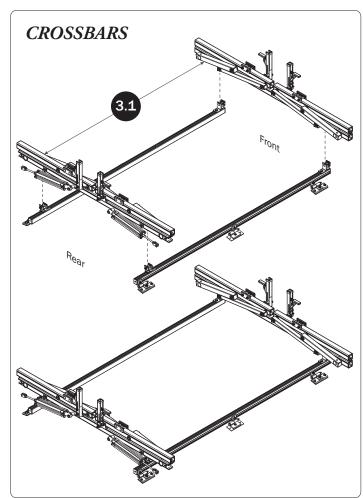


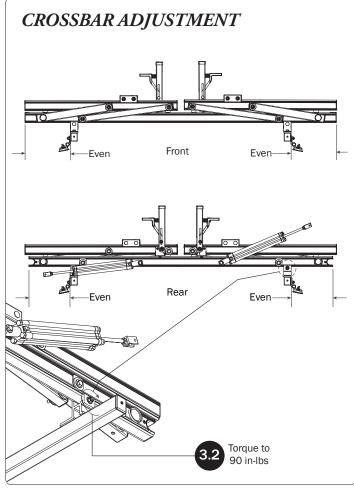


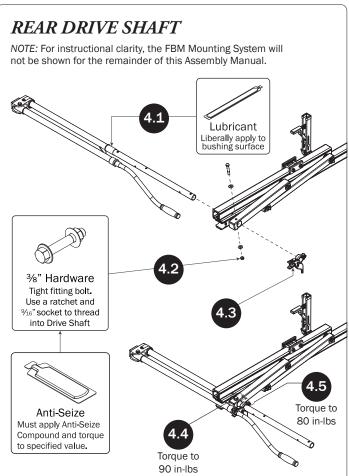


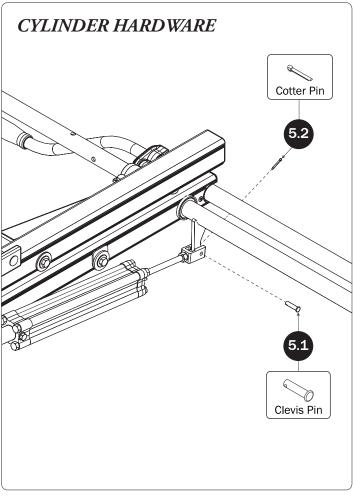

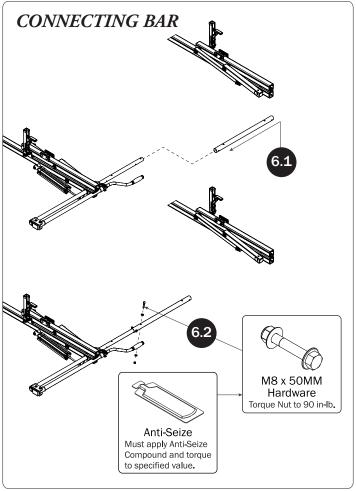

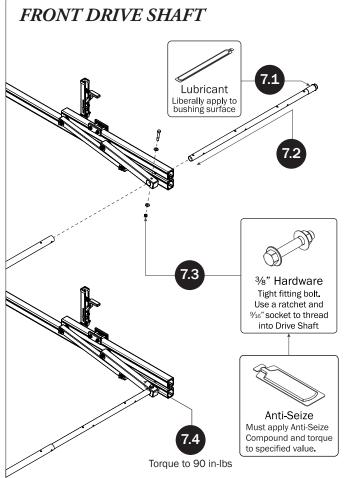

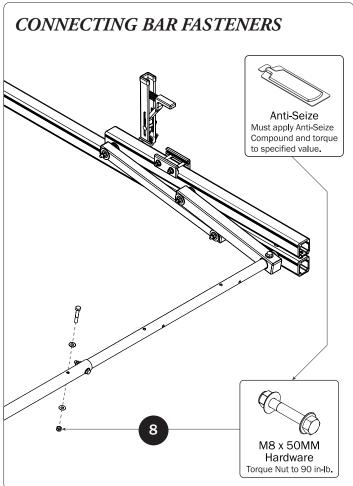

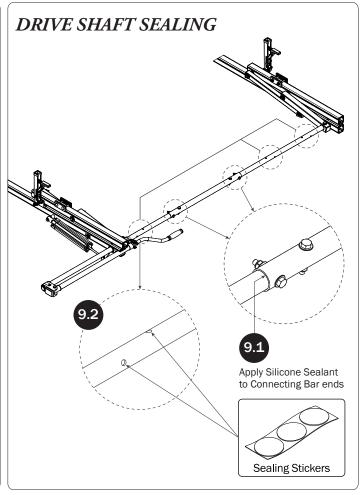

L POSTS SEE QUICK START GUIDE FOR ADJUSTMENTS

NOTE: The Auto Clamps may come preset from the factory for packaging purposes only. To assemble the L Posts to the Crossbars, the Auto Clamps may need to be repositioned.

