

ErgoRack

For Mercedes Sprinter

PRIME DESIGN™

A Safe Fleet Brand



Maximize the safety and carrying capacity of your Mercedes Sprinter with an ErgoRack.



Easy to use

Deploys with only 2 fingers.



Improve productivity

Deploy or stow in less than 20 seconds.



Enhance Safety

Eliminates slip and fall hazards from climbing on bumper or tire.



No Drill Installation

Maintain vehicle warranty and resale value with no holes to drill.

ErgoRack

For Mercedes Sprinter

PRIME DESIGN™

A Safe Fleet Brand



HBB-SP

Base Rack



HRR-SP

Dual Rotation



HRR3-SP

Dual Rotation with 3rd crossbar

Models	Vehicle Wheelbase	Vehicle Height	Street side Feature	Curb side Feature	Weight
SPRINTER WITHOUT FACTORY CHANNELS					
HBB-SP	144 IN, 170 IN, or 170 Ext.	95 IN (Standard) or 106 IN (High)	End Stop	End Stop	36 lbs
HBR-E-SP	144 IN, 170 IN, or 170 Ext.	95 IN (Standard) or 106 IN (High)	End Stop	Rotation	91 lbs
HRB-E-SP			Rotation	End Stop	
HRR-E-SP	144 IN, 170 IN, or 170 Ext.	95 IN (Standard) or 106 IN (High)	Rotation	Rotation	146 lbs
HRR3-E-SP*	144 IN, 170 IN, or 170 Ext.	95 IN (Standard) or 106 IN (High)	Rotation	Rotation	157 lbs
SPRINTER WITH FACTORY CHANNELS					
HBB-SPX	144 IN, 170 IN, or 170 Ext.	95 IN (Standard) or 106 IN (High)	End Stop	End Stop	21 lbs
HBR-E-SPX	144 IN, 170 IN, or 170 Ext.	95 IN (Standard) or 106 IN (High)	End Stop	Rotation	76 lbs
HRB-E-SPX			Rotation	End Stop	
HRR-E-SPX	144 IN, 170 IN, or 170 Ext.	95 IN (Standard) or 106 IN (High)	Rotation	Rotation	131 lbs
HRR3-E-SPX*	144 IN, 170 IN, or 170 Ext.	95 IN (Standard) or 106 IN (High)	Rotation	Rotation	142 lbs

*Three crossbar rack

Notes:

Crossbar spacing and the vehicle's wheelbase length will dictate the ladders that can be carried. Crossbars can be spaced at six, seven, or eight feet.

A 3rd crossbar can be spaced four, five, six, or seven feet.

If carrying a long extension ladder and a short step ladder, a three crossbar rack is suggested. Contact Prime

Design customer service for application specific questions.

Check the vehicle manufacturer's recommendation for roof capacity weight limits.

A wide range of accessories are available including conduit carriers, light holders, and more.

Van Crossbar Spacing and Ladder Size Guide

Crossbar Spacing	Step Ladder Size	Extension Ladder Size
4 ft Spacing	6 – 8 ft.	16 – 20 ft.
5 ft Spacing	8 – 10 ft.	16 – 24 ft.
6 ft Spacing	8 – 12 ft.†	16 – 28 ft.
7 ft Spacing**	10 – 12 ft.†	20 – 32 ft.
8 ft Spacing**	10 – 12 ft.†	20 – 36 ft.

†12 ft. step ladders may require an extended upper add-on component.

ML-7.2-4062 / Rev E / 1-25-2024

Copyright ©2024 Safe Fleet and its subsidiaries. All rights reserved. No part of this publication may be reproduced by any means without written permission from Safe Fleet. The information in this publication is believed to be accurate. However, Safe Fleet does not make any representation or warranty to that effect and does not assume responsibility for any consequences resulting from use of such information. Revisions or new editions of the publication may be issued (or not issued) in our discretion to incorporate such changes.

1.877.630.7366
safefleet.net

SAFE  FLEET
Driving Safety Forward™