PRIME DESIGN

A Safe Fleet Brand



BM-1007

2014+ Ram ProMaster Low/High Roof Base Mounting Kit Page 2 Packaging Contents


| r age 2 | r dendging contents |
|-------------|--|
| Pages 3-7 | L1H1 (118" Wheelbase) |
| Pages 8-12 | L2H1 (136" Wheelbase) |
| Pages 13-16 | L2H2 (Med Roof/136" Wheelbase) |
| Pages 17-21 | L4H2 (159" Wheelbase) |
| | Pages 3-7 Pages 8-12 Pages 13-16 Pages 17-21 |

PRIME DESIGN, A SAFE FLEET BRAND


Pages 22-26

Address: 580 Opperman Drive, Eagan, MN 55123 • Toll Free: 1.8.PRIME.RACK Fax: 651-552-1799 • Email: info@primedesign.net • Website: www.primedesign.net

L5H2 (159+" Wheelbase, Ext.)

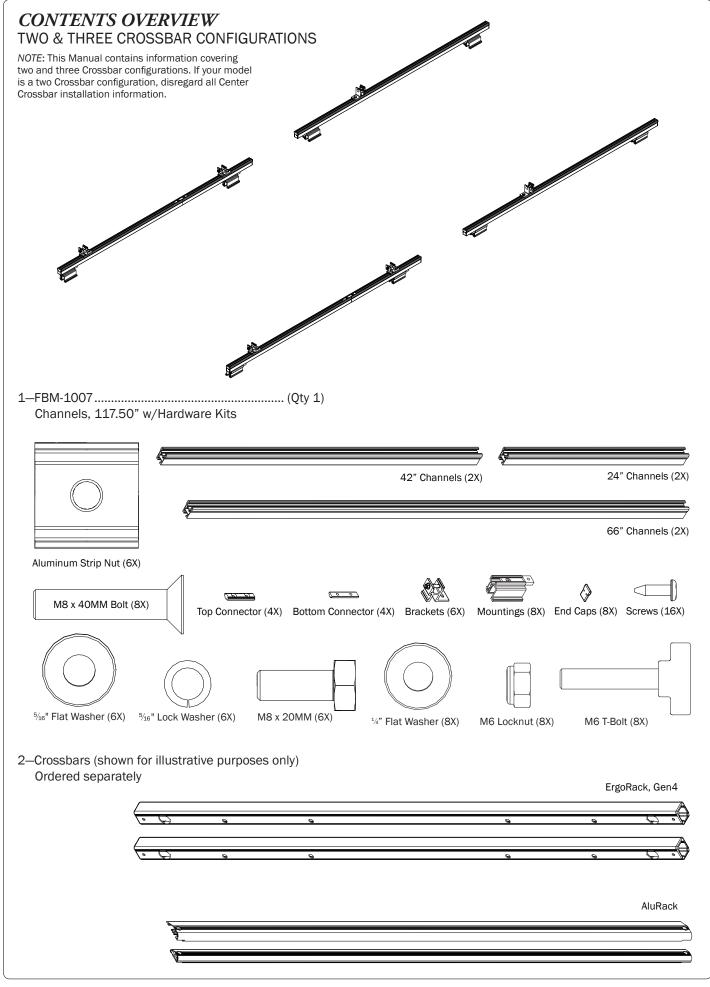

L1H1 (118.00") FBM ASSEMBLY SEQUENCE

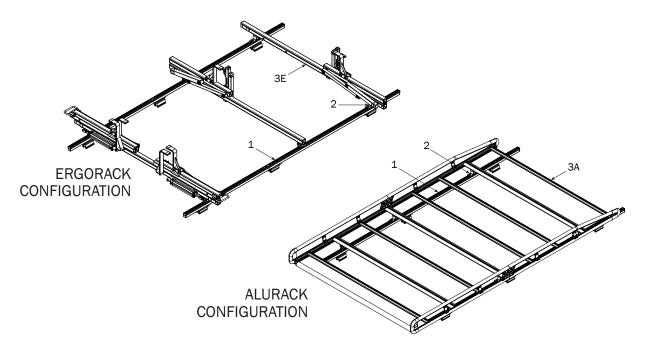






NOTE: Base, Rotation, Crossbar, and Side Rail features are shown for illustrative purposes only. These features are not included with this Base Mounting Kit, and must be purchased separately.


CHANNEL MOUNTINGS


NOTE: Channel Mountings must be

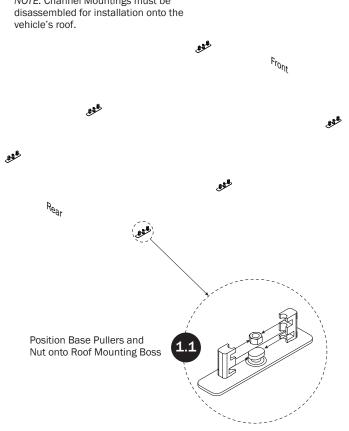

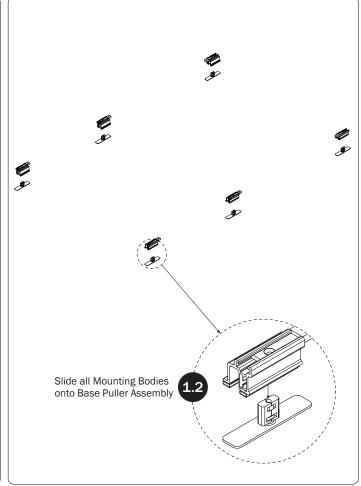


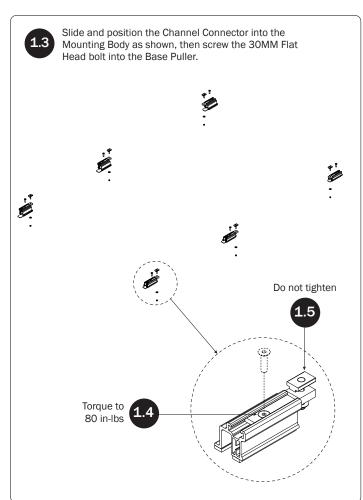


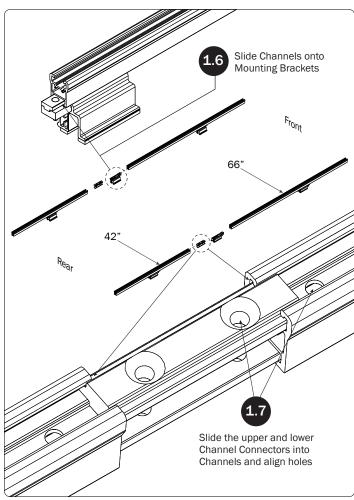

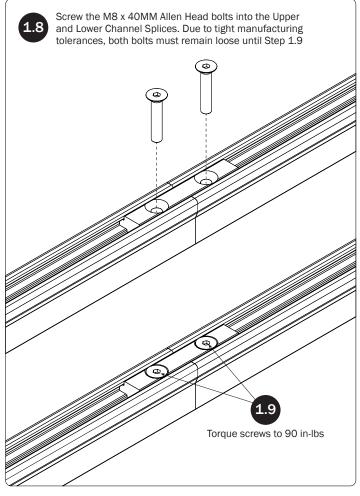



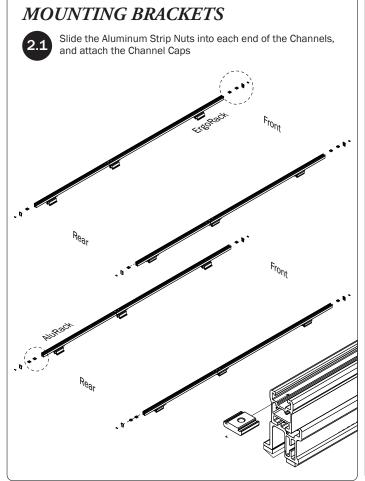

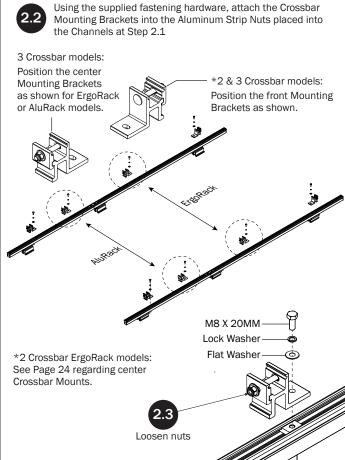

Use Dimensions A for 2 Crossbar models.
Use Dimensions B for 3 Crossbar models.

Do not torque the Crossbar Mounting Brackets until Step 3.4. Finger-tighten them into designated dimension to hold them in place, then proceed to your Feature (FEA) Assembly Manual.

11.375"

(A) 96.00" ErgoRack
72.50" AluRack

(B) 48.00" ErgoRack
29.00" AluRack

(B) 48.00" ErgoRack
43.50" AluRack

Set to distances shown below:

Crossbar Rear




Do not mount the Crossbars to this FBM system at this time.


Refer to the respective FEA or AR Assembly Manual(s) included with your chosen rack configuration features. Depending upon the features chosen, you may need to perform a complete feature assembly onto the Crossbars or Side Rails as noted in that feature's Assembly Manual.


WARNING: Failure to position the Crossbars as shown in this FBM Assembly Manual may result in damage to the sliding door and/or ladder rack.


NOTE: Crossbars, Side Rails, Base, Clamp Down, or Rotation features are not included in this FBM kit, and must be purchased separately. To purchase applicable features and accessories, please contact your authorized distributor, or a Prime Design Sales & Service Representative.


Crossbar Front

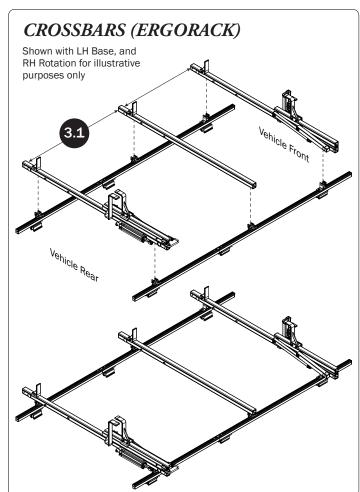


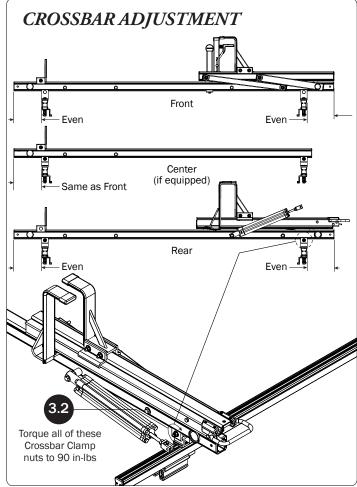


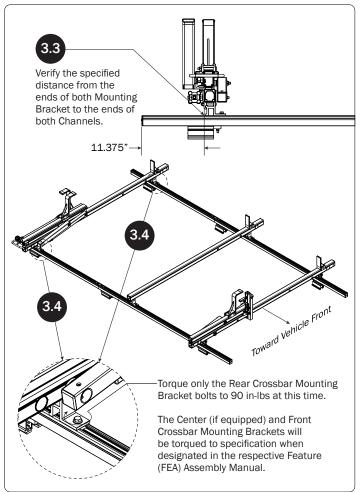


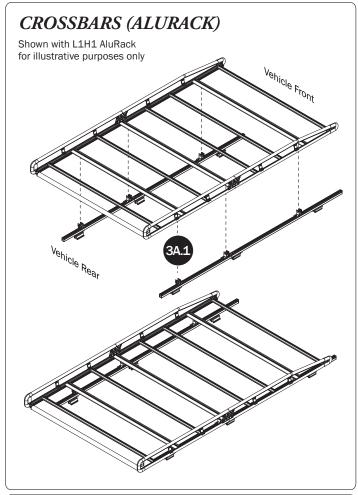


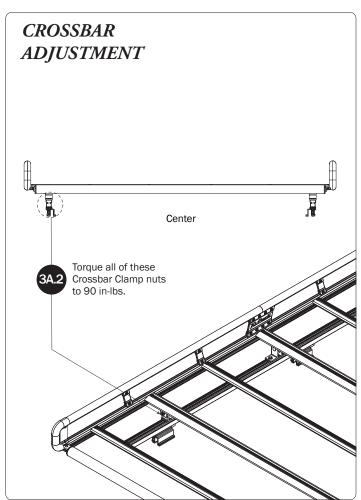


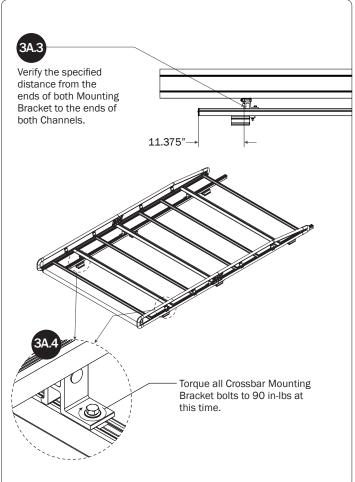


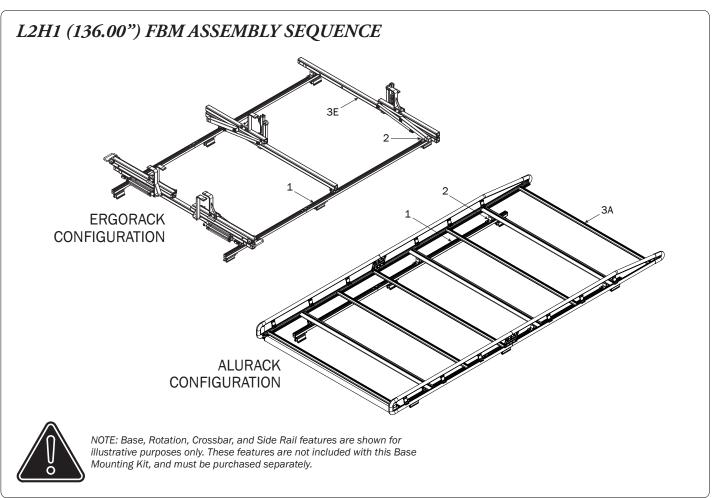


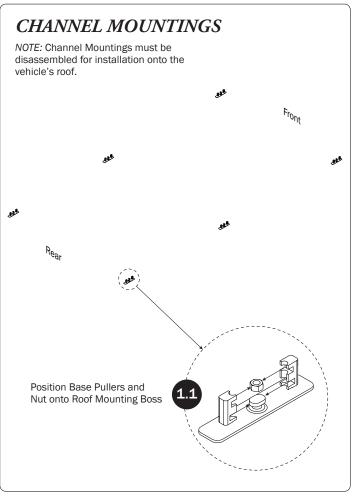


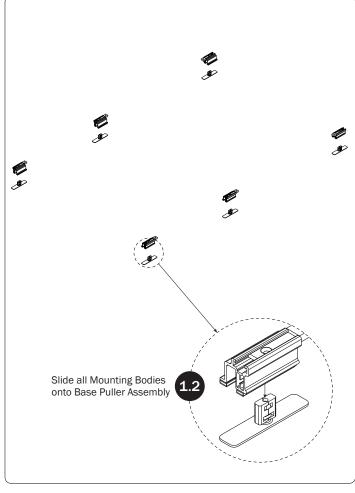

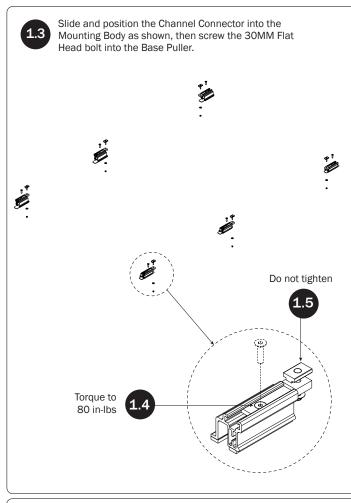

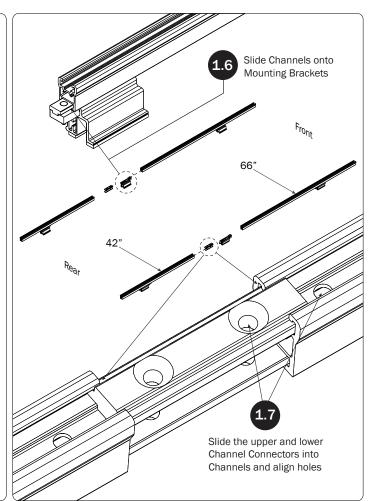


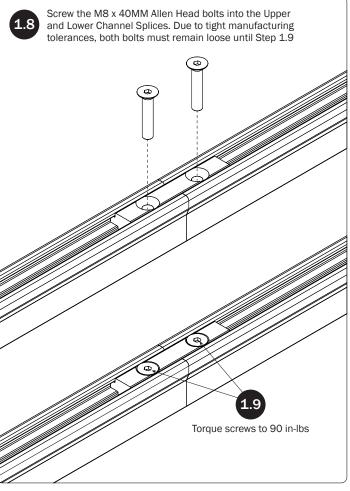


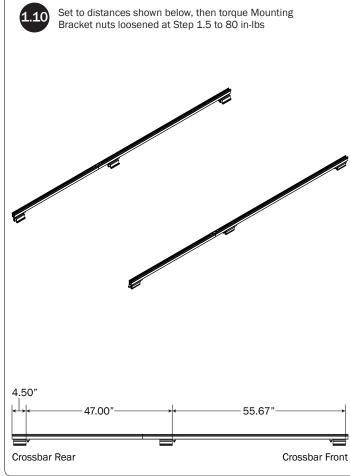

MOUNTING BRACKETS

2.1 Slide the Aluminum Strip Nuts into each end of the Channels, and attach the Channel Caps

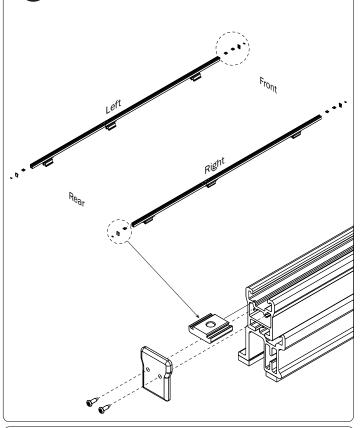


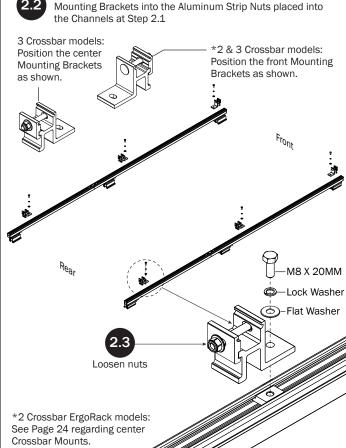

Using the supplied fastening hardware, attach the Crossbar

Set to distances shown below:
Use Dimensions A for 2 Crossbar models.
Use Dimensions B for 3 Crossbar models.

Do not torque the Crossbar Mounting Brackets until Step 3.4.
Finger-tighten them into designated dimension to hold them in place, then proceed to your Feature (FEA) Assembly Manual.

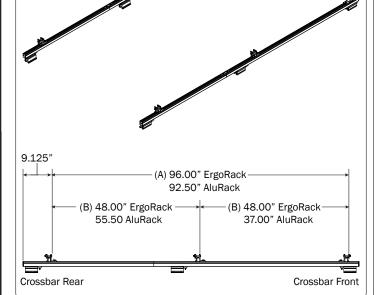





Do not mount the Crossbars to this FBM system at this time.


Refer to the respective FEA or AR Assembly Manual(s) included with your chosen rack configuration features. Depending upon the features chosen, you may need to perform a complete feature assembly onto the Crossbars or Side Rails as noted in that feature's Assembly Manual.


WARNING: Failure to position the Crossbars as shown in this FBM Assembly Manual may result in damage to the sliding door and/or ladder rack.


NOTE: Crossbars, Side Rails, Base, Clamp Down, or Rotation features are not included in this FBM kit, and must be purchased separately. To purchase applicable features and accessories, please contact your authorized distributor, or a Prime Design Sales & Service Representative.

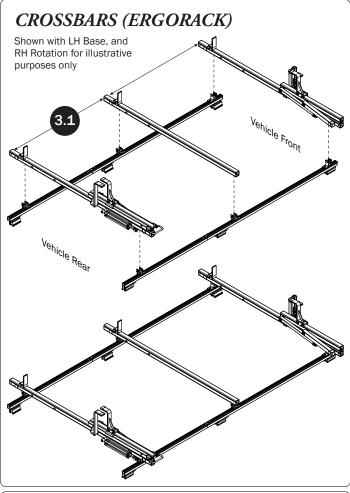


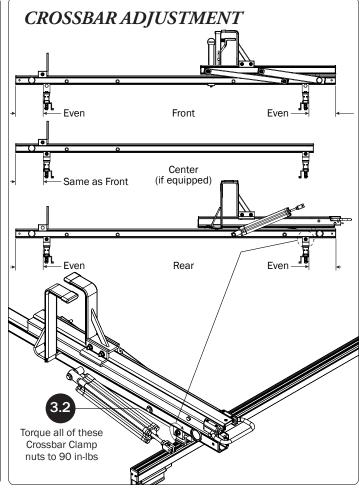

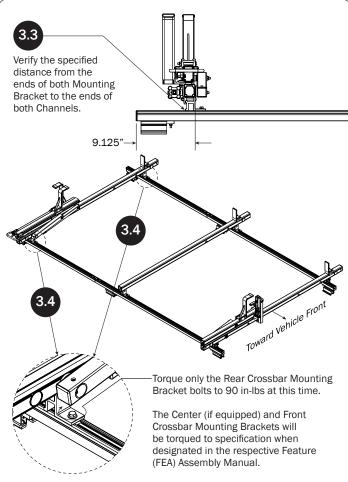


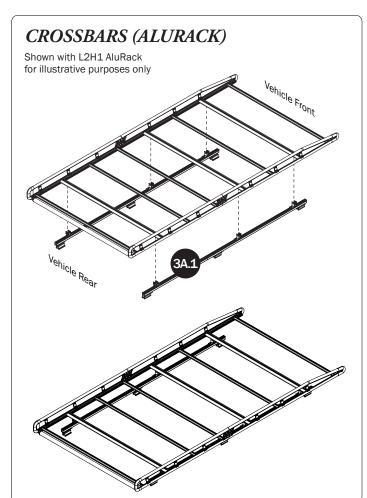

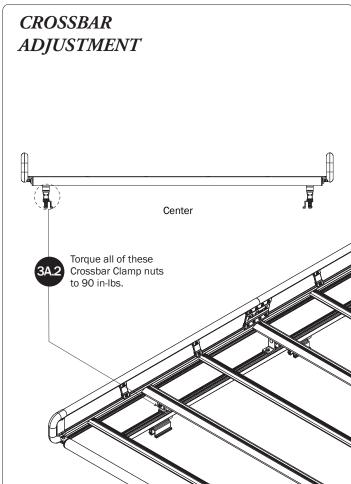

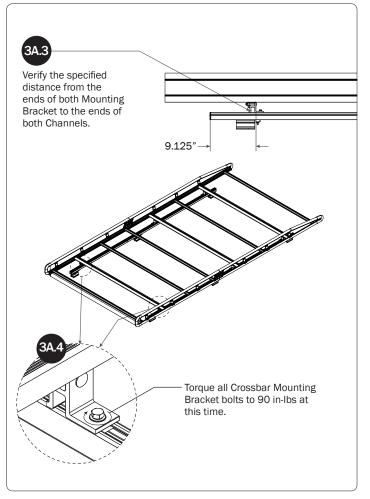



L2H2 (136.00") FBM ASSEMBLY SEQUENCE-ALURACK ONLY

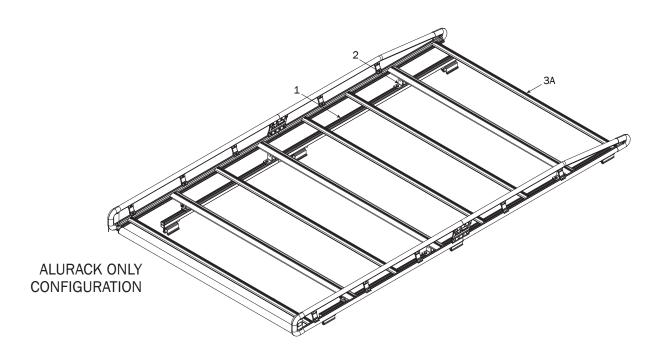






NOTE: Base, Rotation, Crossbar, and Side Rail features are shown for illustrative purposes only. These features are not included with this Base Mounting Kit, and must be purchased separately.

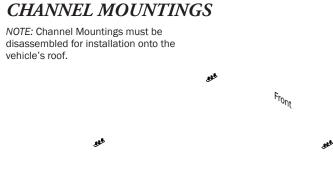


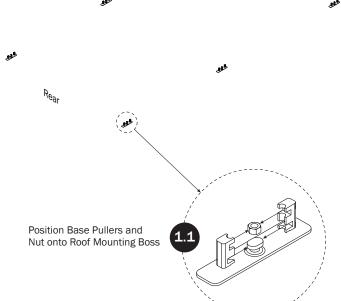


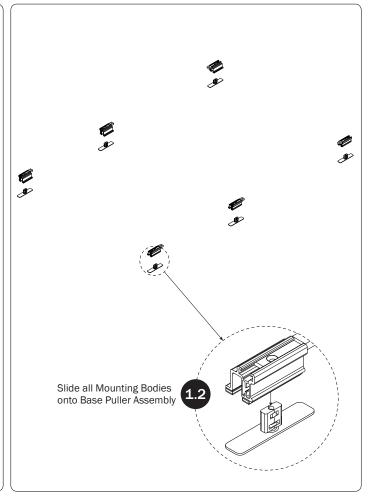

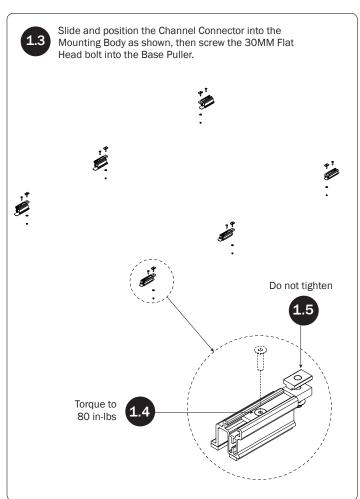

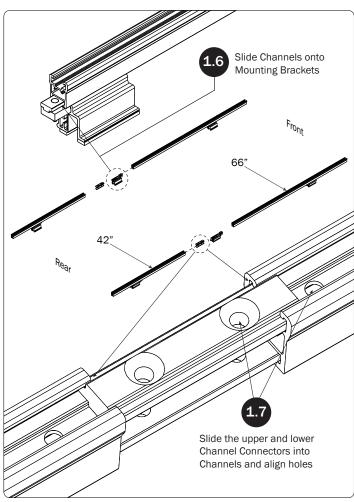

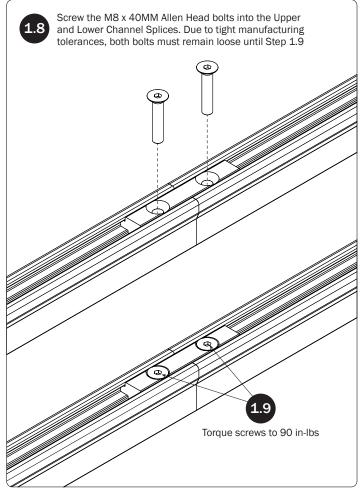


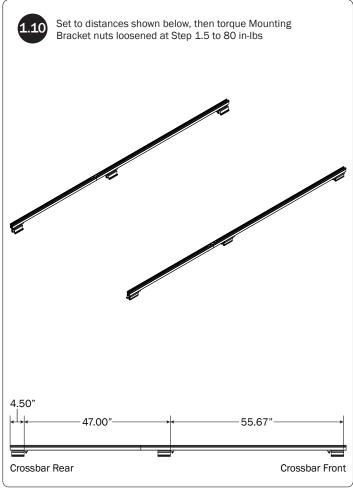


MOUNTING BRACKETS

2.1


Slide the Aluminum Strip Nuts into each end of the Channels, and attach the Channel Caps

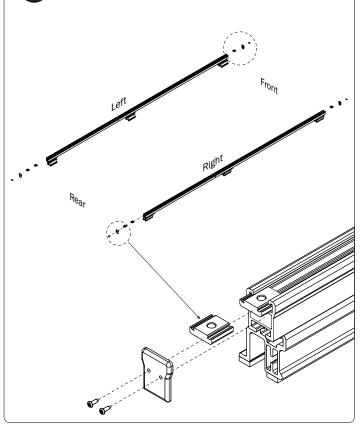

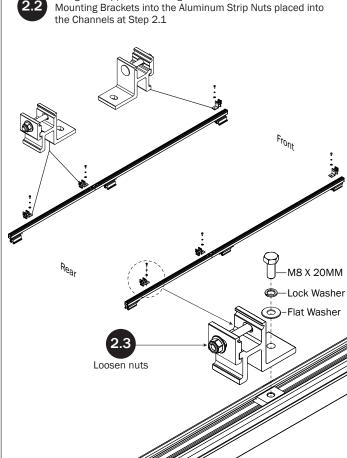

Using the supplied fastening hardware, attach the Crossbar

2.4 Set to distances shown below (AluRack only). Do not torque the Crossbar Mounting Brackets until Step 3.4. Finger-tighten them into designated dimension to hold them in place, then proceed to your Feature (FEA) Assembly Manual.

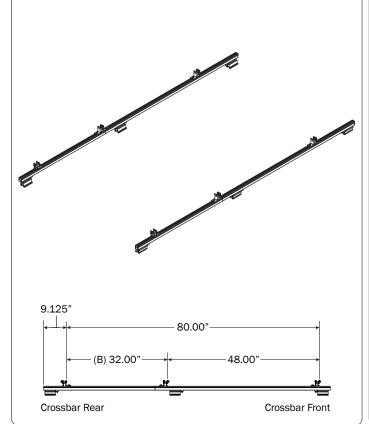





Do not mount the Crossbars to this FBM system at this time.


Refer to the respective FEA or AR Assembly Manual(s) included with your chosen rack configuration features. Depending upon the features chosen, you may need to perform a complete feature assembly onto the Crossbars or Side Rails as noted in that feature's Assembly Manual.

WARNING: Failure to position the Crossbars as shown in this FBM Assembly Manual may result in damage to the sliding door and/or ladder rack.


NOTE: Crossbars, Side Rails, Base, Clamp Down, or Rotation features are not included in this FBM kit, and must be purchased separately. To purchase applicable features and accessories, please contact your authorized distributor, or a Prime Design Sales & Service Representative.

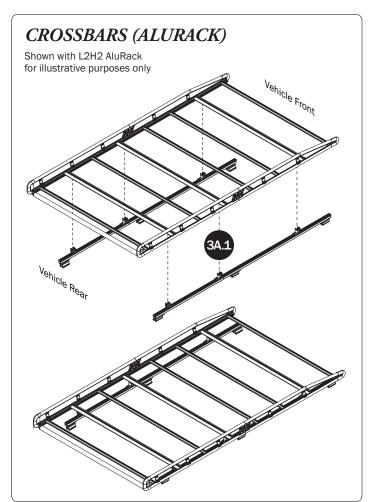

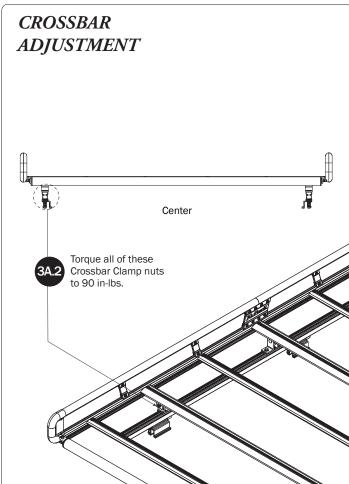

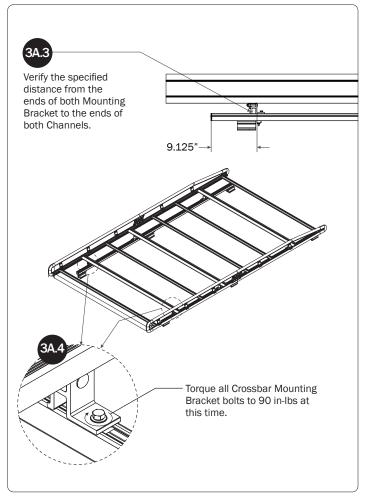

L4H2 (159.00") FBM ASSEMBLY SEQUENCE

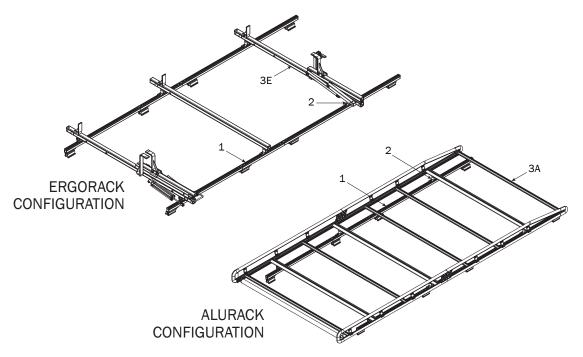






NOTE: Base, Rotation, Crossbar, and Side Rail features are shown for illustrative purposes only. These features are not included with this Base Mounting Kit, and must be purchased separately.


CHANNEL MOUNTINGS


NOTE: Channel Mountings must be

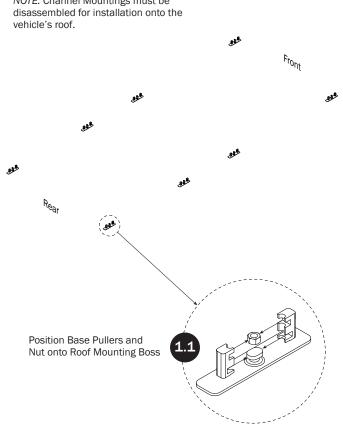


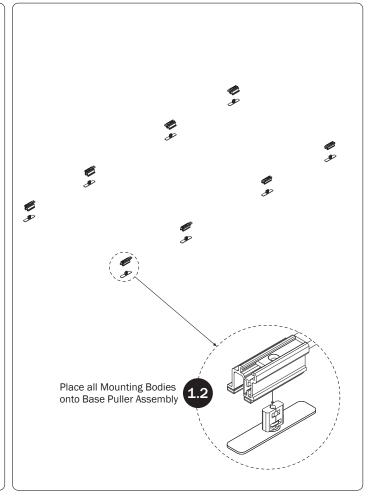


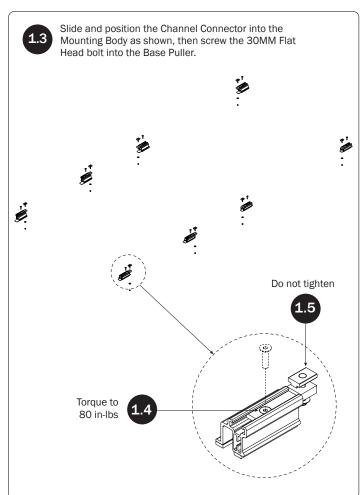


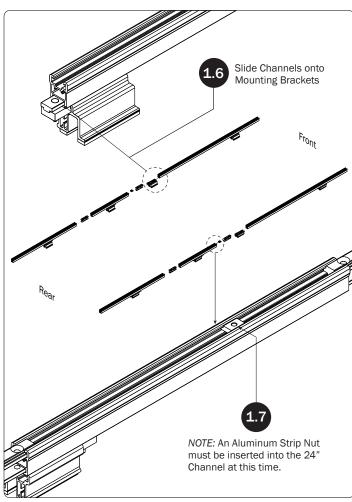


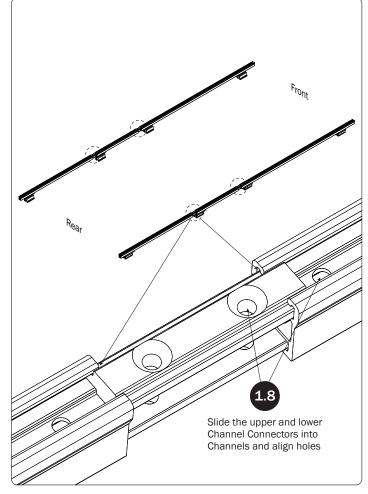


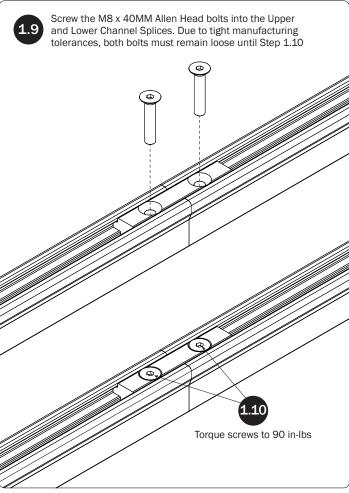

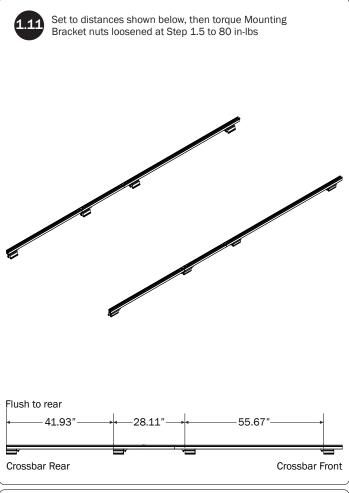

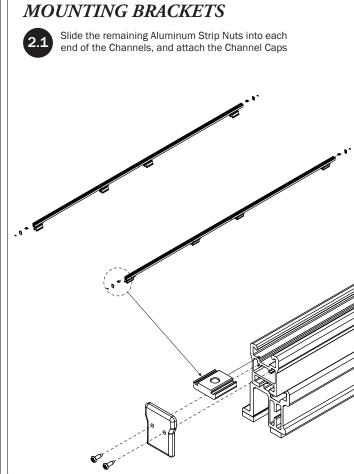

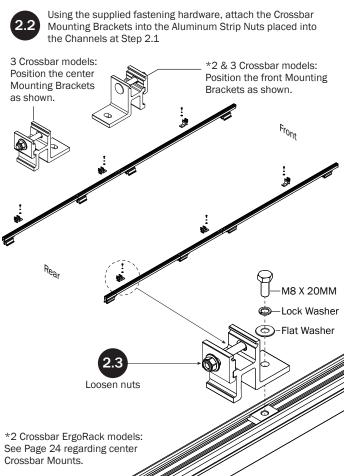

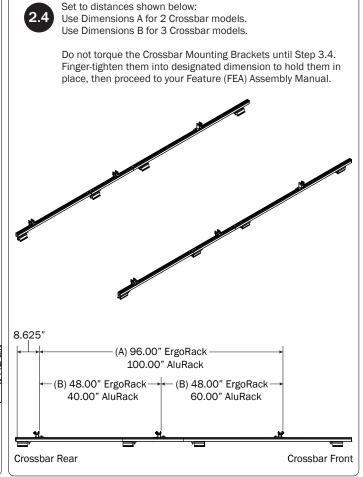





Do not mount the Crossbars to this FBM system at this time.


Refer to the respective FEA Assembly Manual(s) included with your chosen rack configuration features. Depending upon the features chosen, you may need to perform a complete feature assembly onto the Crossbars as noted in that feature's Assembly Manual.


WARNING: Failure to position the Crossbars as shown in this FBM Assembly Manual may result in damage to the sliding door and/or ladder rack.


NOTE: Base, Clamp Down, or Rotation features are not included in this FBM kit, and must be purchased separately. To purchase applicable features and accessories, please contact your authorized distributor, or a Prime Design Sales & Service Representative.

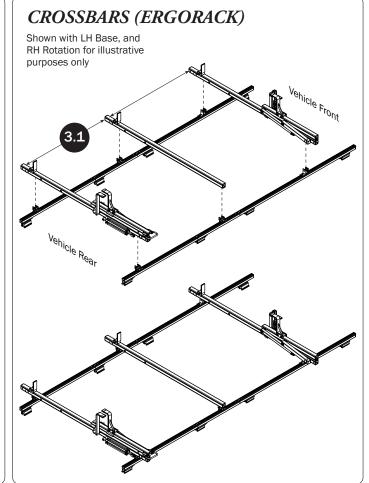


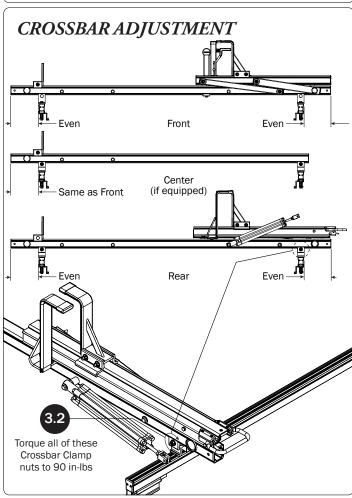

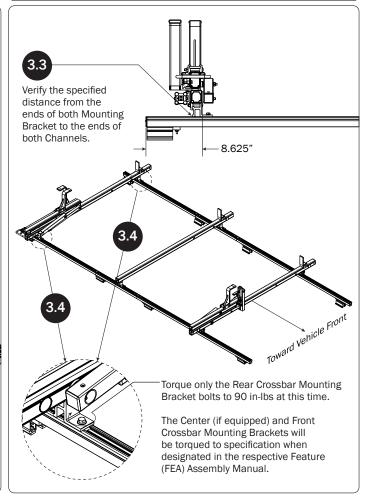


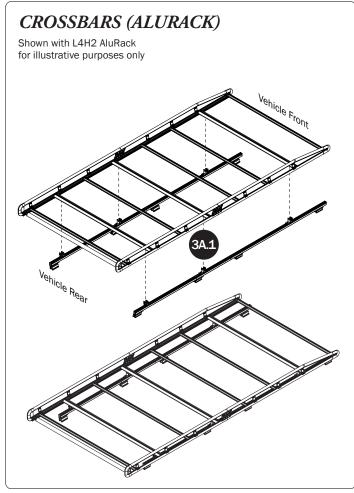

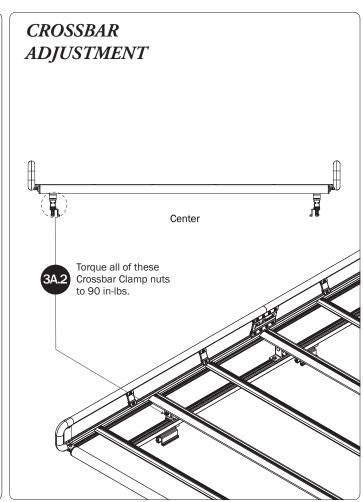

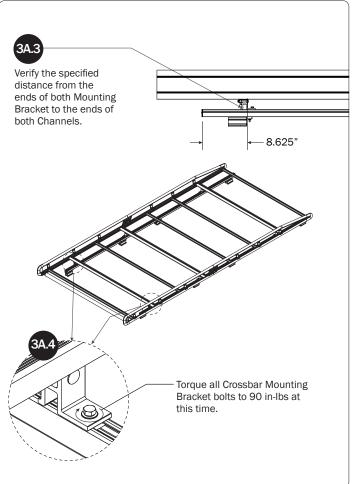

L5H2 (159.00"+) FBM ASSEMBLY SEQUENCE

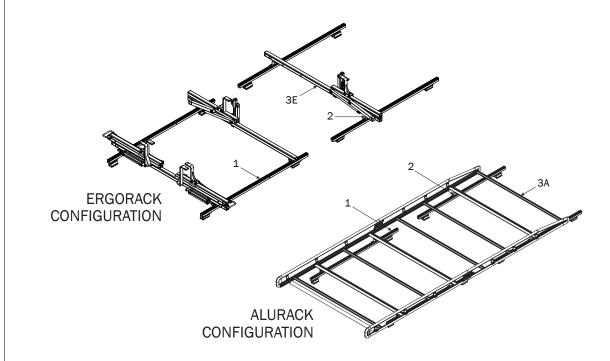






NOTE: Base, Rotation, Crossbar, and Side Rail features are shown for illustrative purposes only. These features are not included with this Base Mounting Kit, and must be purchased separately.


CHANNEL MOUNTINGS


NOTE: Channel Mountings must be disassembled for installation onto the vehicle's roof.

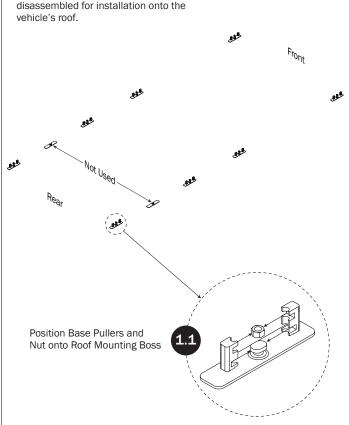


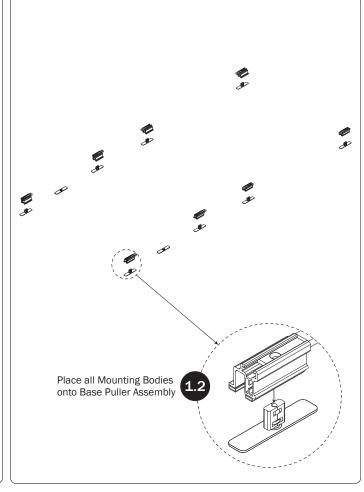


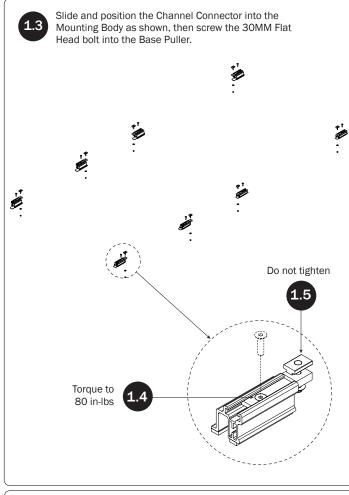


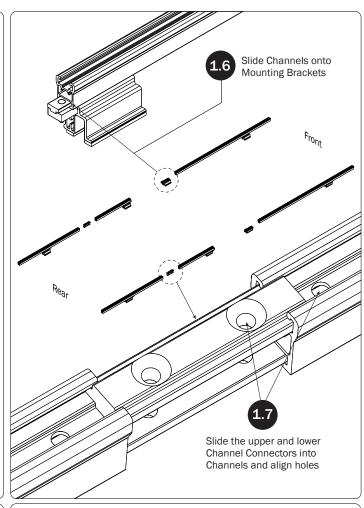

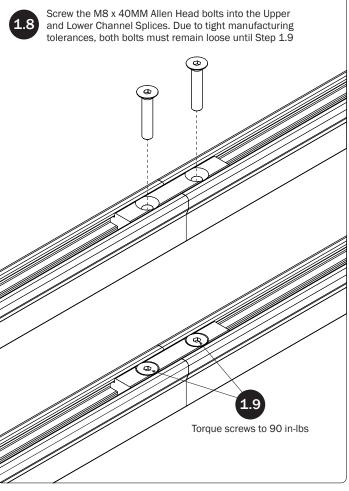

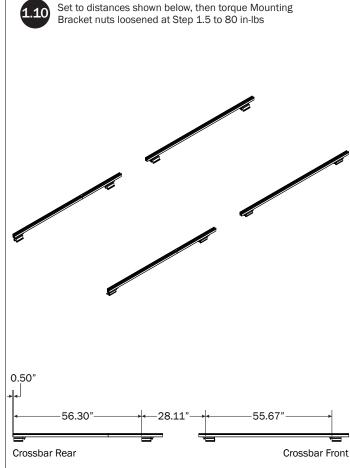

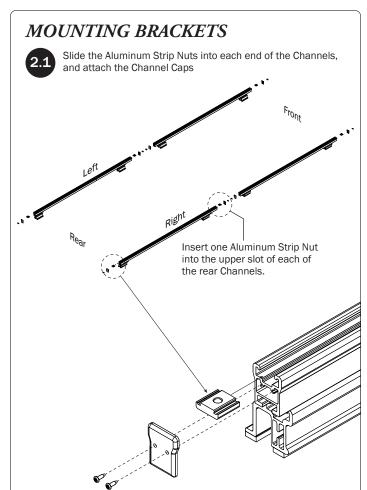

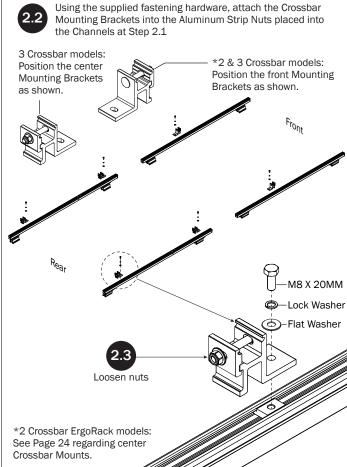

Use Dimensions A for 2 Crossbar models.
Use Dimensions B for 3 Crossbar models.

Do not torque the Crossbar Mounting Brackets until Step 3.4. Finger-tighten them into designated dimension to hold them in place, then proceed to your Feature (FEA) Assembly Manual.

9.125"

(A) 96.00" ErgoRack
102.50" AluRack
(B) 48.00" ErgoRack
41.00" AluRack
(B) 48.00" ErgoRack
61.50" AluRack
Crossbar Rear

Crossbar Front

Set to distances shown below:



Do not mount the Crossbars to this FBM system at this time.

Refer to the respective FEA Assembly Manual(s) included with your chosen rack configuration features. Depending upon the features chosen, you may need to perform a complete feature assembly onto the Crossbars as noted in that feature's Assembly Manual.

WARNING: Failure to position the Crossbars as shown in this FBM Assembly Manual may result in damage to the sliding door and/or ladder rack.

NOTE: Base, Clamp Down, or Rotation features are not included in this FBM kit, and must be purchased separately. To purchase applicable features and accessories, please contact your authorized distributor, or a Prime Design Sales & Service Representative.

