## **ErgoRack**



## For Full Size Pickup Trucks



Maximize the safety and carrying capacity of your Pickup Truck with an ErgoRack.



### Improve productivity

Deploy or stow in less than 20 seconds.



#### **Enhance Safety**

Eliminates slip and fall hazards from climbing on bumper or tire.



#### Secure

Deter theft and secure contents with padlock ready handle.



# **ErgoRack**



A Safe Fleet Brand

### For Full Size Pickup Trucks



**PBB-6000** 

Base Rack



PCR-6000

Clamp Down / Rotation



HBR-E-6000

High Roof Dual Rotation

Models for 5.5/6 foot beds	Models for 8 foot beds	Streetside	Curbside	cap height	Crossbar length	Rack WEIGHT 6000 / 6001 Models	Crossbar Spacing 6000 / 6001 Models
PBB-6000	PBB-6001	Base	Base	7' or less	62"	25 / 28 lbs	6/8'
PBC-6000	PBC-6001	Base	Clamp	7' or less	62"	36 / 40 lbs	6 / 8'
PCC-6000	PCC-6001	Clamp	Clamp	7' or less	62"	48 / 52 lbs	6 / 8'
PBR-6000	PBR-6001	Base	Rotation	7' or less	62"	60 / 63 lbs	6 / 8'
PCR-6000	PCR-6001	Clamp	Rotation	7' or less	62"	71 / 75 lbs	6 / 8'
PRR-6000	PRR-6001	Rotation	Rotation	7' or less	62"	96 / 99 lbs	6 / 8'
HBR-E-6000	HBR-E-6001	Base	Rotation w/slide	Over 7'	62"	69 / 72 lbs	6 / 8'
HRR-E-6000	HRR-E-6001	Rotation w/slide	Rotation w/slide	Over 7'	62"	108 / 111 lbs	6 / 8'
Universal Hardw	are (sold separa	itely)					
MPK-0007	Adjustable Universal Mounting Feet					4 lbs	

#### Notes

For sloped caps please contact customer service for best mounting solution. Commercial style aluminum pickup caps will require reinforcement plates. Contact customer service for details. Check the cap manufacturer's recommendation for roof capacity weight limits.

#### Pickup Crossbar Spacing and Ladder Size Guide

Crossbar Spacing	Step Ladder Size	Extension Ladder Size
4 ft Spacing	6-8 ft.	16 – 20 ft.
5 ft Spacing	8 – 10 ft.	16 – 24 ft.
6 ft Spacing	8 – 12 ft.†	16 – 28 ft.
7 ft Spacing**	10 − 12 ft. <sup>†</sup>	20 – 32 ft.
8 ft Spacing**	10 – 12 ft.†	20 – 36 ft.

†12 ft. step ladders may require an extended upper add-on component.

