


PRIME DESIGN™


A Safe Fleet Brand

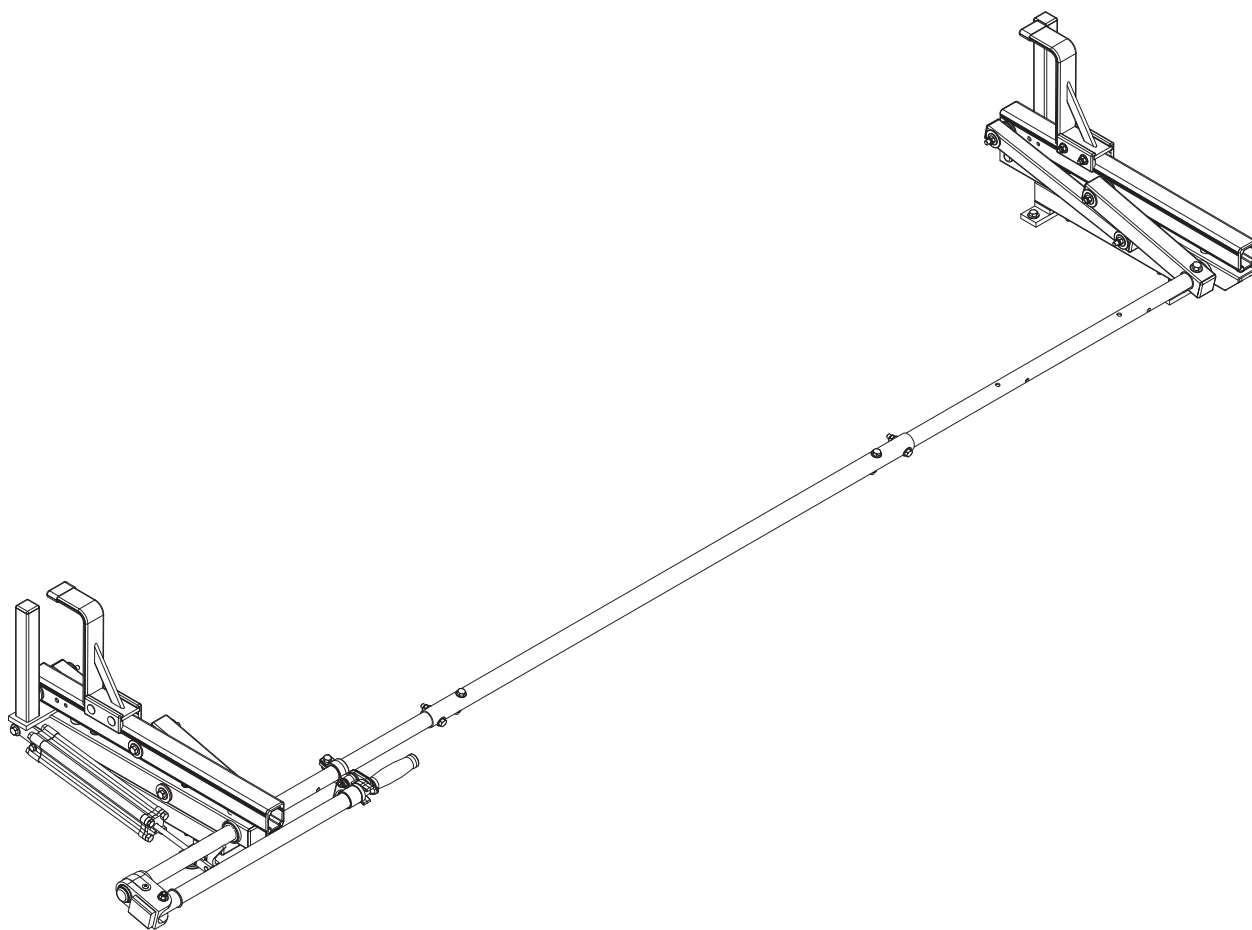

UXR 0003

PRIME DESIGN, A SAFE FLEET BRAND


Address: 580 Opperman Drive, Eagan, MN 55123 • Toll Free: 1.8.PRIME.RACK
Fax: 651-552-1799 • Email: info@primedesign.net • Website: www.primedesign.net

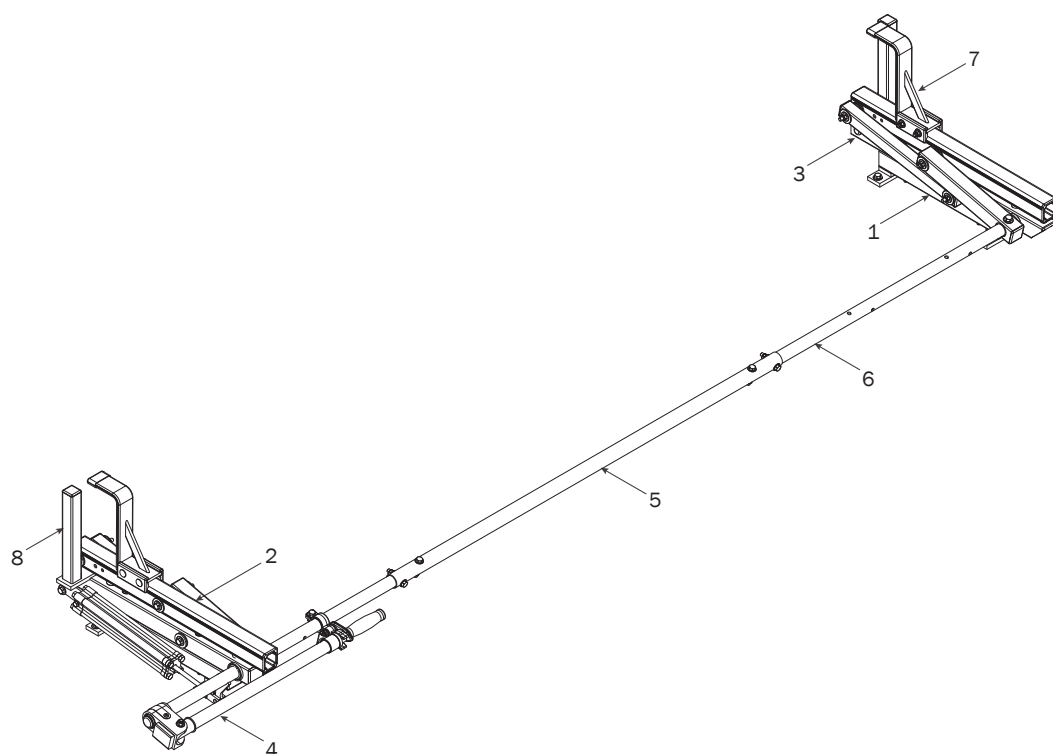


1—Utility Rack Base Mount (Qty 2)




2—Rear Rotation Assembly..... (Qty 1)

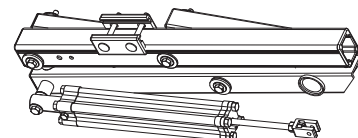

3—Front Rotation Assembly..... (Qty 1)

 

 4—Rear Drive Shaft..... (Qty 1)
Right Hand, B4 Version, 34.00"



5—Handle Latch Assembly (Qty 1)




6—Connecting Bar..... (Qty 1)
48.00"




7—Front Drive Shaft..... (Qty 1)
B Version, 35.75"




8—Z Post (Qty 2)
Adjustable, 7.25"

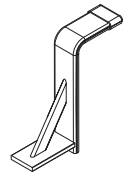


9—L Post (Qty 2)
9.25"

 

HKT-8163-Rotation Hardware Kit

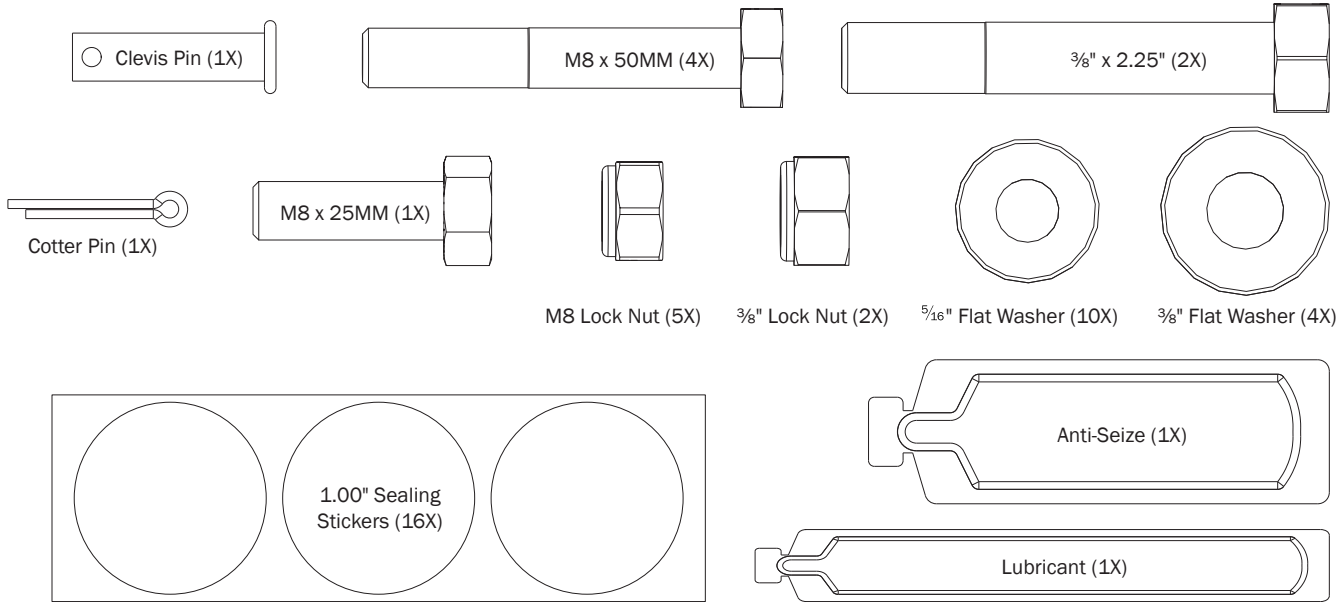


HKT-0122 Mounting Hardware Kit

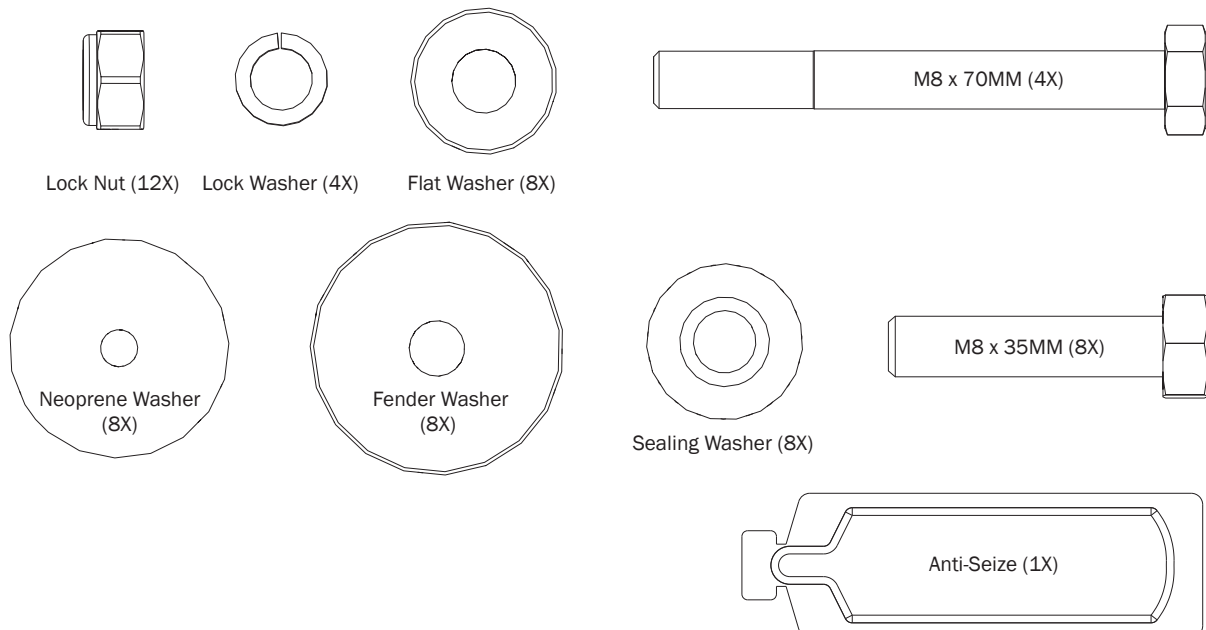


UTB-2316 MOUNTING BRACKETS
BRACKET PRE-ASSEMBLY**0.1**

Drill holes into the Service Body mounting location according to dimensions shown for 8.00 ft rack configuration.

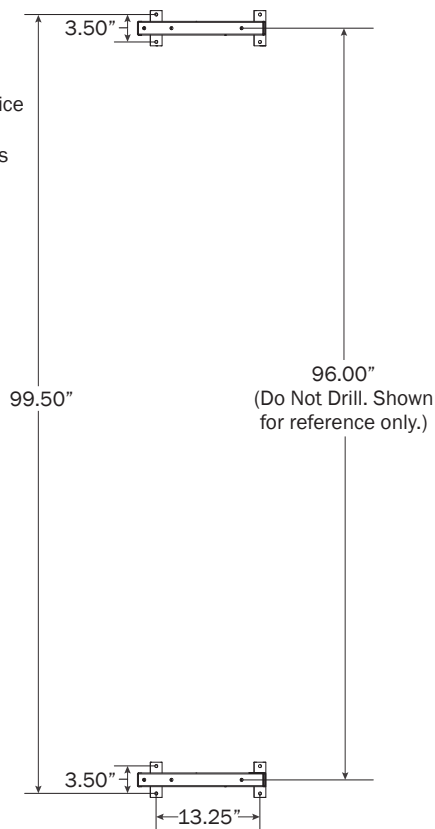
**0.2**

Dimensions shown below are for 6' (72.00") and 7' (84.00") spacing.


Dimensions A are measured from center to center of top Mounting Rail. Dimensions B are measured from outside Bracket Hole to outside Bracket Hole.

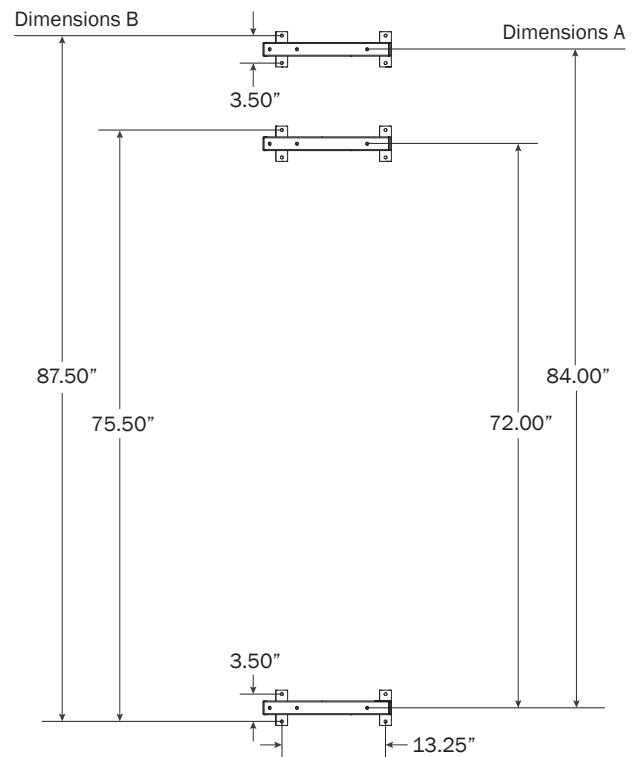**0.3**


Apply Anti-Seize compound to Mounting Bracket bolts. The shorter bolt assemblies are on the outside as shown.

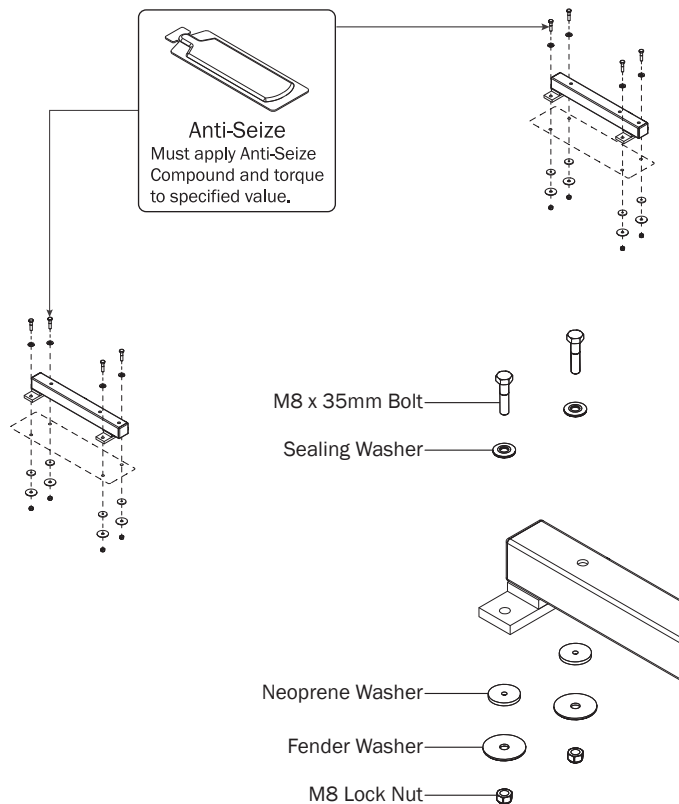**0.4**


Torque all Mounting Bracket bolts to 90 in-lbs.

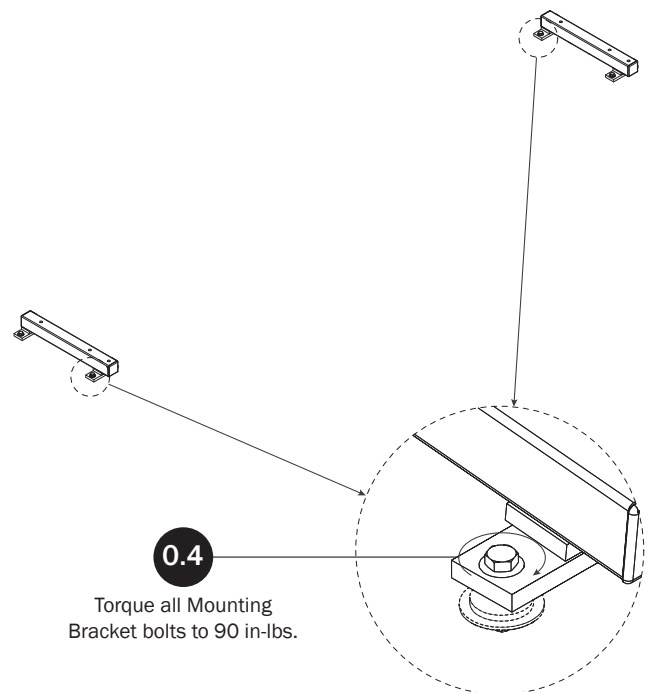


LEFT ROTATION ASSEMBLY SEQUENCE




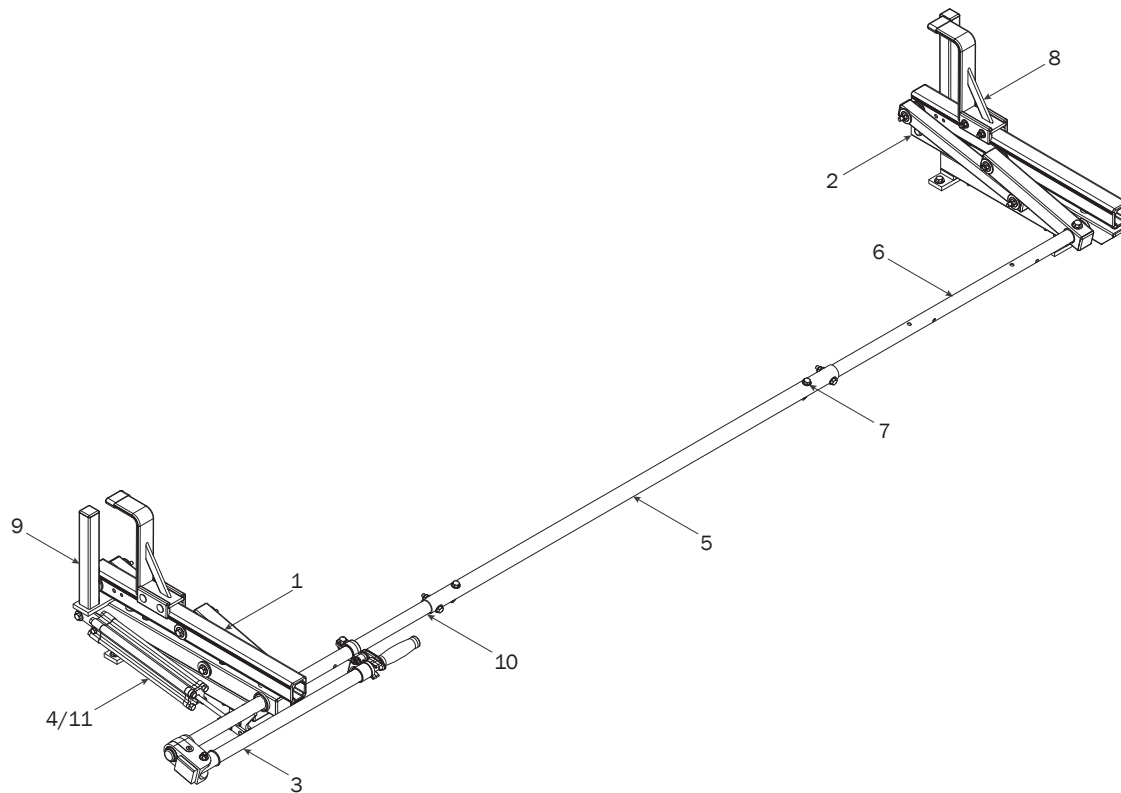


REAR ROTATION ASSEMBLY

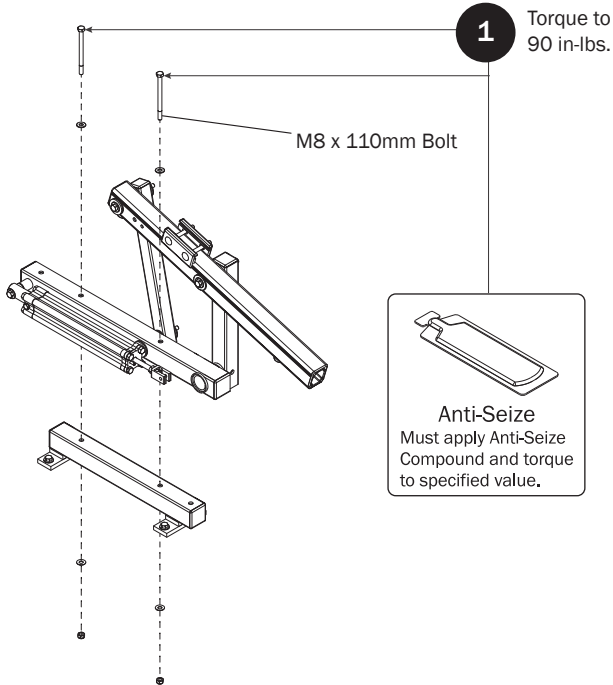


FRONT ROTATION ASSEMBLY

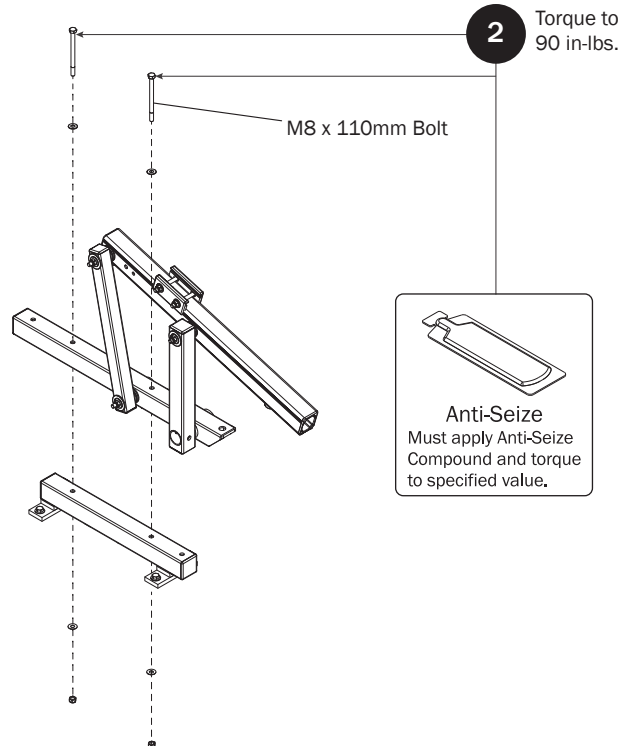


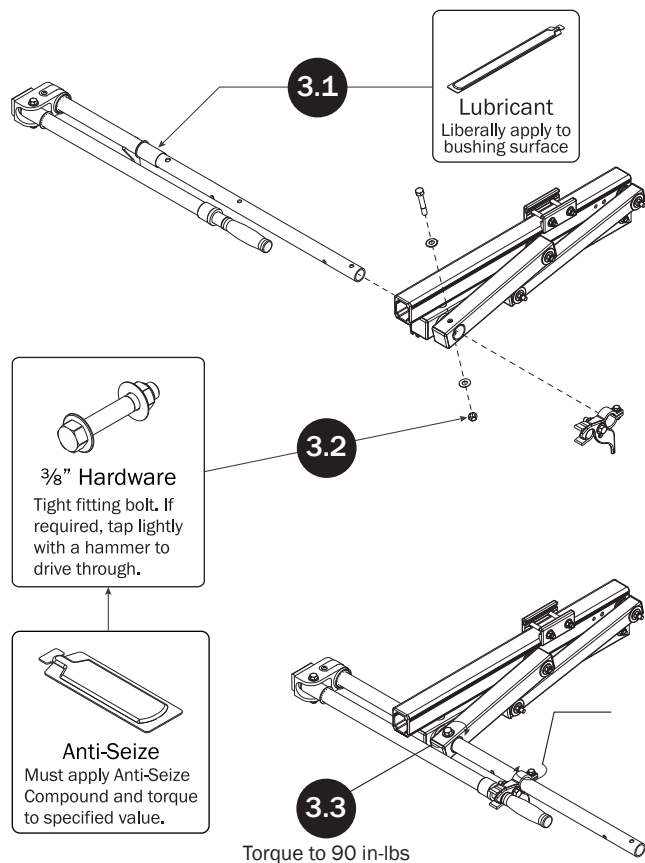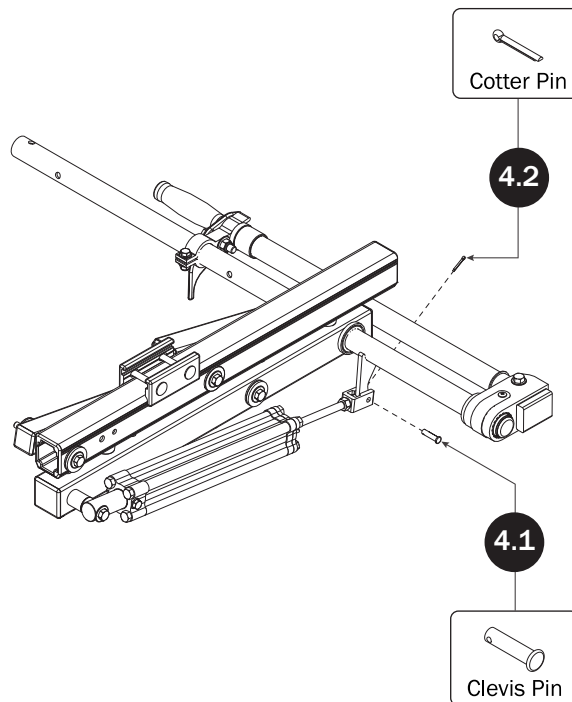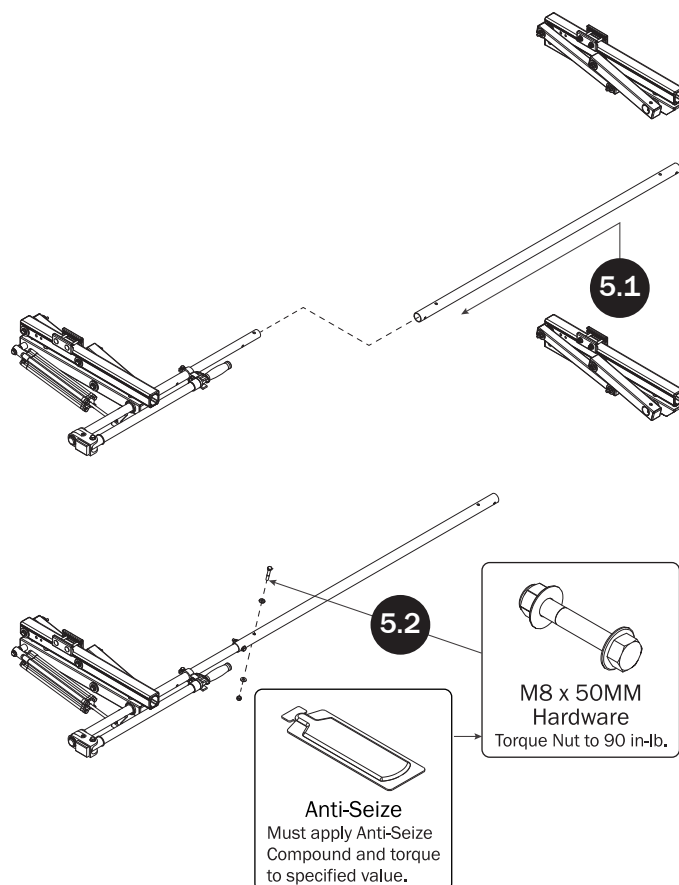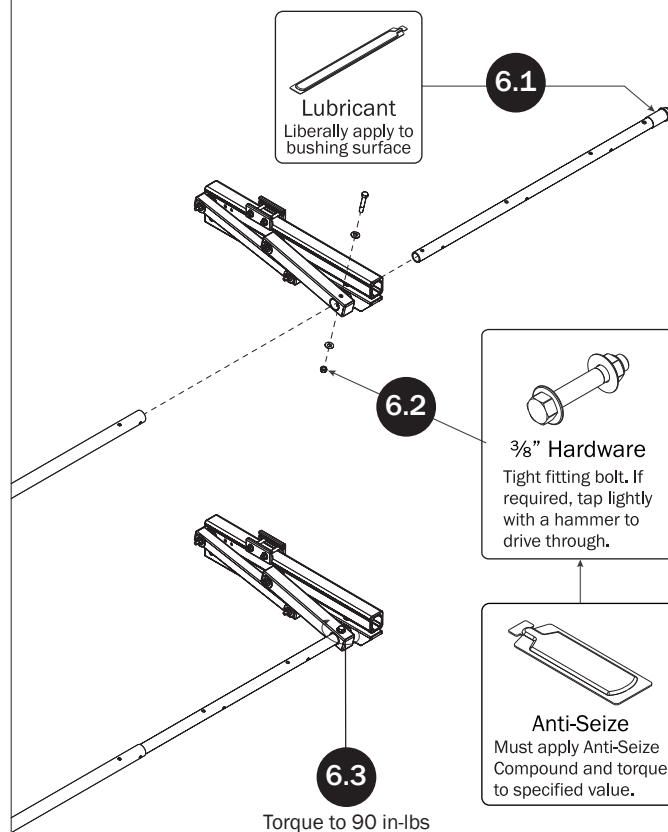REAR DRIVE SHAFT**CYLINDER HARDWARE****CONNECTING BAR****FRONT DRIVE SHAFT**

CONNECTING BAR FASTENERS

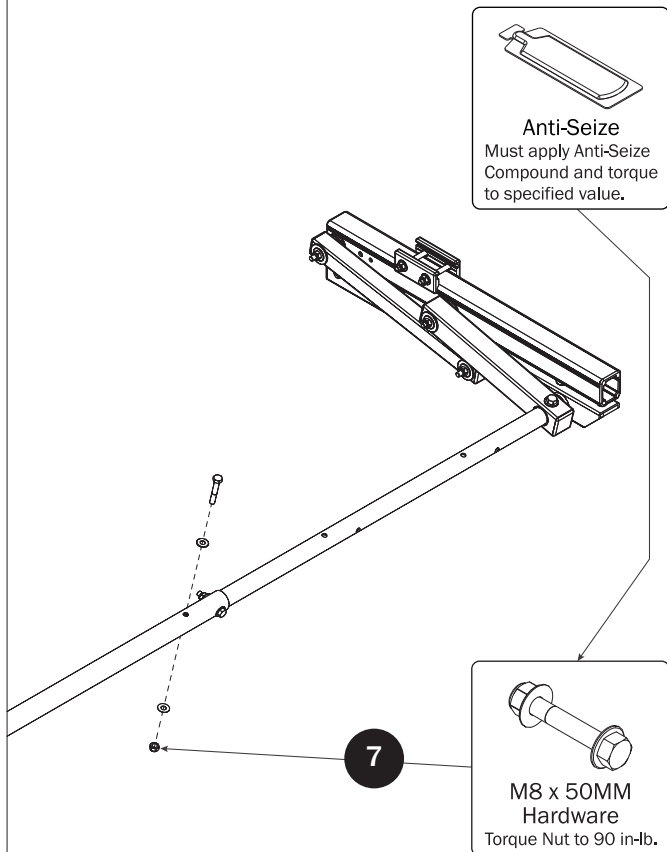


L POSTS

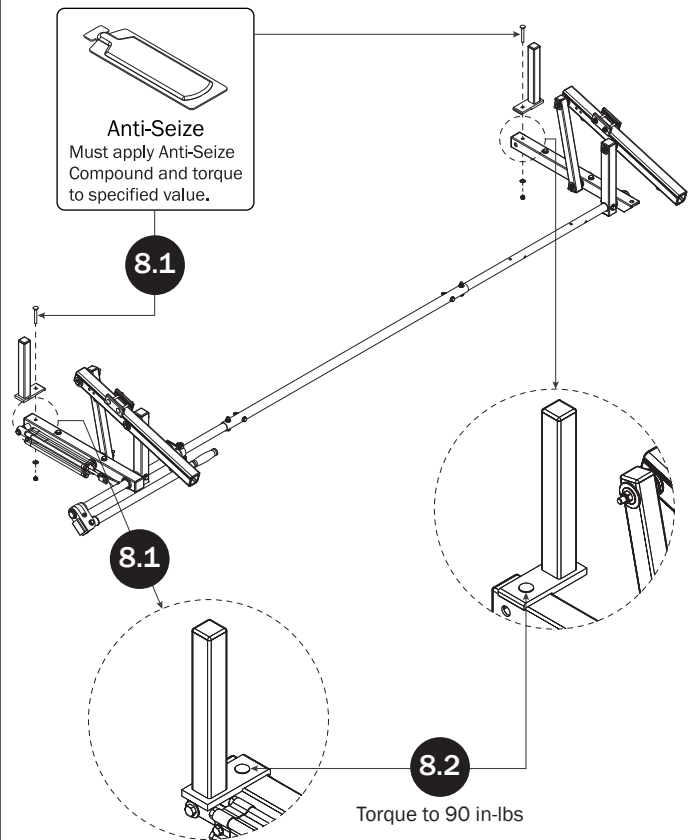


Z POSTS


SEE QUICK START GUIDE FOR ADJUSTMENTS

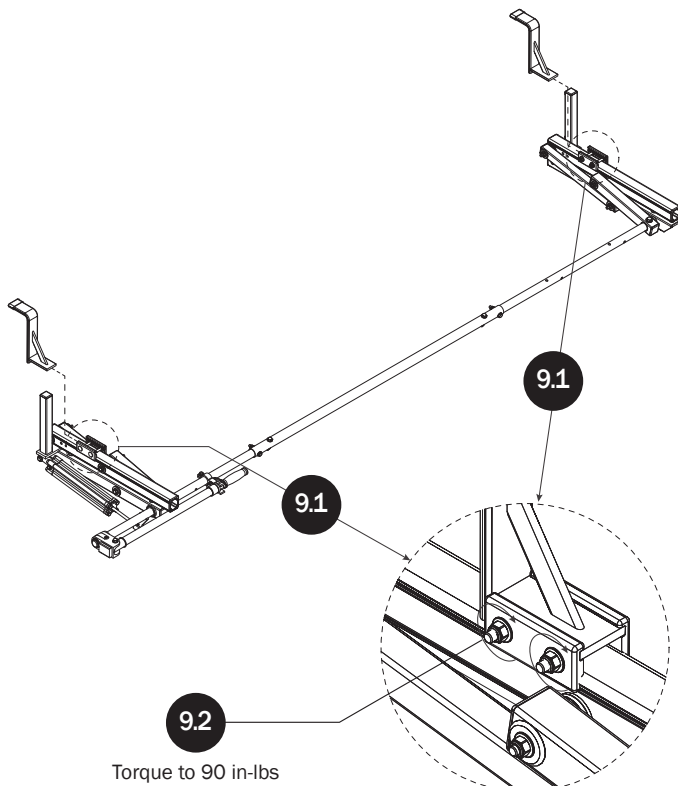

DRIVE SHAFT SEALING

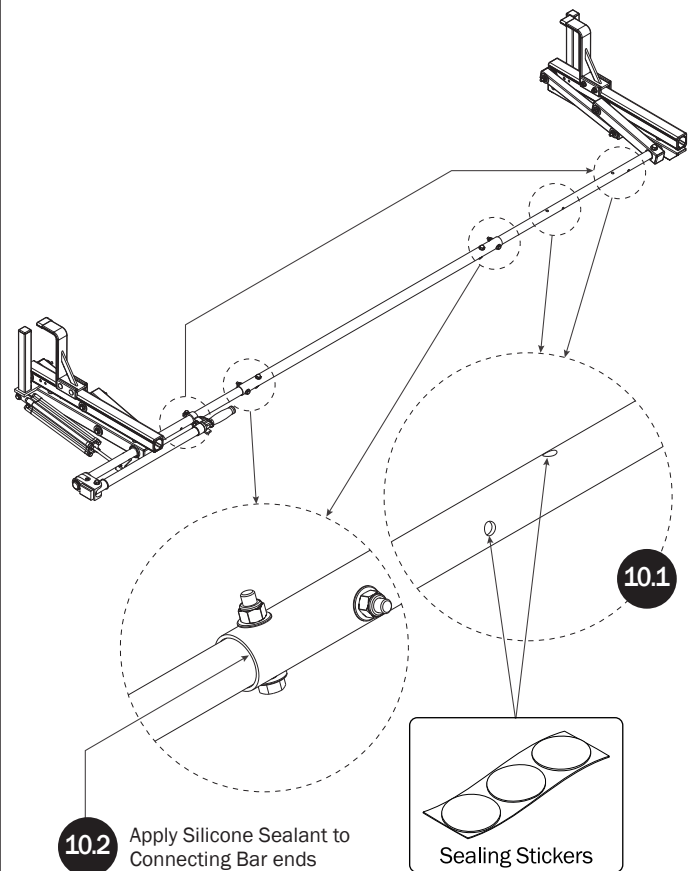

CYLINDER ADJUSTMENT

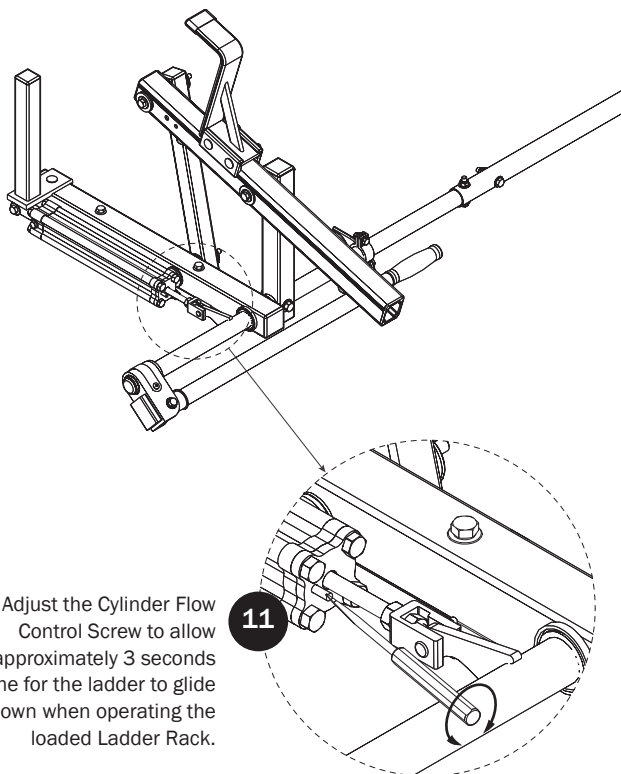

USAM-UXR0003-US01 Rev-A 1019