



PRIME DESIGN™

A Safe Fleet Brand

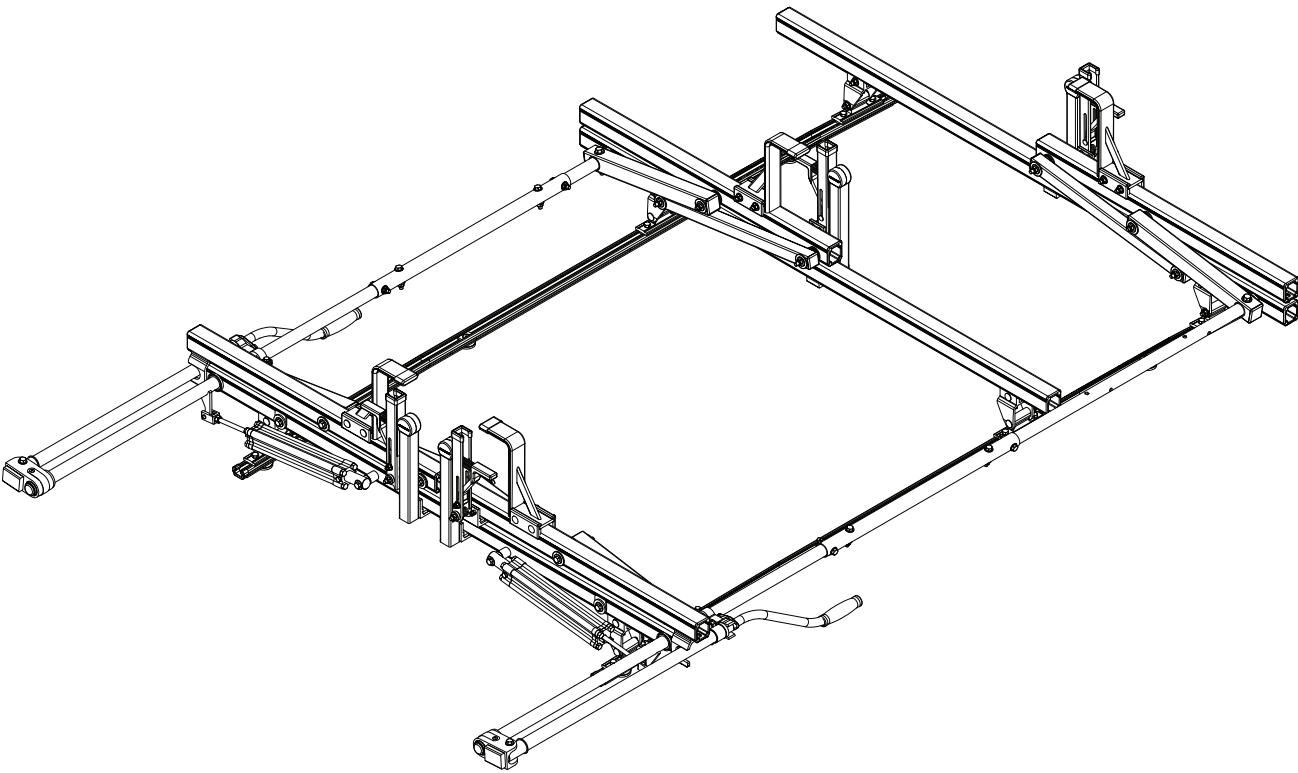

VN200
VPR3

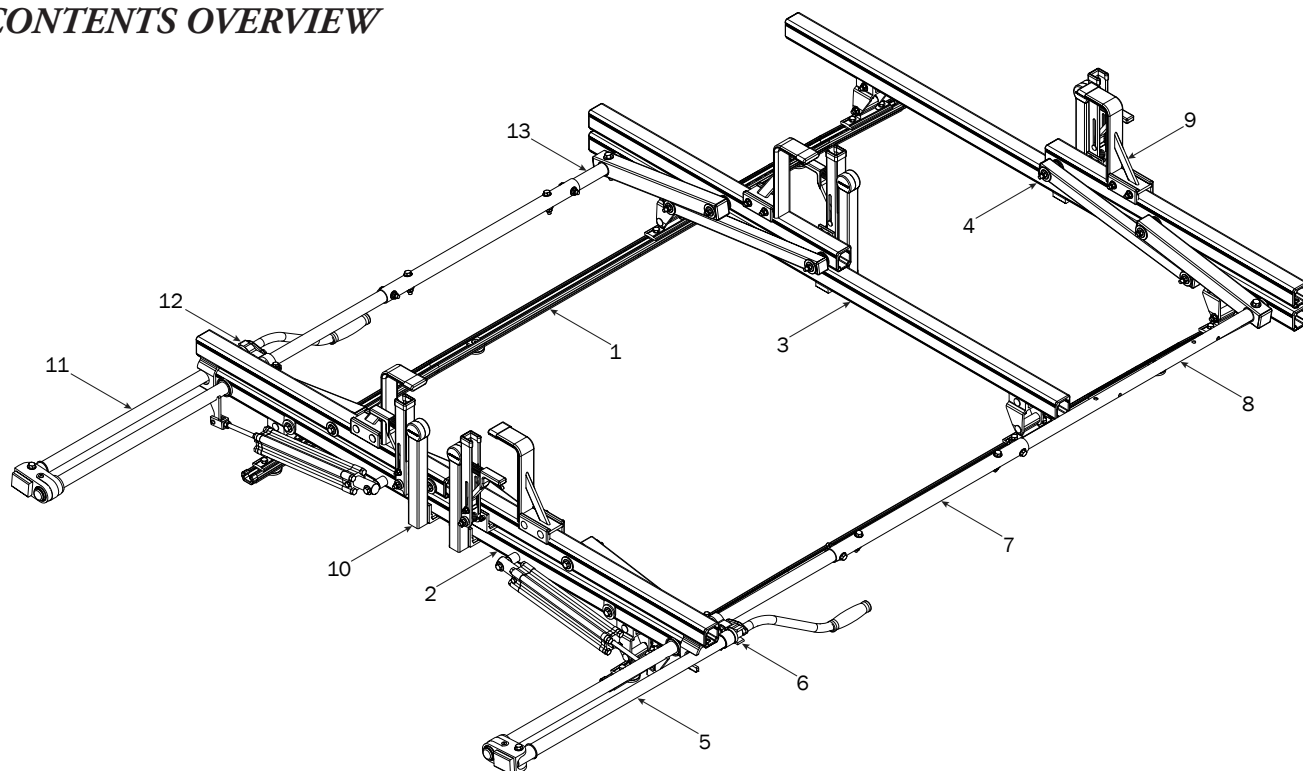


1—FBM3-0045..... (Qty 1)

Channels w/Hardware


Channels (2X)




End Caps (4X)

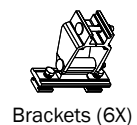


Brackets (6X)

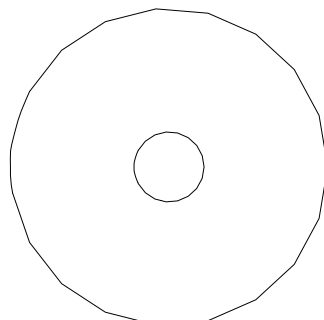


Nylon Washer (6X)

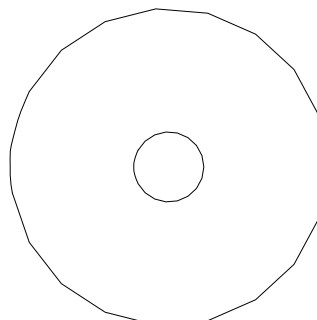

Foam Gasket (6X)

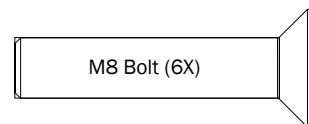


M8 Bolt (6X)

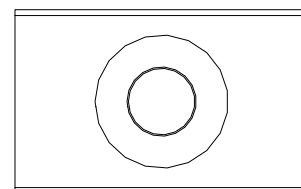


Flex Channel Connector (6X)


2—Rear Crossbar Assembly..... (Qty 1)

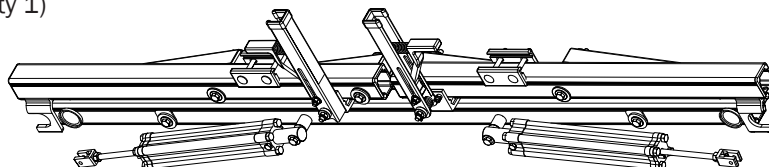


3—Center Crossbar Assembly..... (Qty 1)

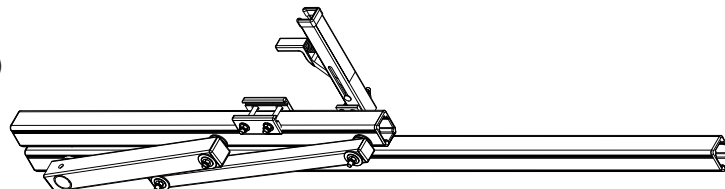

4—Front Crossbar Assembly..... (Qty 1)

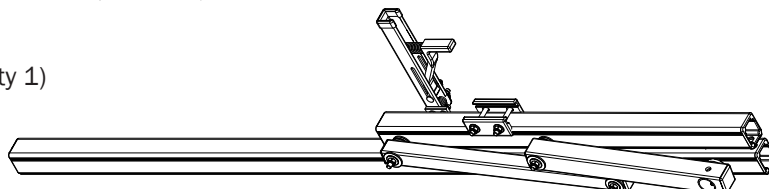


5—Rear Drive Shaft..... (Qty 1)
RH, B4 Version, 46.00"




6—Handle Latch Assembly (Qty 1)
Right Hand




7—Connecting Bar..... (Qty 2)
24.00"




8—Front Drive Shaft..... (Qty 1)
B Ver, 35.75"




9—Z Post (Qty 4)
Adjustable, 7.25"



10—L Post..... (Qty 4)
Gen2, Roller Cap , 9.25"




11—Rear Drive Shaft..... (Qty 1)
LH, B4 Version, 46.00"











12—Handle Latch Assembly (Qty 1)
Left Hand



13—Front Drive Shaft..... (Qty 1)
B Version, 11.75"



14—HKT-8163-Rotation Hardware Kit (Qty 2)
(Not called out in Overview)

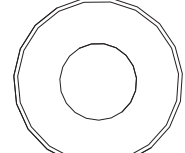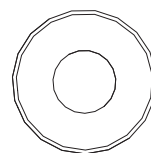



M8 Lock Nut (5X)

3/8" Lock Nut (2X)


5/16" Flat Washer (10X)

3/8" Flat Washer (4X)

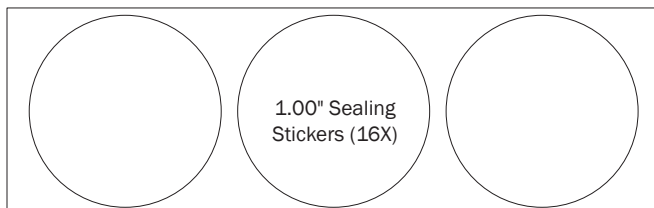

FBM3-0045
CHANNELS TO ROOF


- 0.1** Position Channels as shown below in Fig.1

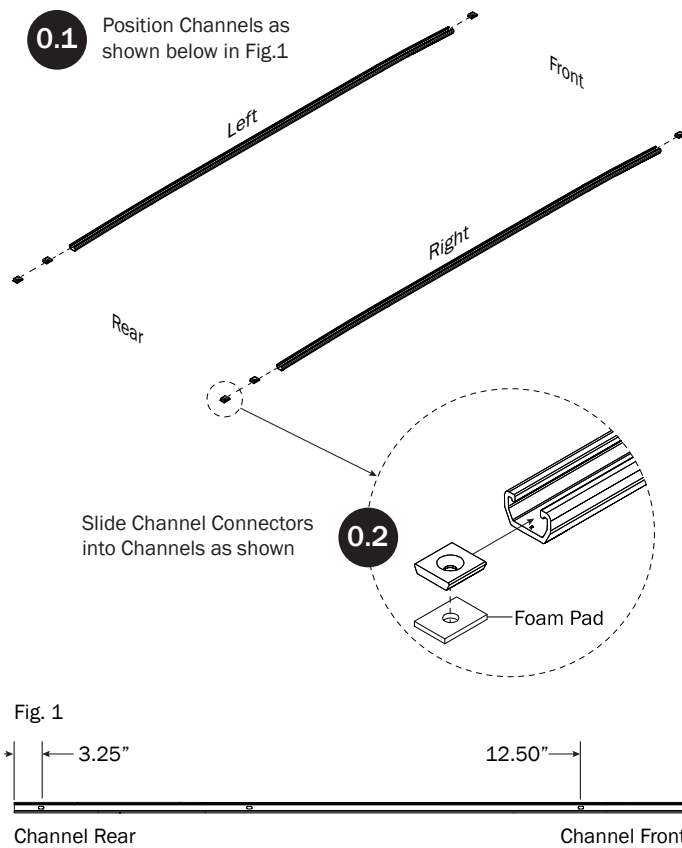**0.2**


Slide Channel Connectors into Channels as shown

Foam Pad

- 0.3** Install Channels into roof Channel groove as shown

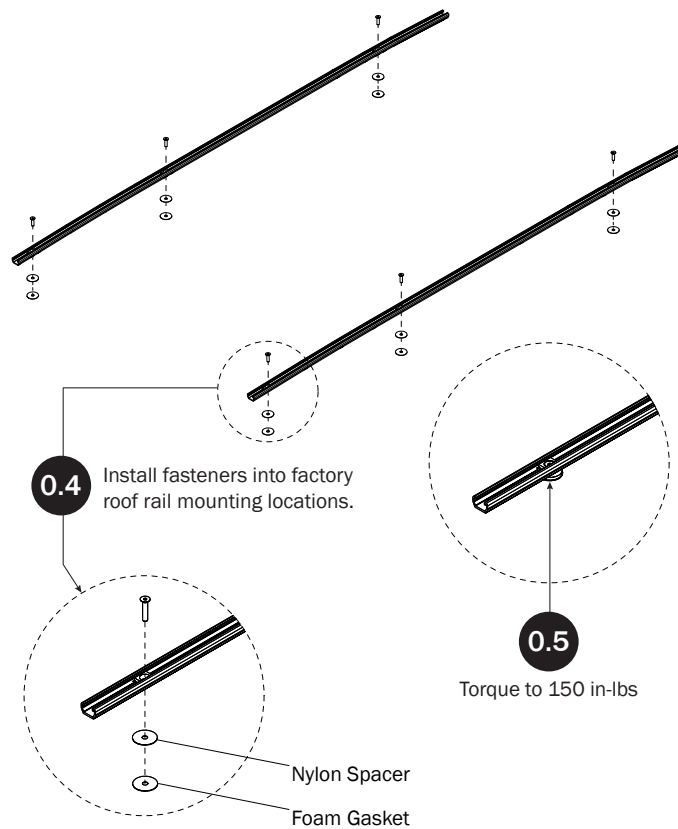


- 0.7** Set to distances then torque Rear Bracket nuts to 90 in-lbs

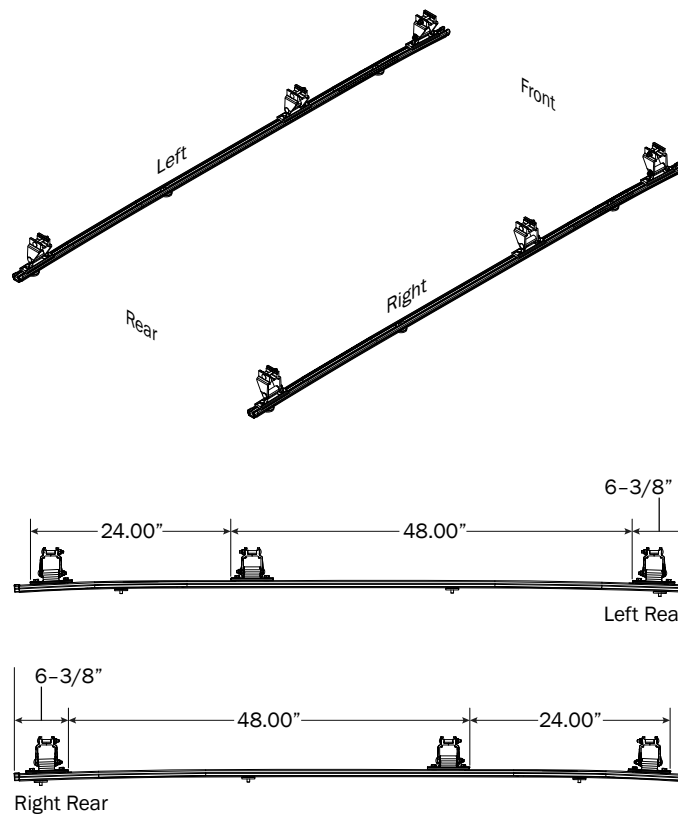
**0.6**

Loosen bolts


RIGHT ROTATION ASSEMBLY SEQUENCE

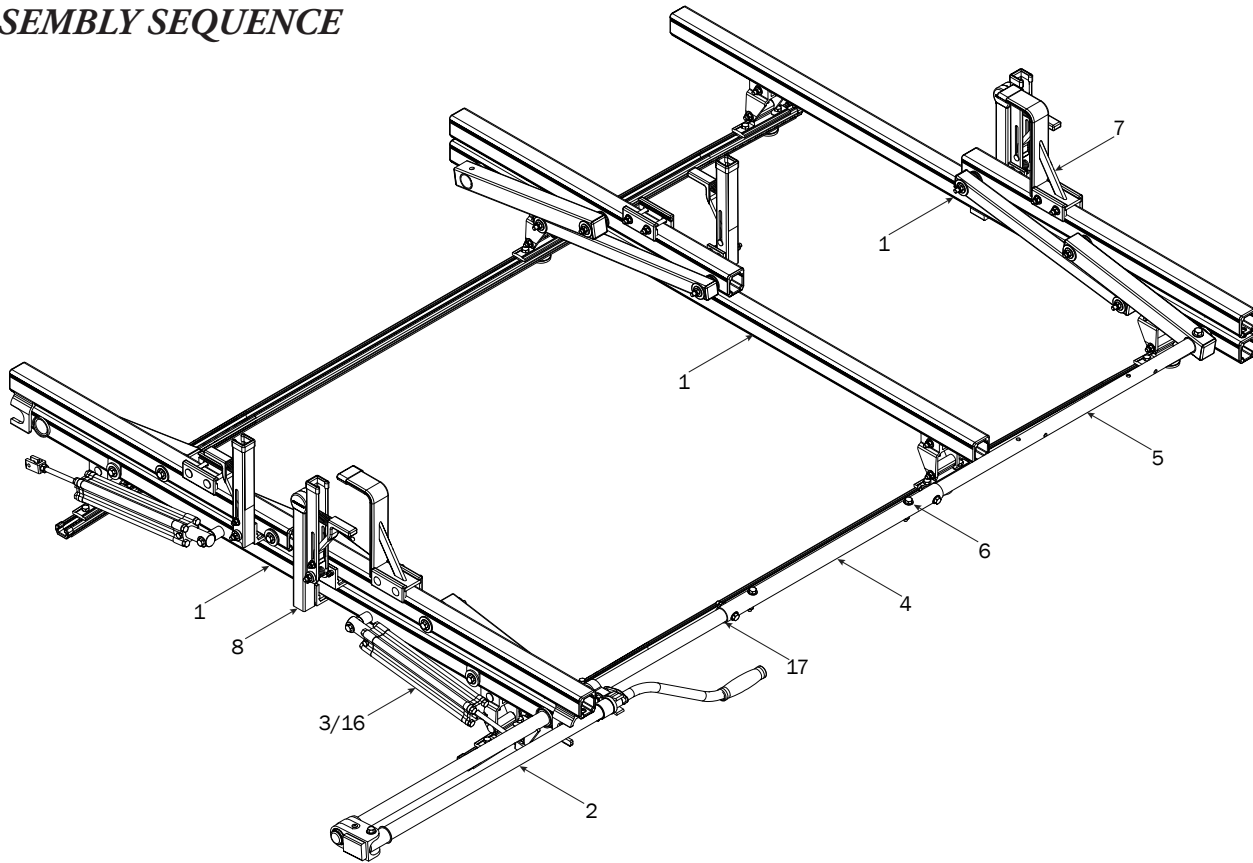


CROSSBARS

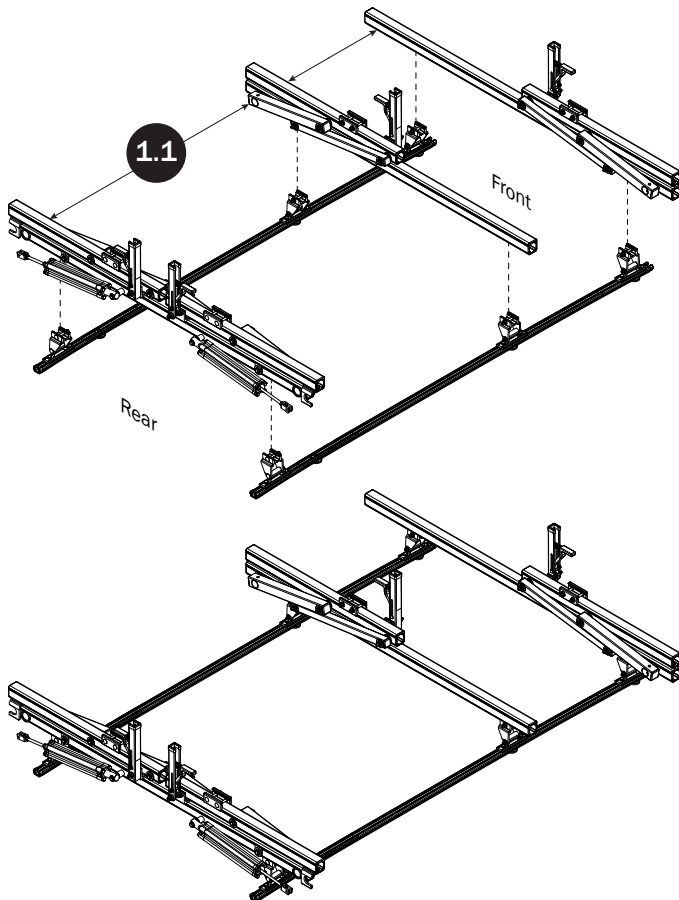


CROSSBAR ADJUSTMENT

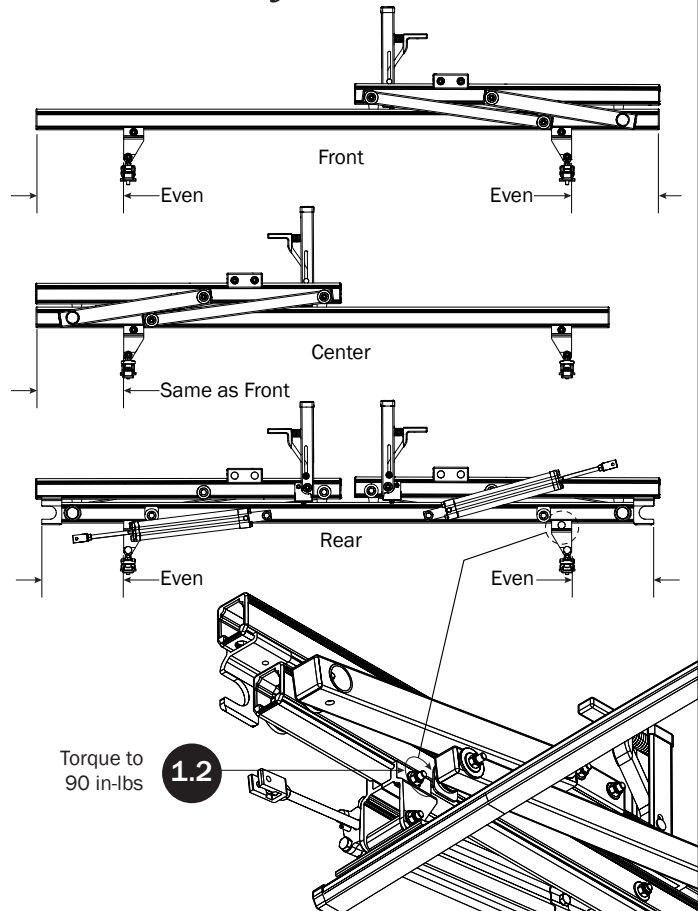


REAR DRIVE SHAFT

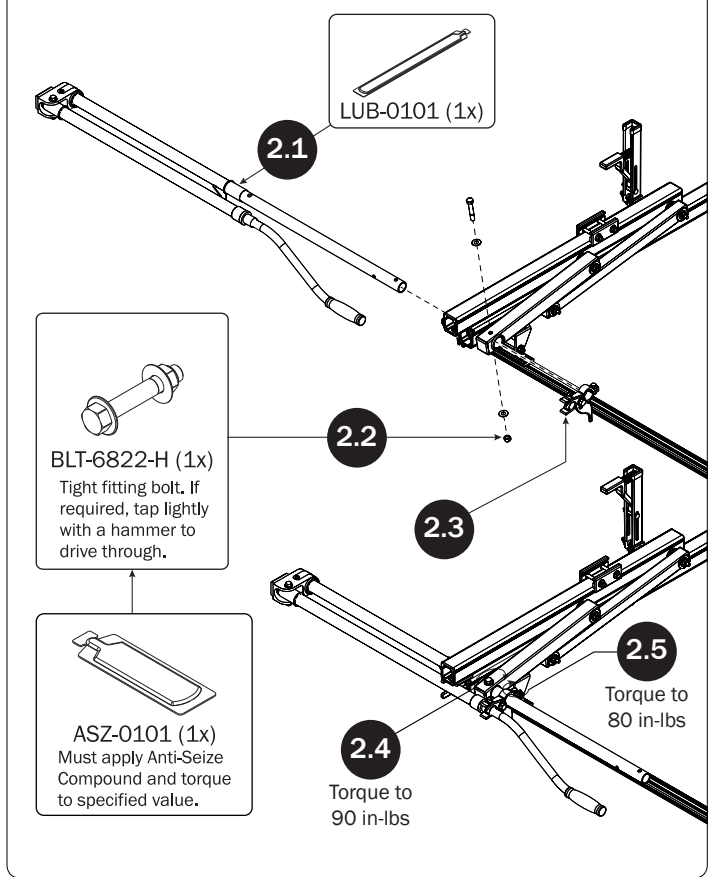


CYLINDER HARDWARE

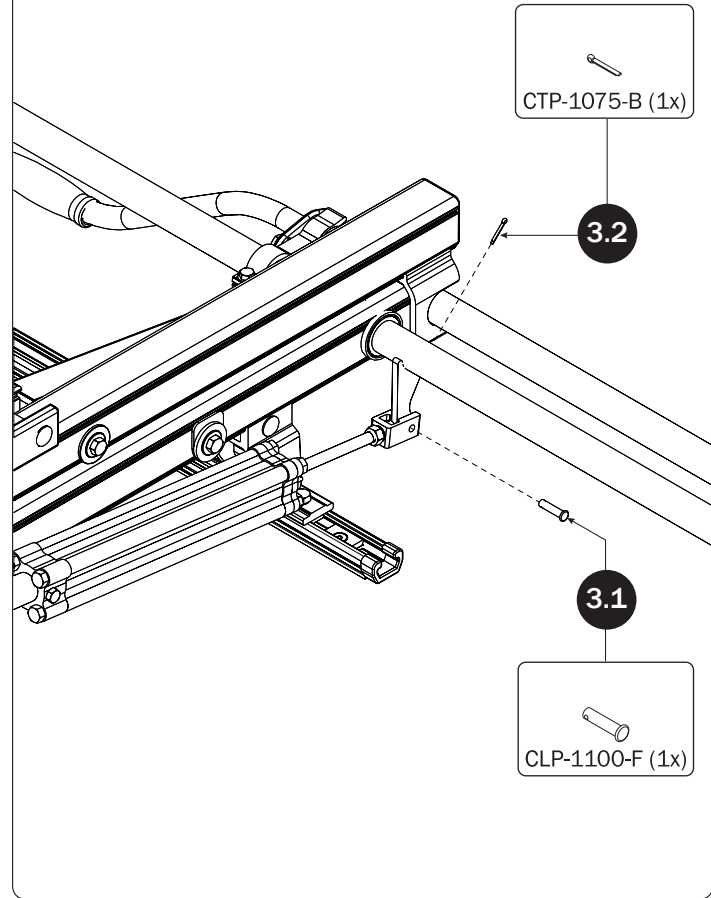


CONNECTING BAR

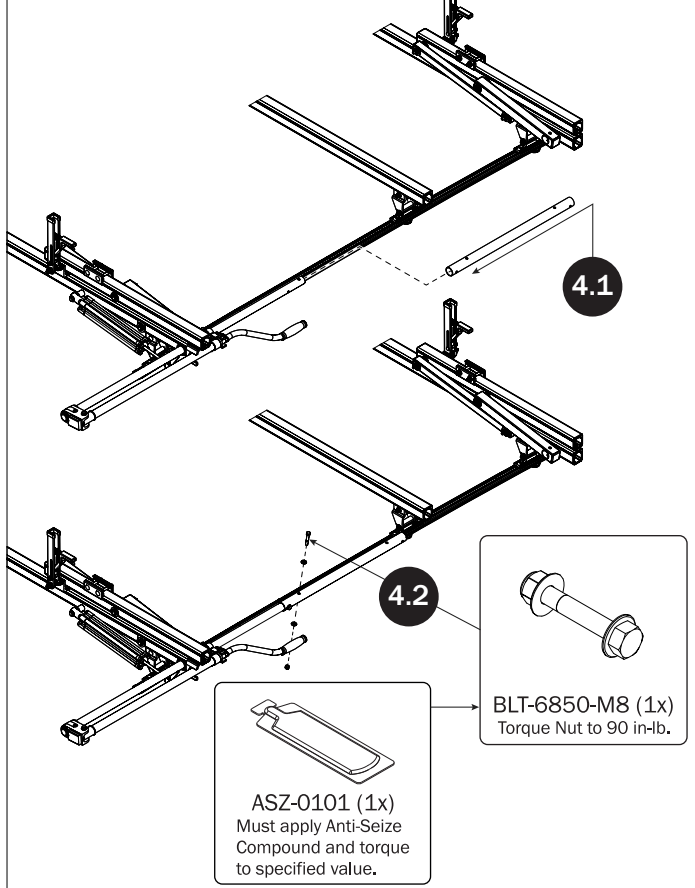

FRONT DRIVE SHAFT

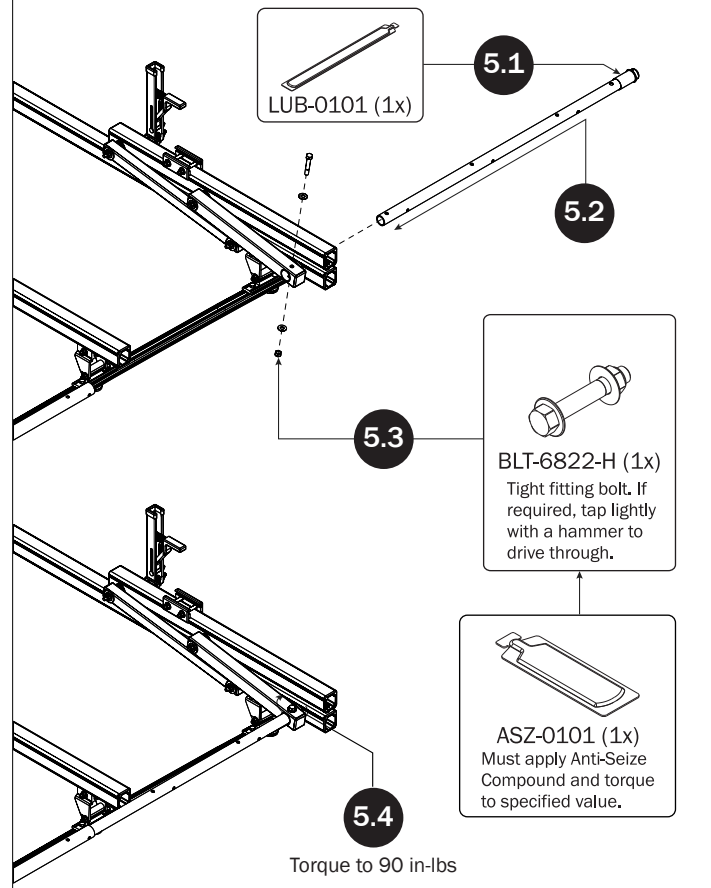


CONNECTING BAR FASTENERS

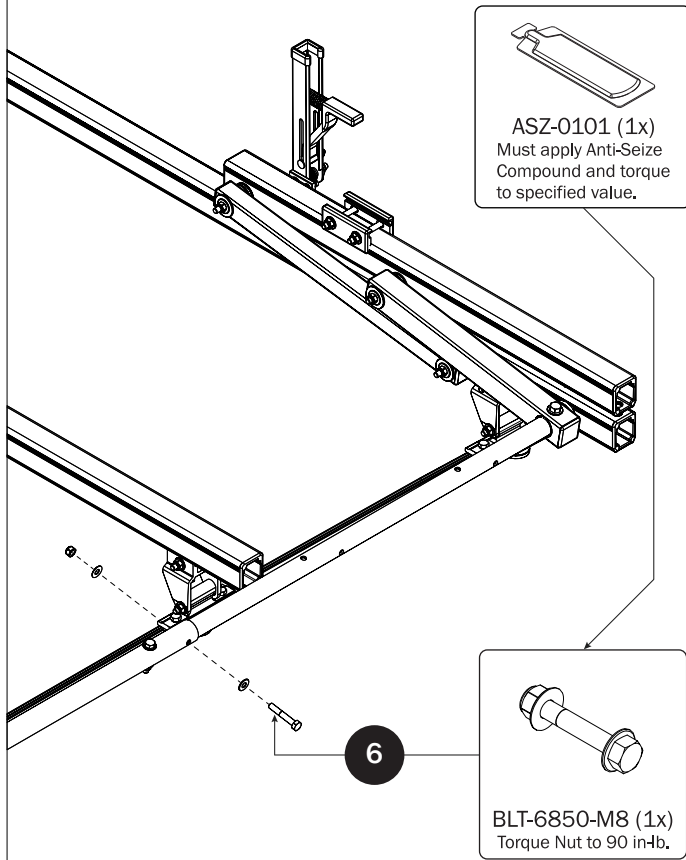


Z POSTS




SEE QUICK START GUIDE FOR ADJUSTMENTS

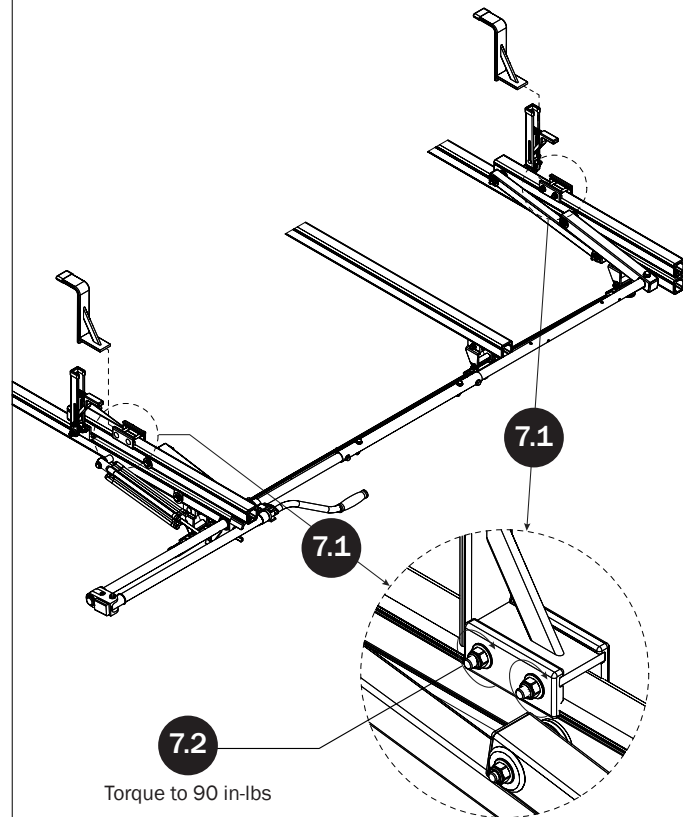


L POSTS

SEE QUICK START GUIDE FOR ADJUSTMENTS

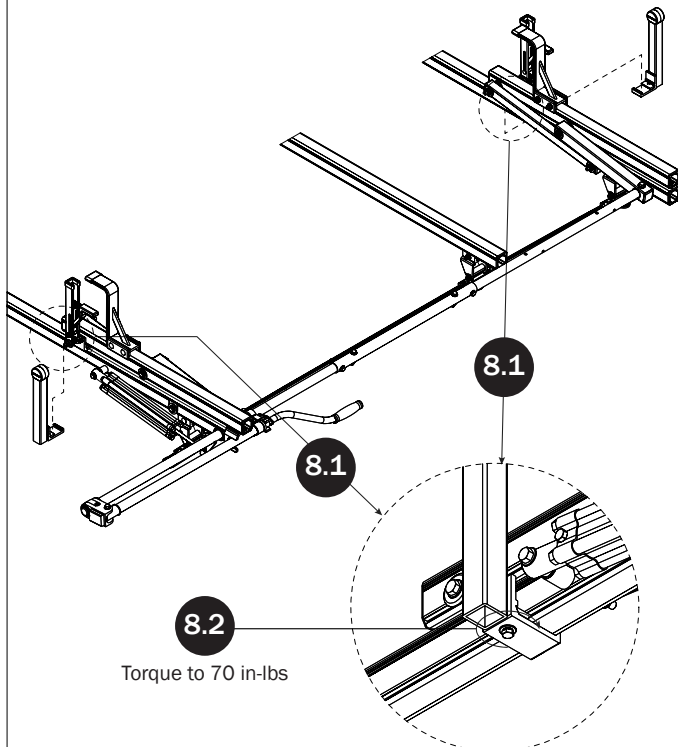


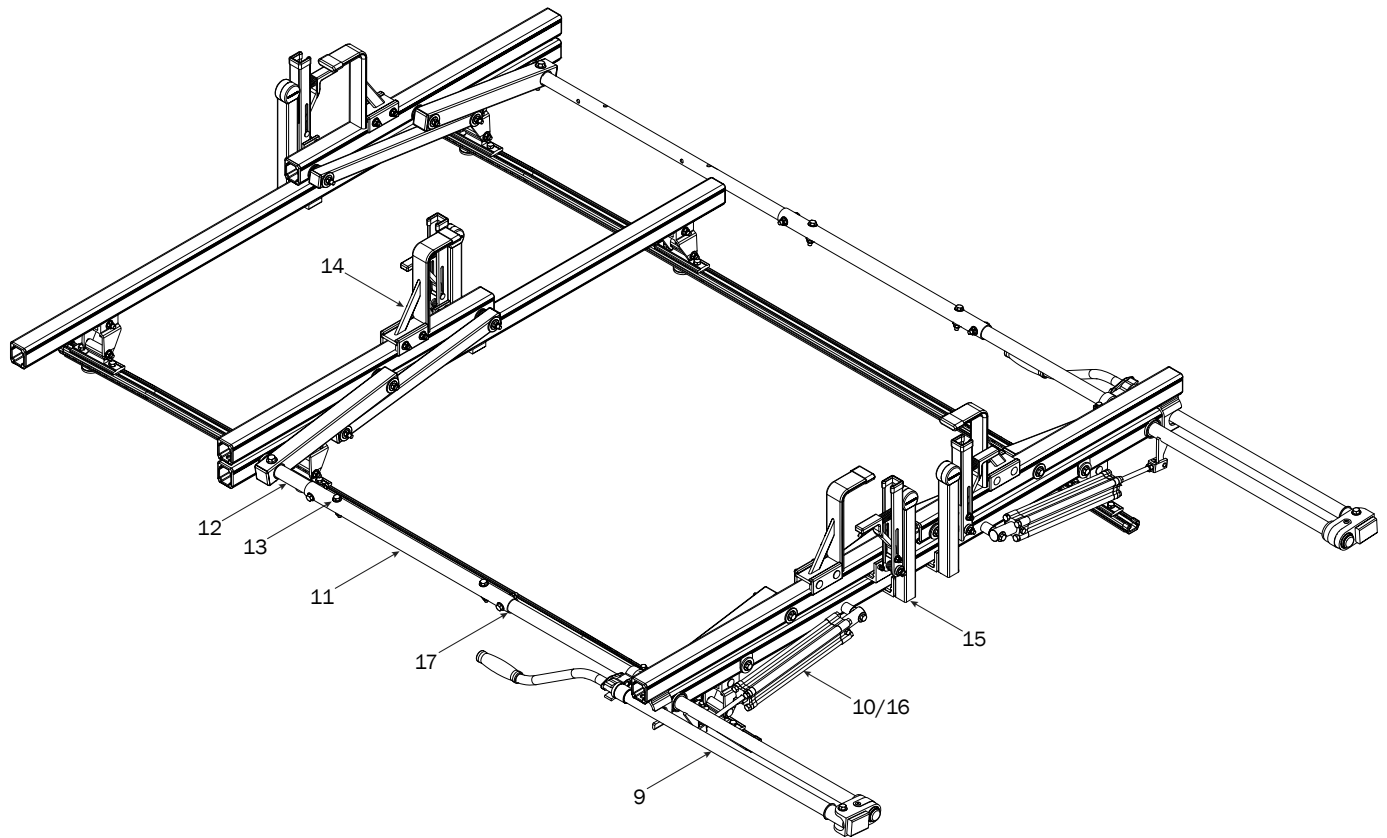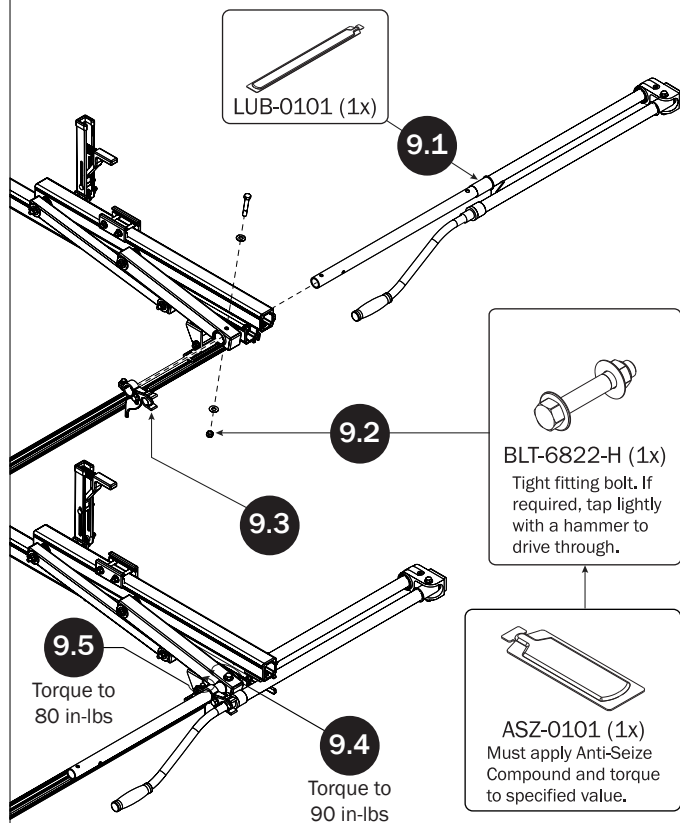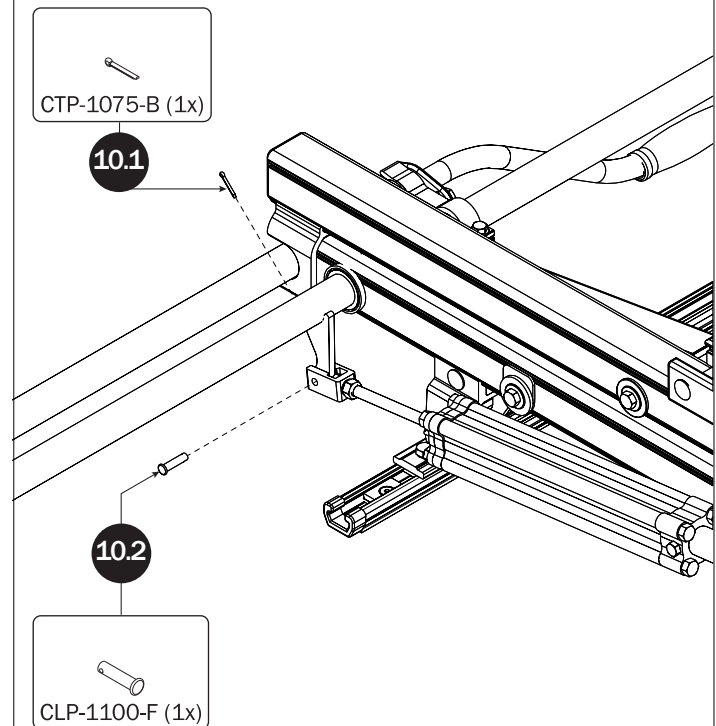LEFT ROTATION ASSEMBLY SEQUENCE**REAR DRIVE SHAFT****CYLINDER HARDWARE**


CONNECTING BAR

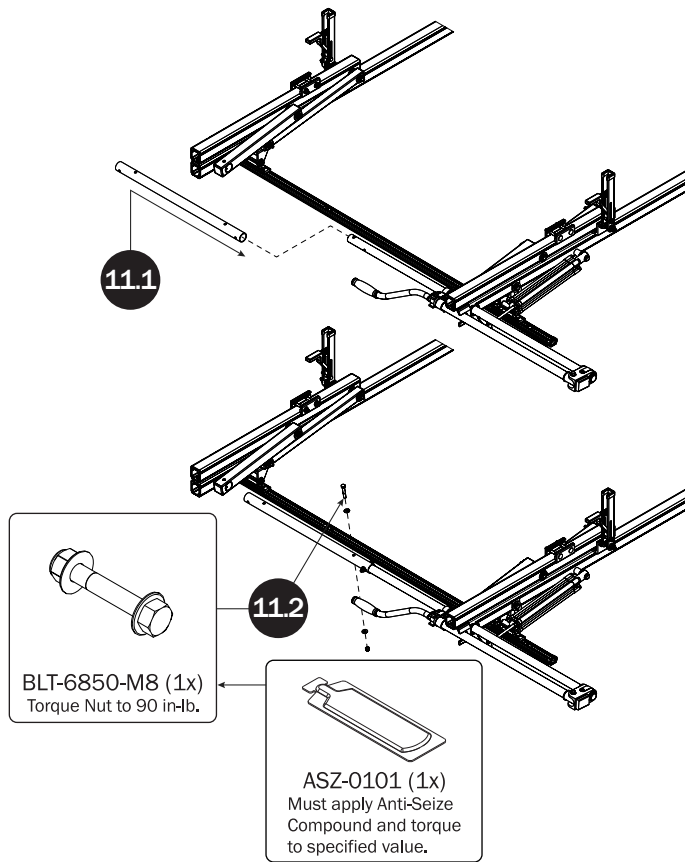

FRONT DRIVE SHAFT

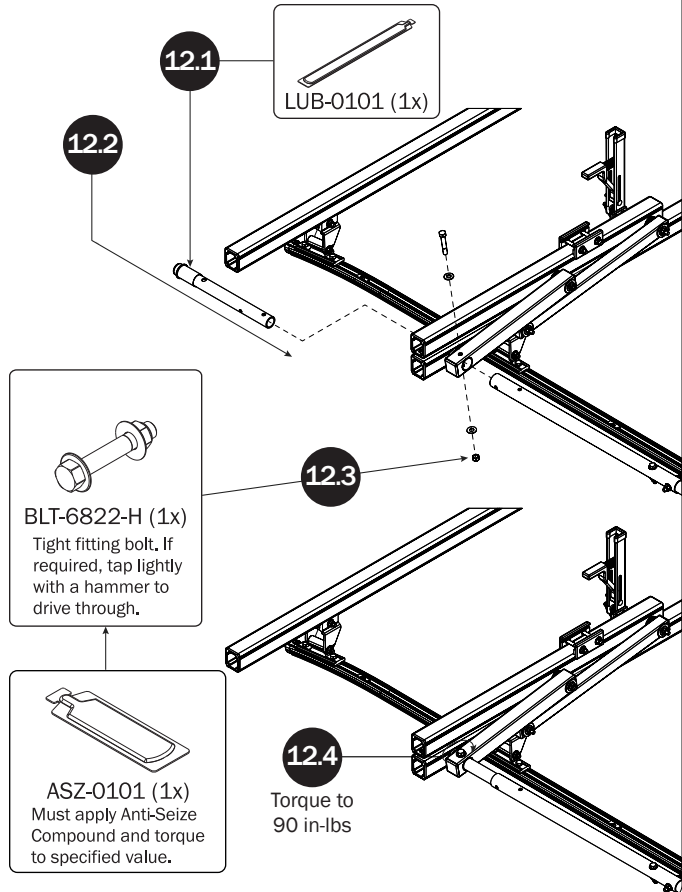


CONNECTING BAR FASTENERS

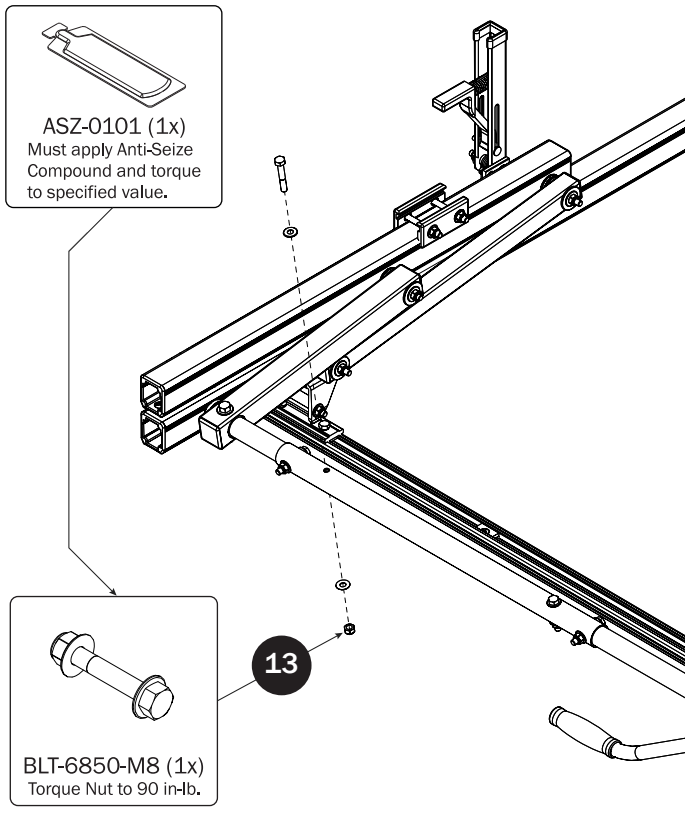




Z POSTS

SEE USER GUIDE FOR ADJUSTMENTS

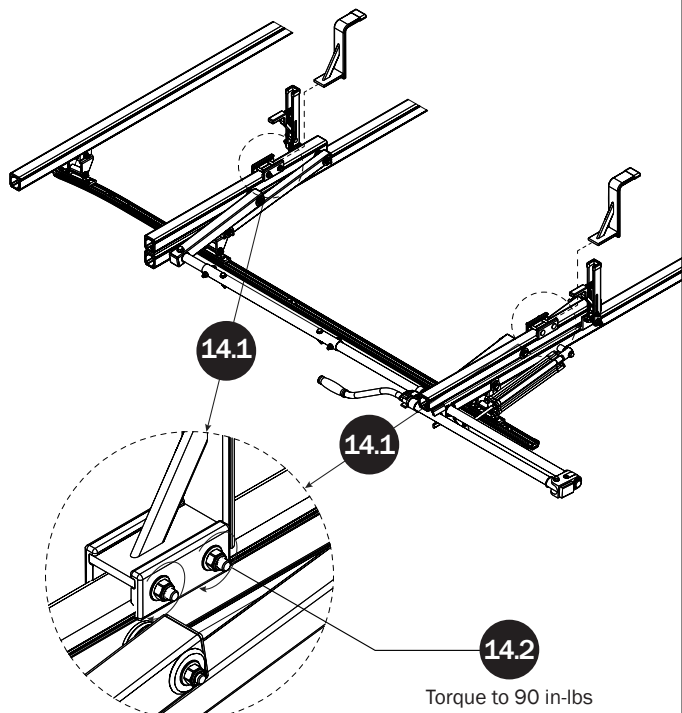

L POSTS

SEE USER GUIDE FOR ADJUSTMENTS

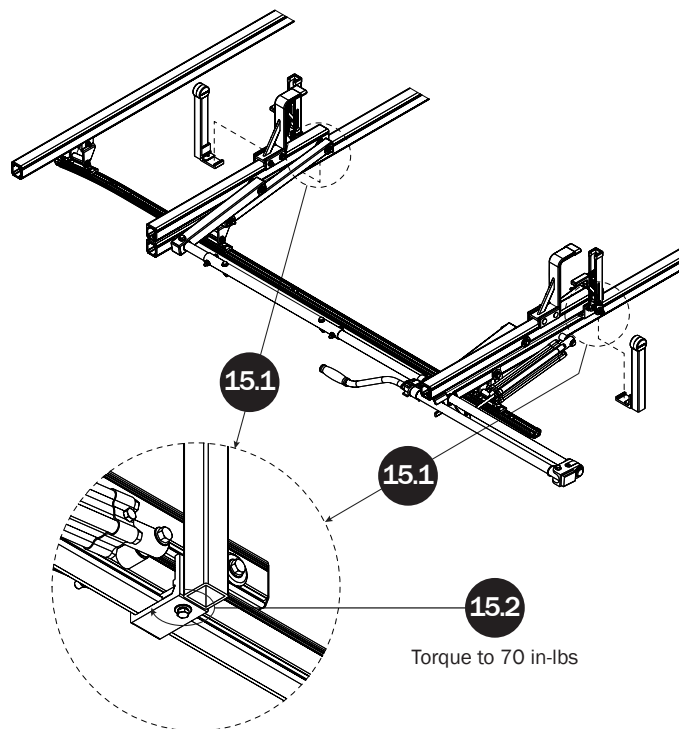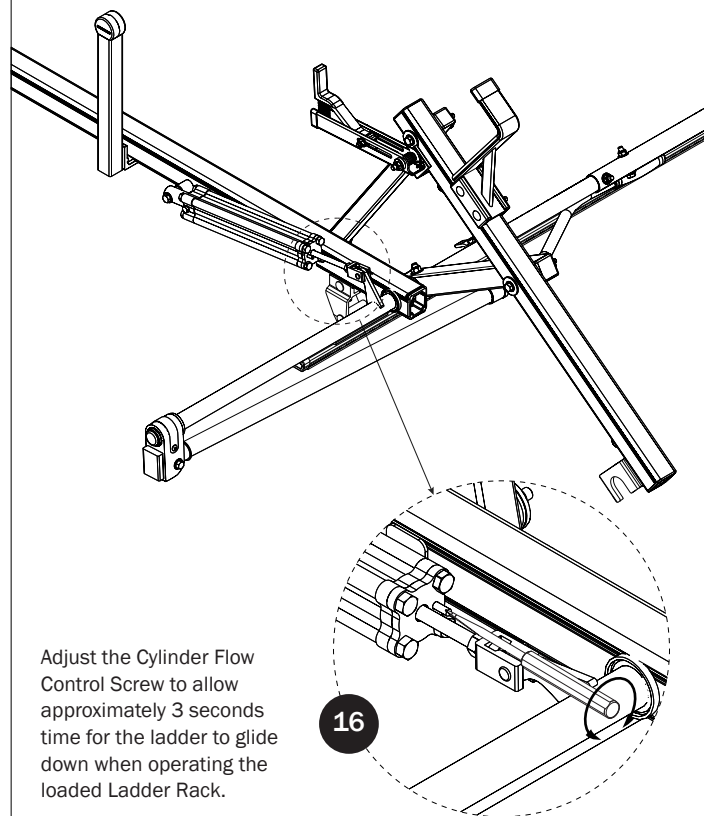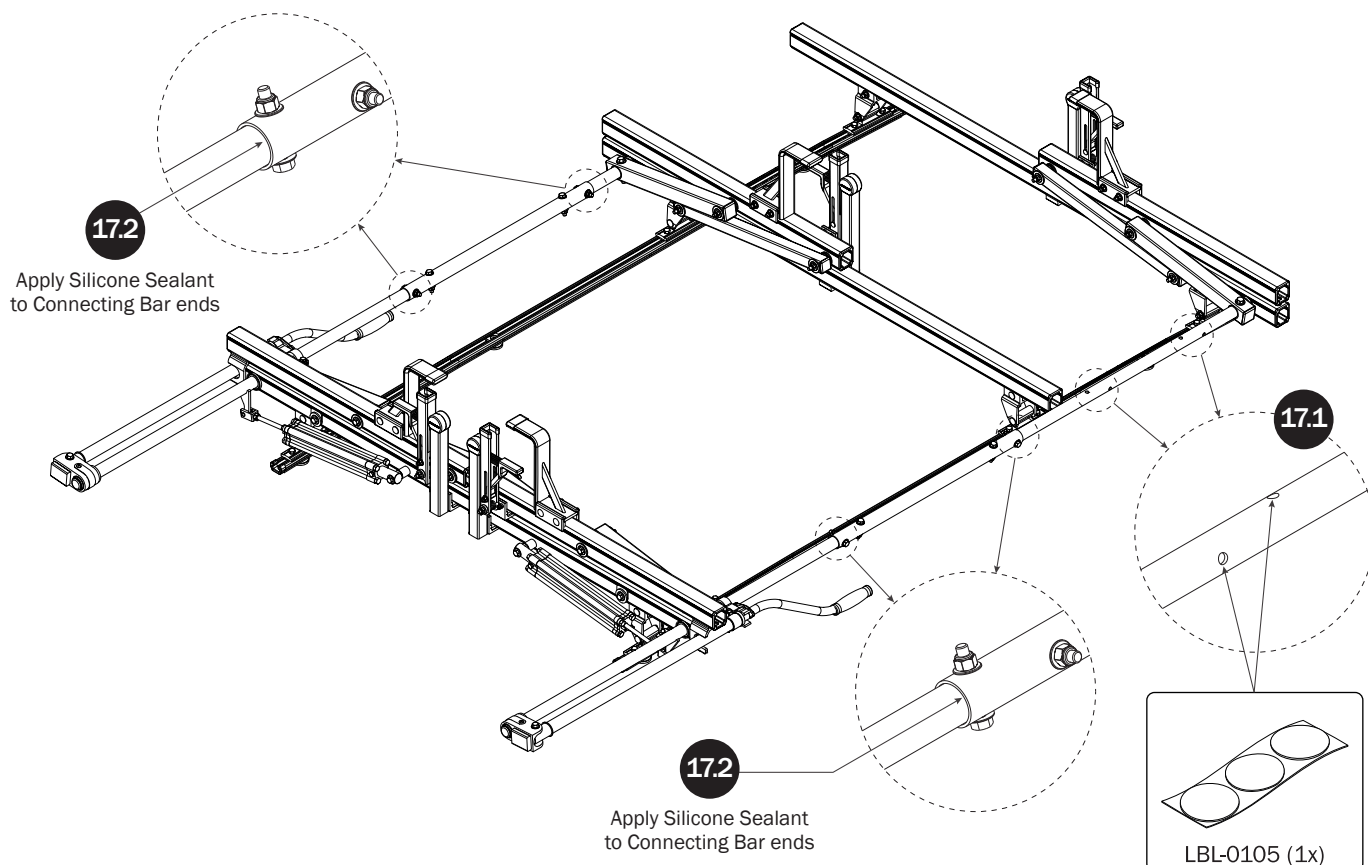**CYLINDER ADJUSTMENT****DRIVE SHAFT SEALING**

Page Intentionally Left Blank

