


# PRIME DESIGN™

A Safe Fleet Brand

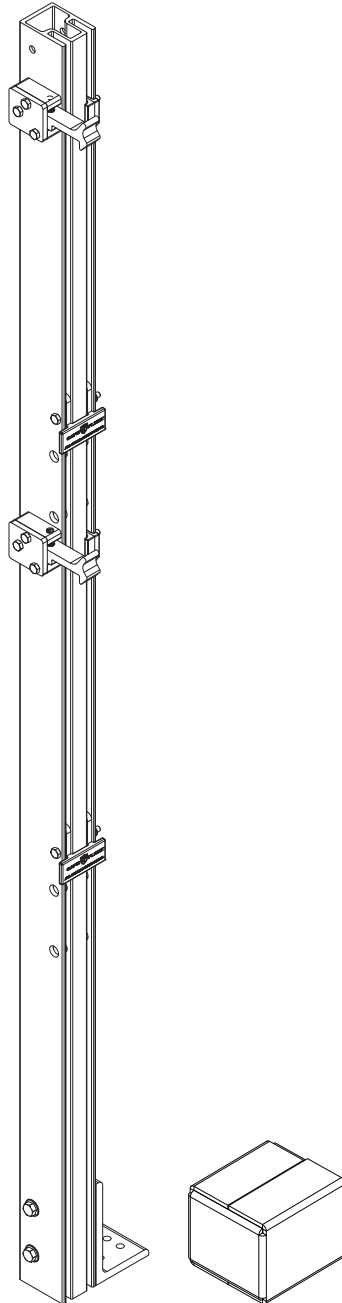

2 Person Lift Recommended

## Cantilever Shelving Upright Assembly

Page 2 & 3

Packaging Contents & Requirements

Page 4-6

Assembly Instructions

# CSU-3014-3015

**CONTENTS OVERVIEW**

1—Cantilever Shelving Upright ..... (Qty 1)



Part numbers and height specifications:

CSU-3015: 60" SUPPORT FOR 18" SHELVING


CSU-3014 70" SUPPORT FOR 18" SHELVING

\* Check your vehicle layout configuration and OEM  
for correct product.


2—HKT-0204 ..... (Qty 1)




Mounting Leg Bracket (2X)

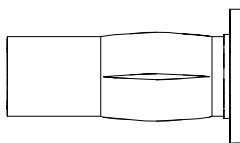

Plus Nut (1X)

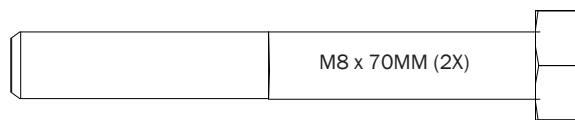

M8 x 70MM (2X)

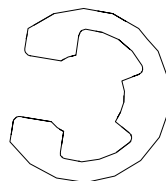


Retain Ring (8X)




Hinge Pin (4X)



Locknut (1X)

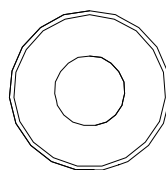

Flat Washer (4X)






Lock Washer (2X)



M8 x 25MM (2X)

NOTE: Reserve the following Hardware  
from HKT-0204 for installing your Upright  
into your Cantilever Mounting System  
(sold separately).

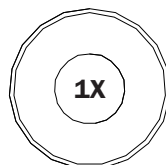

## ASSEMBLY REQUIREMENTS




**INSTALLER NOTE:** It is important to correctly follow these assembly instructions. These instructions for assembly are provided by the manufacturer at time of Cantilever Shelving delivery, and reflect the technical specifications applicable at the time of writing.


- These instructions are subject to change if the manufacturer revises the parts and/or production of the subsystems and accessories used in the brand's vehicles. Following the instructions for assembly will ensure proper installation of the product. The manufacturer will not be held liable if these instructions are not followed.
- The addition of parts and/or components not original to this Cantilever Shelving are discouraged. Use only OEM supplied parts.
- Consultation of the OEM vehicle may be required during assembly to avoid vehicle damage. Ensure bolt locations will not damage any critical parts of the vehicle—i.e. gas tank, wiring harnesses, or hoses—before drilling.

### REQUIRED

Plus Nut Applicator Tool

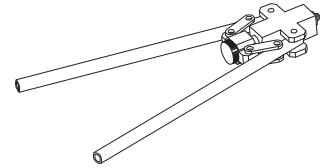


Torque Wrench w/13MM Socket

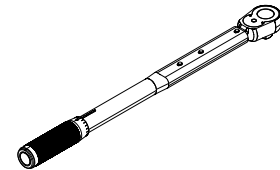


### RECOMMENDED

"E-Style" Retaining Ring Applicator Tool




## SHELVING ASSEMBLY SEQUENCE


- 1 Install a Retain Ring on one side of each Hinge Pin (4 total per Upright).

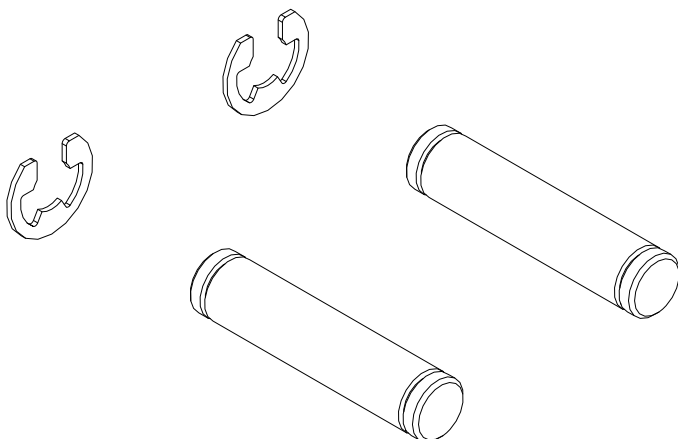

- 2 Install a Hinge Pin and Retain Ring in the holes shown below.

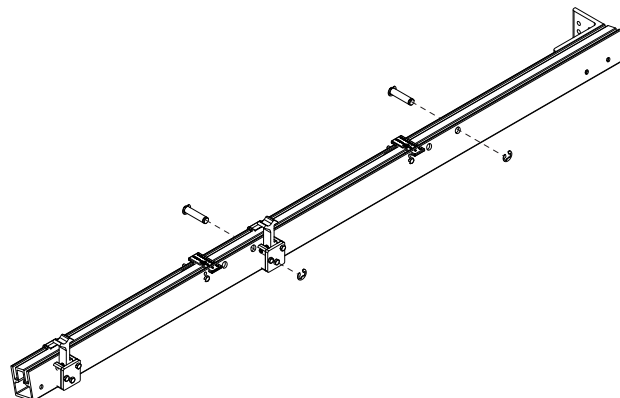

- 3** Attach upper Shelving to the supports as shown.

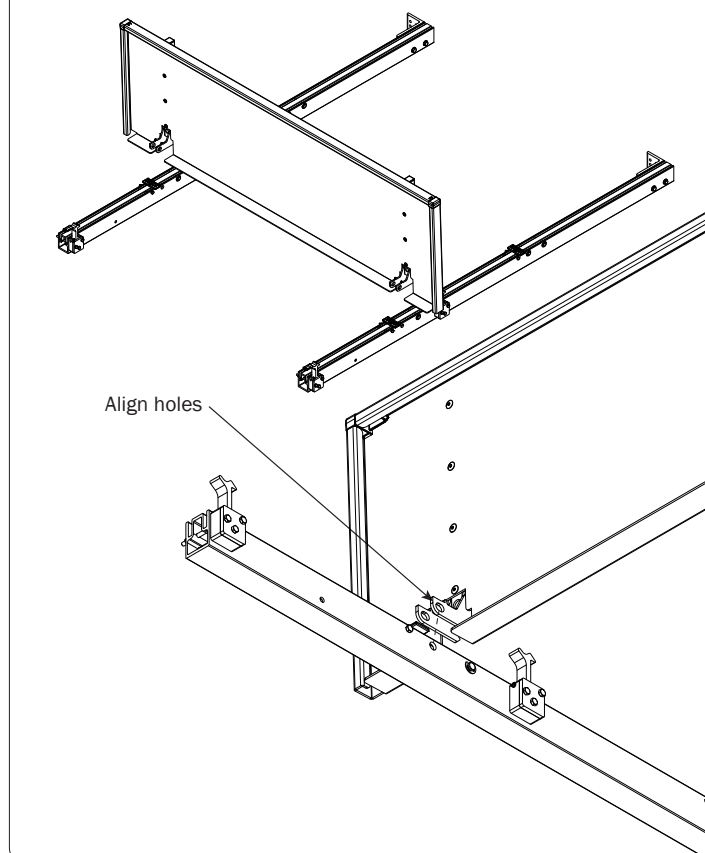

- 4** Install Hinge Pin and Retain Ring as shown.

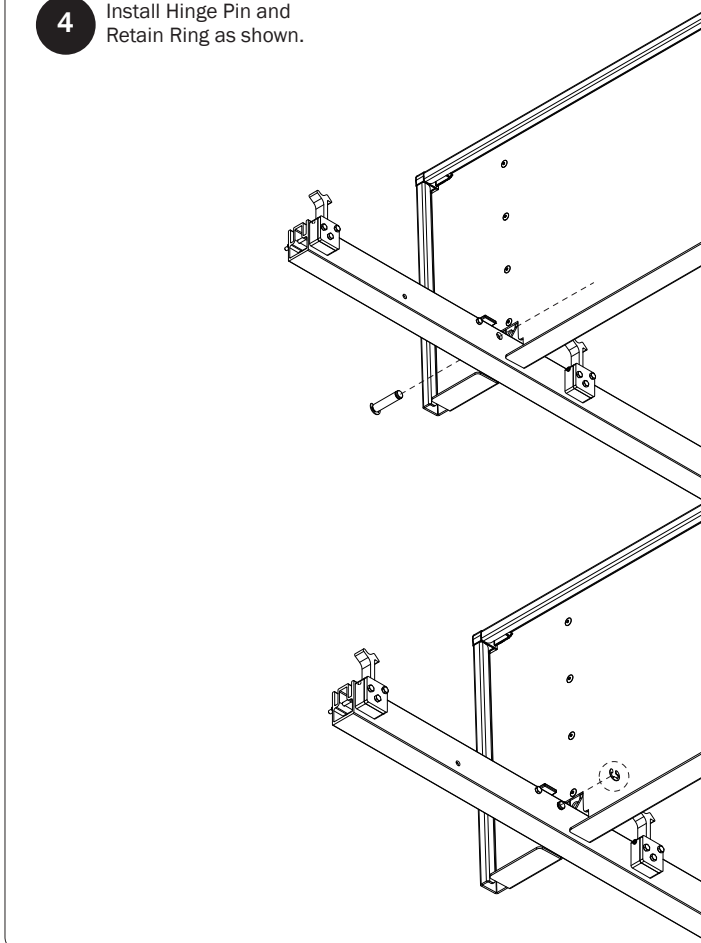


Figure 1



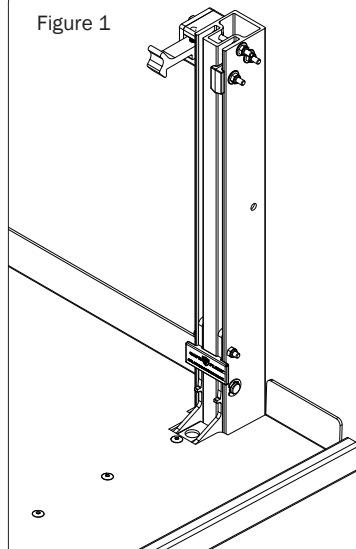


Figure 2

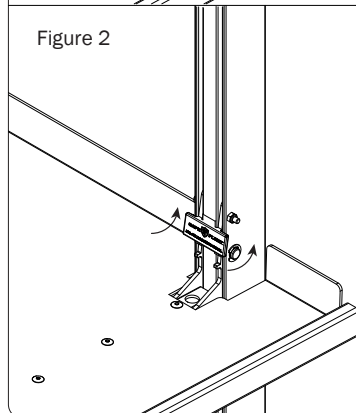



- 6** Repeat Steps 3–5 to install the lower Shelf.

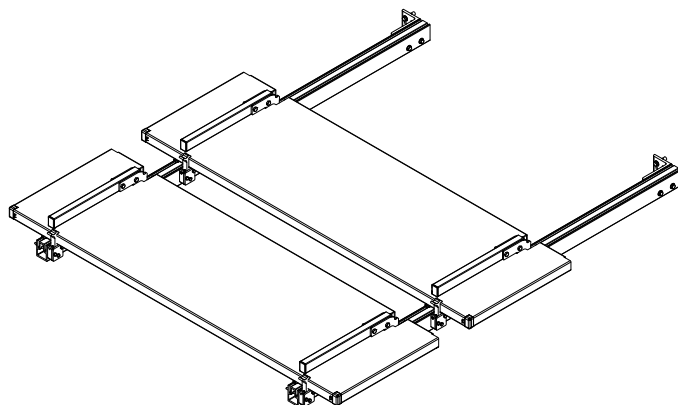


7

If not pre-installed: attach the Mounting Leg Bracket to your Upright as shown according to your configuration and torque to 90 in-lbs.

NOTES: Mounting Leg Bracket construction varies per configuration. The view below is for illustrative purposes only. Install per your vehicle/OEM instructions and layout needs.

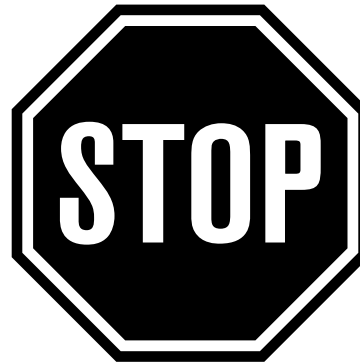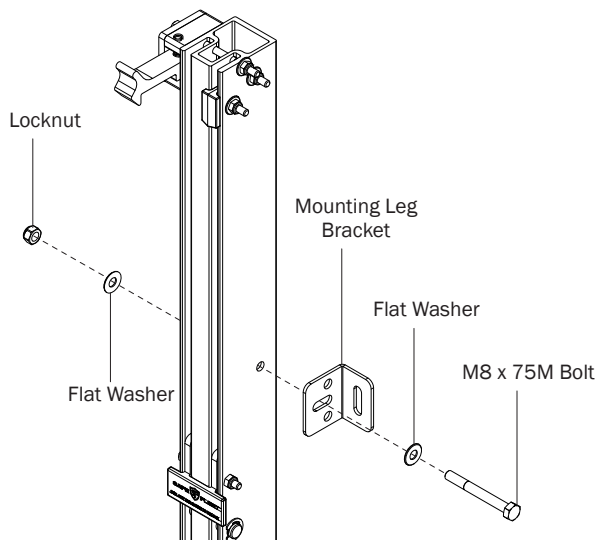


Cantilever Shelving is now ready to install into your Vehicle. Refer to your Cantilever Shelving Mounting Assembly Manual to mount Cantilever Shelving to your Vehicle interior wall. Proceed to Step 8 to Install Upright Mounting Feet to your Vehicle floor.

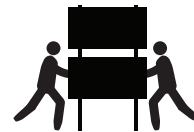

2 Person Lift Recommended

8

When installing shelving, note the mounting feet on the uprights are adjustable and may be switched to the other side of the upright if required. Install shelving unit per vehicle/OEM instructions.

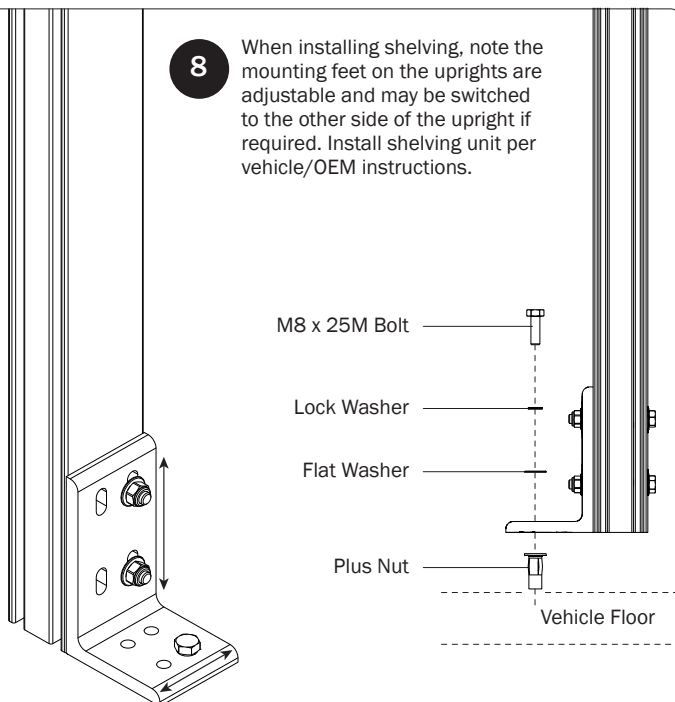

**WARNING:** Before drilling, ensure the bolt location will not damage any critical parts of the vehicle—i.e. gas tank, wiring harnesses, or hoses.

5

CSU-3014-3015 ASSEMBLY INSTRUCTIONS

**PRIME DESIGN**  
A Safe Fleet Brand

Page Intentionally Left Blank

Page Intentionally Left Blank

