
PRIME DESIGN

A Safe Fleet Brand

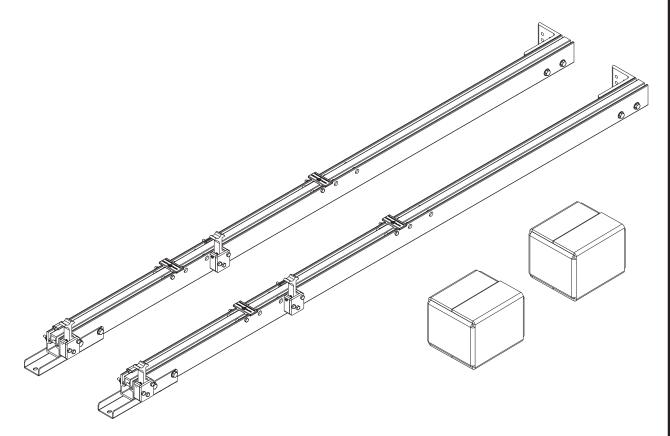

24" Cantilever Shelving Upright Assembly

Page 2 Packaging Contents
Page 3-4 Assembly Instructions

CON	TENTS	OVERV	TEW
		I J V C. N V	II.W

1—Cantilever Shelving Upright (Qty 2)



Part numbers and height specifications:

CSU-3212: 85.25" FULL HEIGHT SUPPORT CSU-3213: 72.25" FULL HEIGHT SUPPORT CSU-3216: 79.25" FULL HEIGHT SUPPORT CSU-3217: 85.25" FULL HEIGHT SUPPORT

* Check your vehicle layout configuration and OEM for correct product.

2-HKT-0205(Qty 2)



Locknut (1X)



Flat Washer (2X)



Lock Washer (1X)





M8 x 45MM (1X)	}

Retain Ring (8X)

SHELVING ASSEMBLY SEQUENCE



For shelving requiring three supports: Remove the upper and lower latches from the middle support as shown.

For the remainder of the manual unless otherwise noted, the instructions will apply to all supports.

NOTE: For truck bodies that have an E Track or other equipment installed onto the interior walls, a spacer will need to be created in order to align the uprights and shelving correctly.

