


PRIME DESIGN™

A Safe Fleet Brand

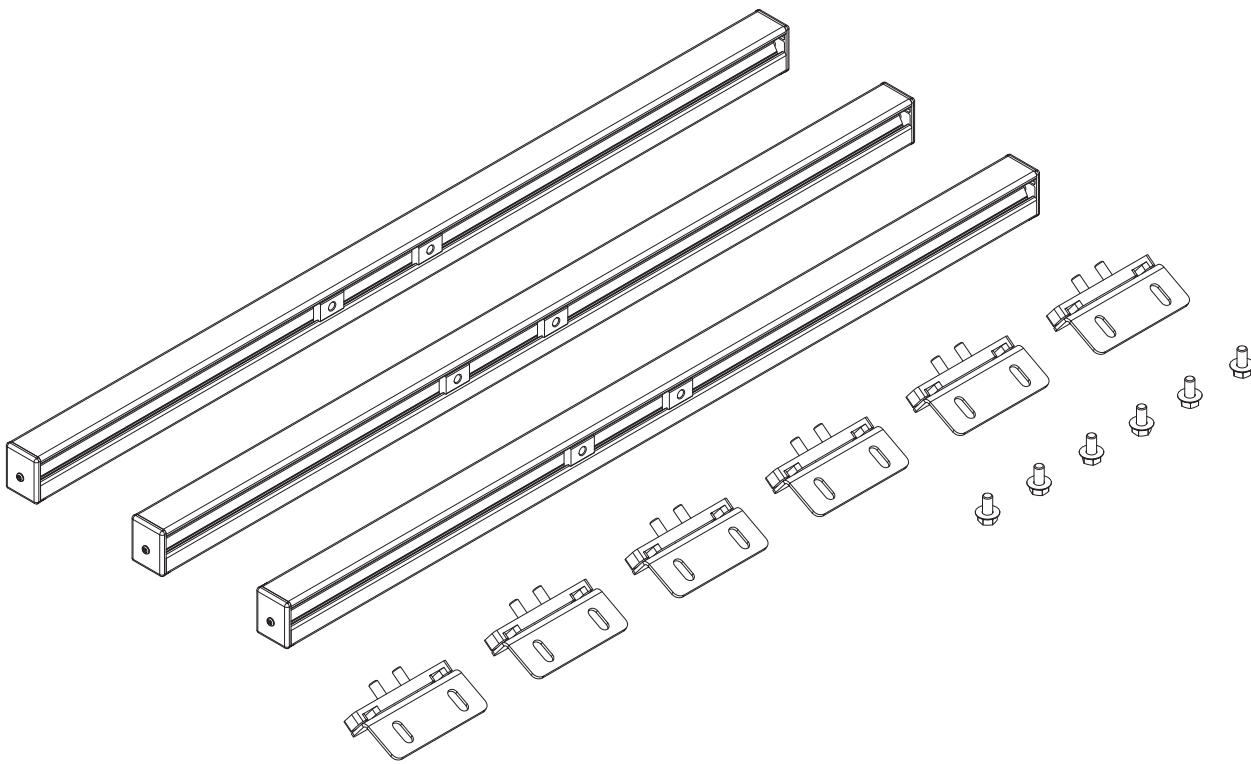


2 Person Lift Recommended

Cantilever Shelving Mounting Assembly- Mercedes Sprinter

Page 2	Packaging Contents
Page 3	Requirements
Pages 4-5	Sprinter L2H2-L4H2 Assembly Instructions
Page 6-7	Sprinter L2H1 Assembly Instructions

CSM-1002

CONTENTS OVERVIEW

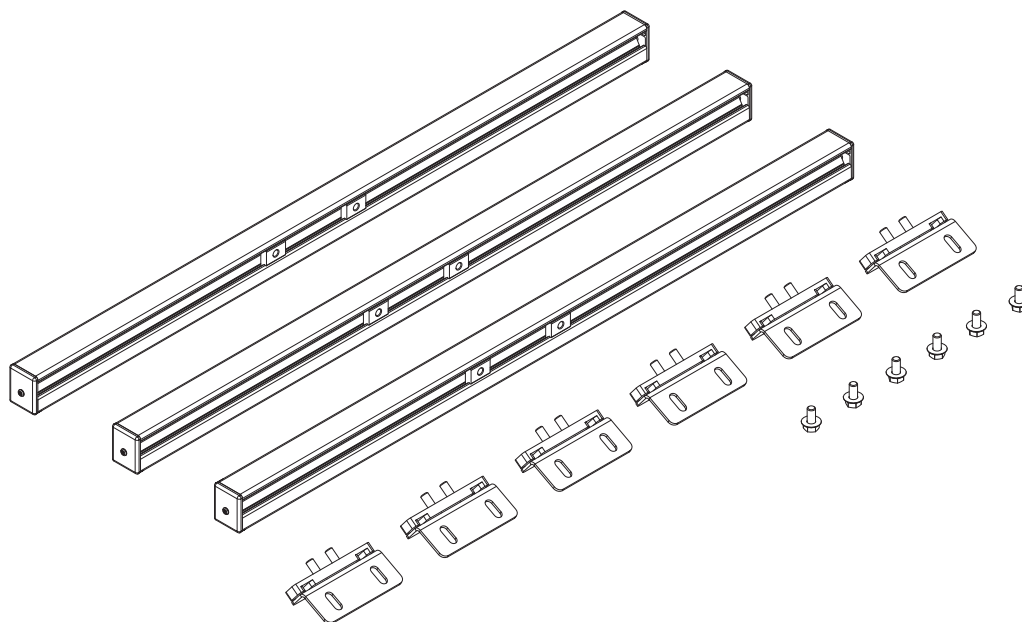

1—Cantilever Shelving Mounting System (Qty 1)
Mercedes Sprinter



Nut Bracket (6X)




Mounting Bracket (6X)




32.00" Mounting Channel Assembly (3X)


2—HKT-0212 (Qty 1)

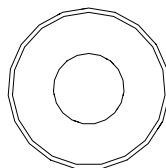

Flat Washer (6X)




Lock Washer (6X)

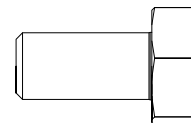


M8 x 18MM (6X)

3—Hardware supplied in Cantilever Shelving Upright
Packaging (sold separately).


* Used in Steps 3.1–3.2

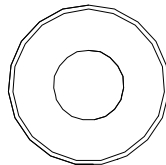

Flat Washer (1X)



Lock Washer (1X)



M8 x 25MM (1X)

ASSEMBLY REQUIREMENTS




INSTALLER NOTE: *It is important to correctly follow these assembly instructions. These instructions for assembly are provided by the manufacturer at time of Cantilever Shelving delivery, and reflect the technical specifications applicable at the time of writing.*


- These instructions are subject to change if the manufacturer revises the parts and/or production of the subsystems and accessories used in the brand's vehicles. Following the instructions for assembly will ensure proper installation of the product. The manufacturer will not be held liable if these instructions are not followed.
- The addition of parts and/or components not original to this Cantilever Shelving are discouraged. Use only OEM supplied parts.
- Consultaion of the OEM vehicle may be required during assembly to avoid vehicle damage. Ensure bolt locations will not damage any critical parts of the vehicle–i.e. gas tank, wiring harnesses, or hoses-before drilling.

REQUIRED

Plus Nut Applicator Tool

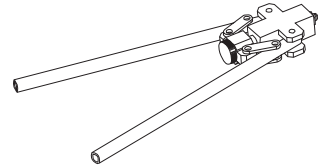


Torque Wrench w/
13MM Socket

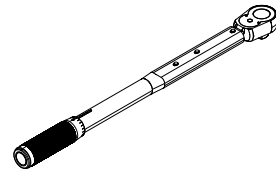


ASSEMBLY OVERVIEW FOR SP22–SP42 (SPRINTER L2H2–L4H2) MODELS

NOTE: Mounting Assembly shown installed with Uprights for illustrative purpose only. Separate purchase is required for Uprights and Shelves.


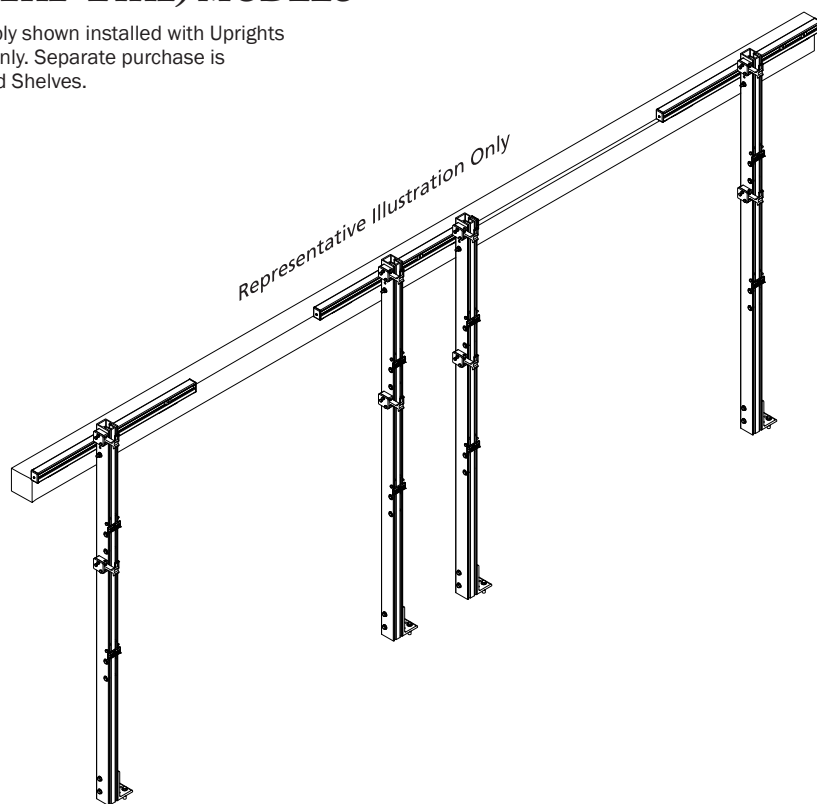


SP22–SP42 (SPRINTER L2H2–L4H2) MODELS ASSEMBLY SEQUENCE


- 1.1** Attach the Interior Mounting Assembly with Hardware as shown into the factory tie in hole.

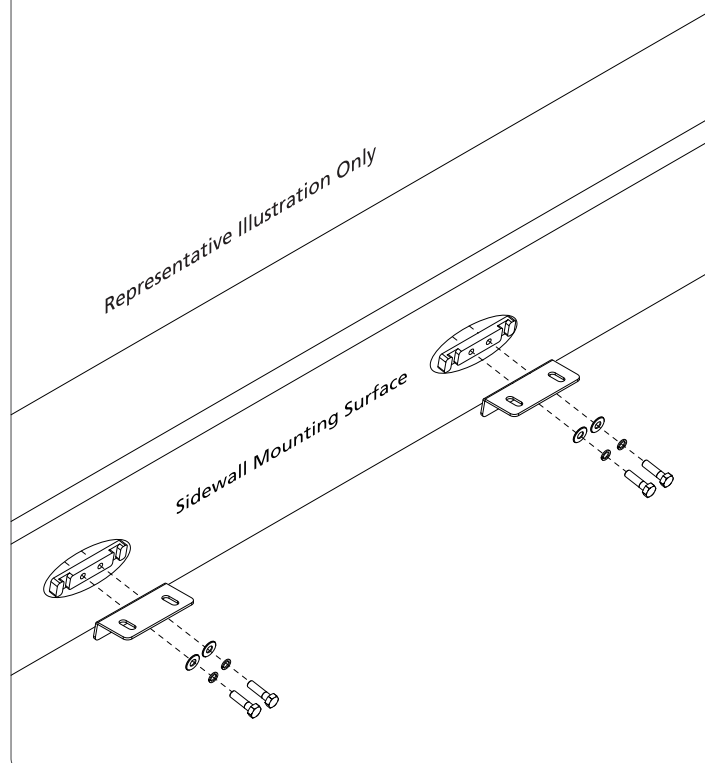


- 1.2** Torque to 90 in-lbs.




- 2.1** Attach Channels to the Brackets using the Hardware Kit as Shown in Steps 2.1 and 2.2.

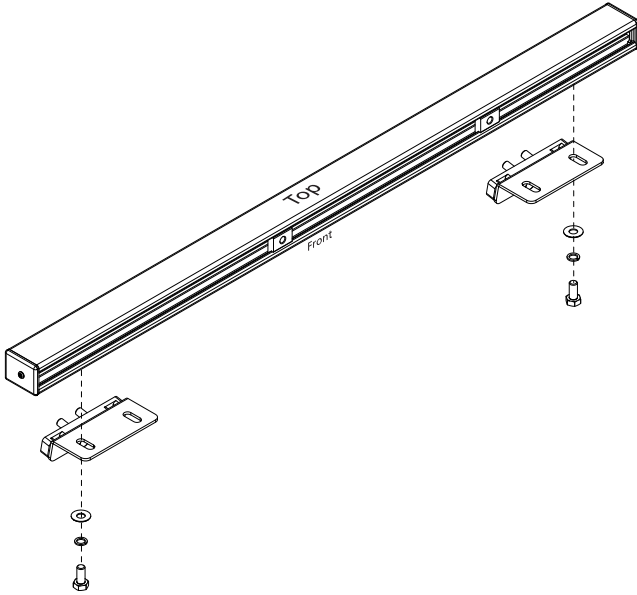


- 2.2** Install Hardware into the lower Mounting Assembly hole as shown. Torque to 90 in-lbs.

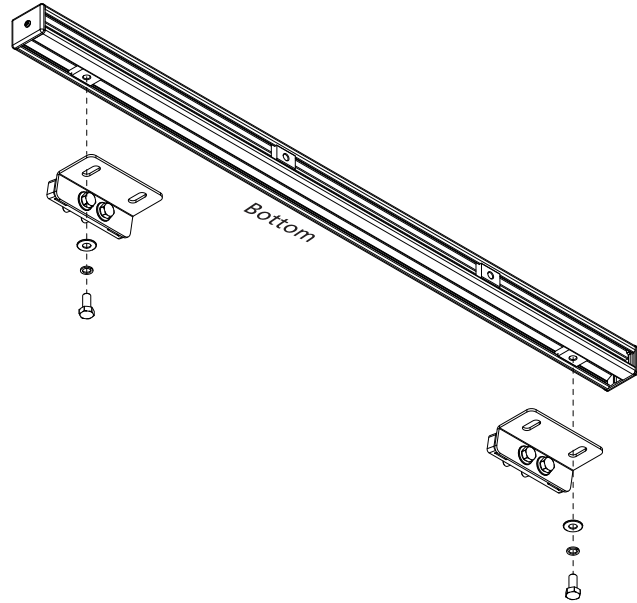

- 2.3** Torque Hardware to 90 in-lbs.

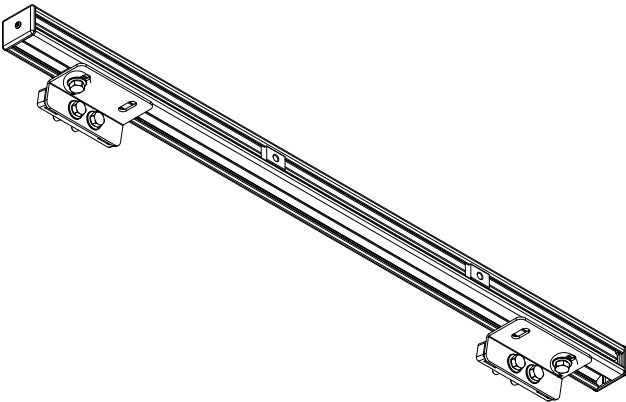


- 3.1** Install Cantilever Shelving Uprights using provided Upright Hardware (sold separately) into Mounting Channel Nut Brackets as shown below.

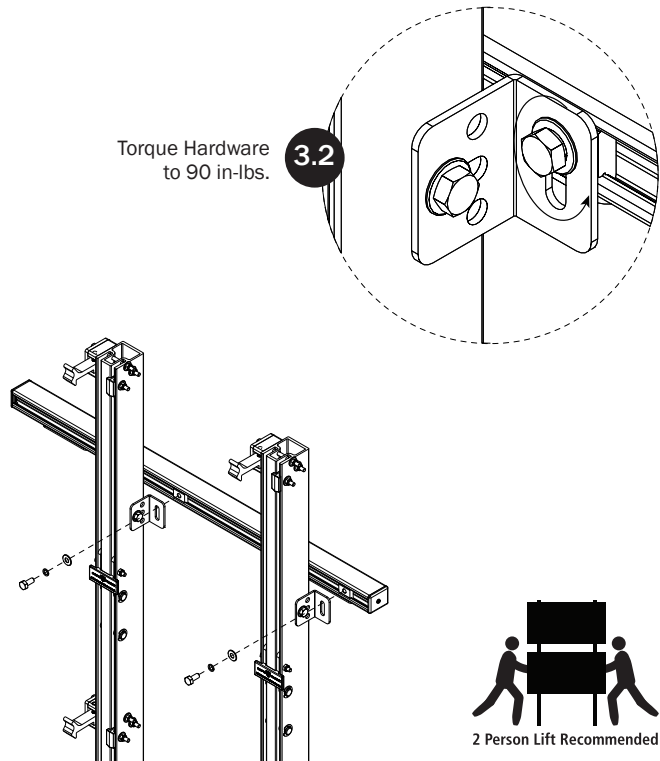


ASSEMBLY OVERVIEW FOR SP21 (SPRINTER L2H1) MODELS

NOTE: Mounting Assembly shown installed with Uprights for illustrative purpose only. Separate purchase is required for Uprights and Shelves.


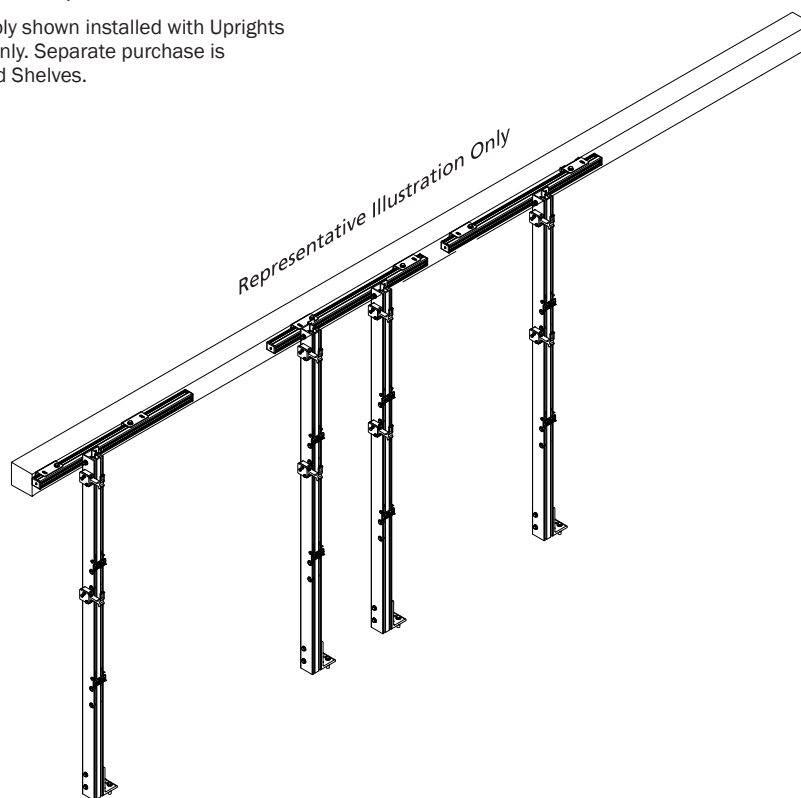


SP21 (SPRINTER L2H1) MODELS ASSEMBLY SEQUENCE


- 1.1** Attach the Interior Mounting Assembly with Hardware as shown into the factory tie in hole.

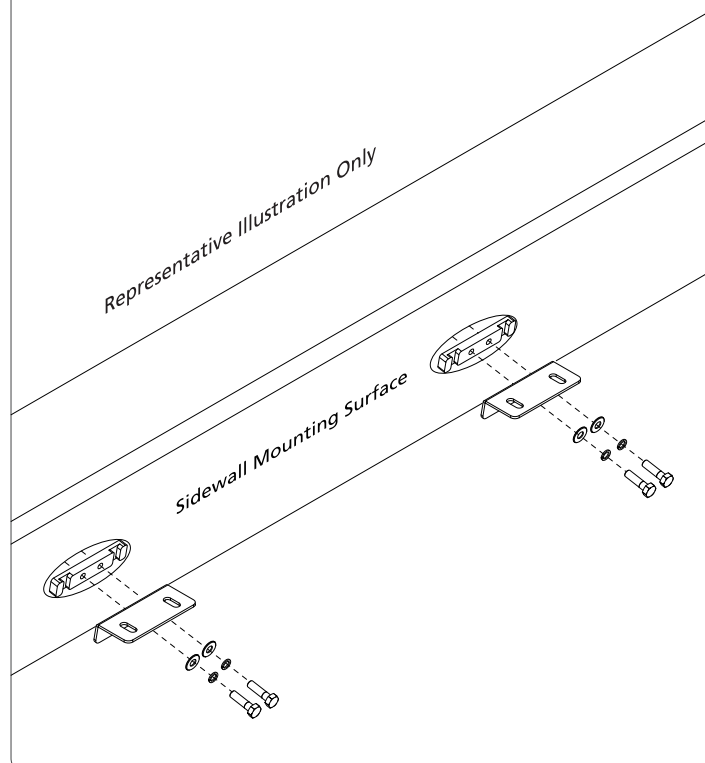


- 1.2** Torque to 90 in-lbs.




- 2.1** Attach Channels to the Brackets using the Hardware Kit as Shown in Steps 2.1 and 2.2.

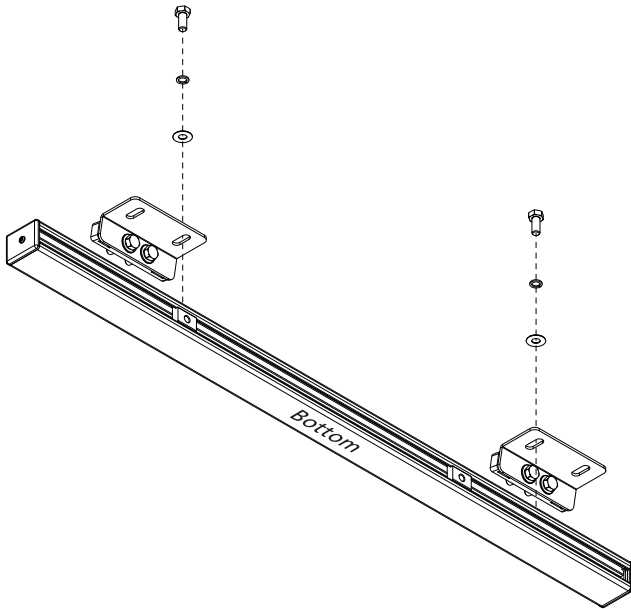

- 2.2** Install Hardware into the lower Mounting Assembly hole as shown. Torque to 90 in-lbs.

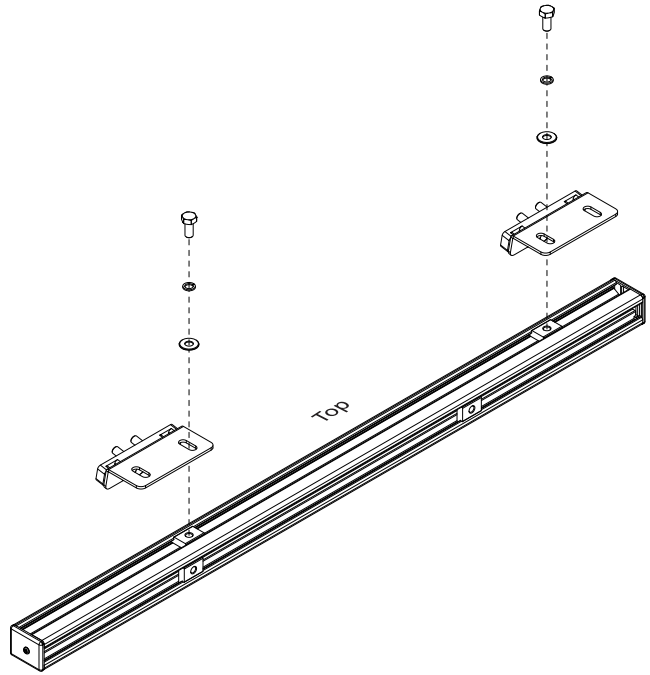



- 2.3** Torque Hardware to 90 in-lbs.

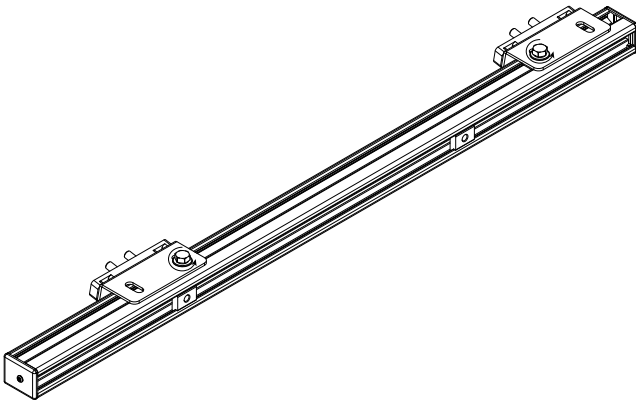

- 3.1** Install Cantilever Shelving Uprights using provided Upright Hardware (sold separately) into Mounting Channel Nut Brackets as shown below.

Torque Hardware to 90 in-lbs.

3.2

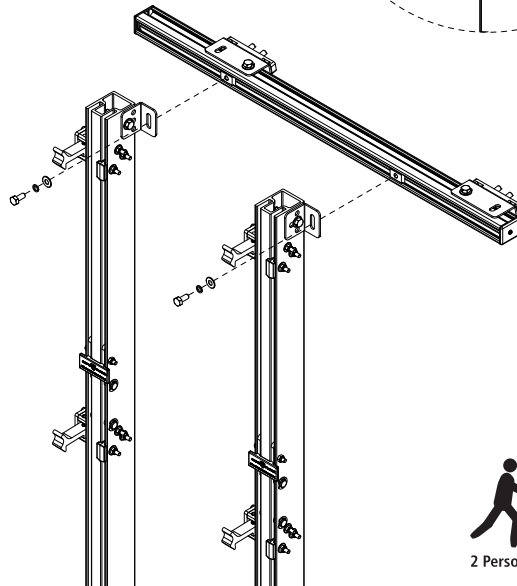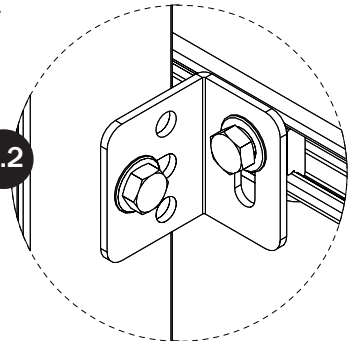

2 Person Lift Recommended

