



PRIME DESIGN™

A Safe Fleet Brand

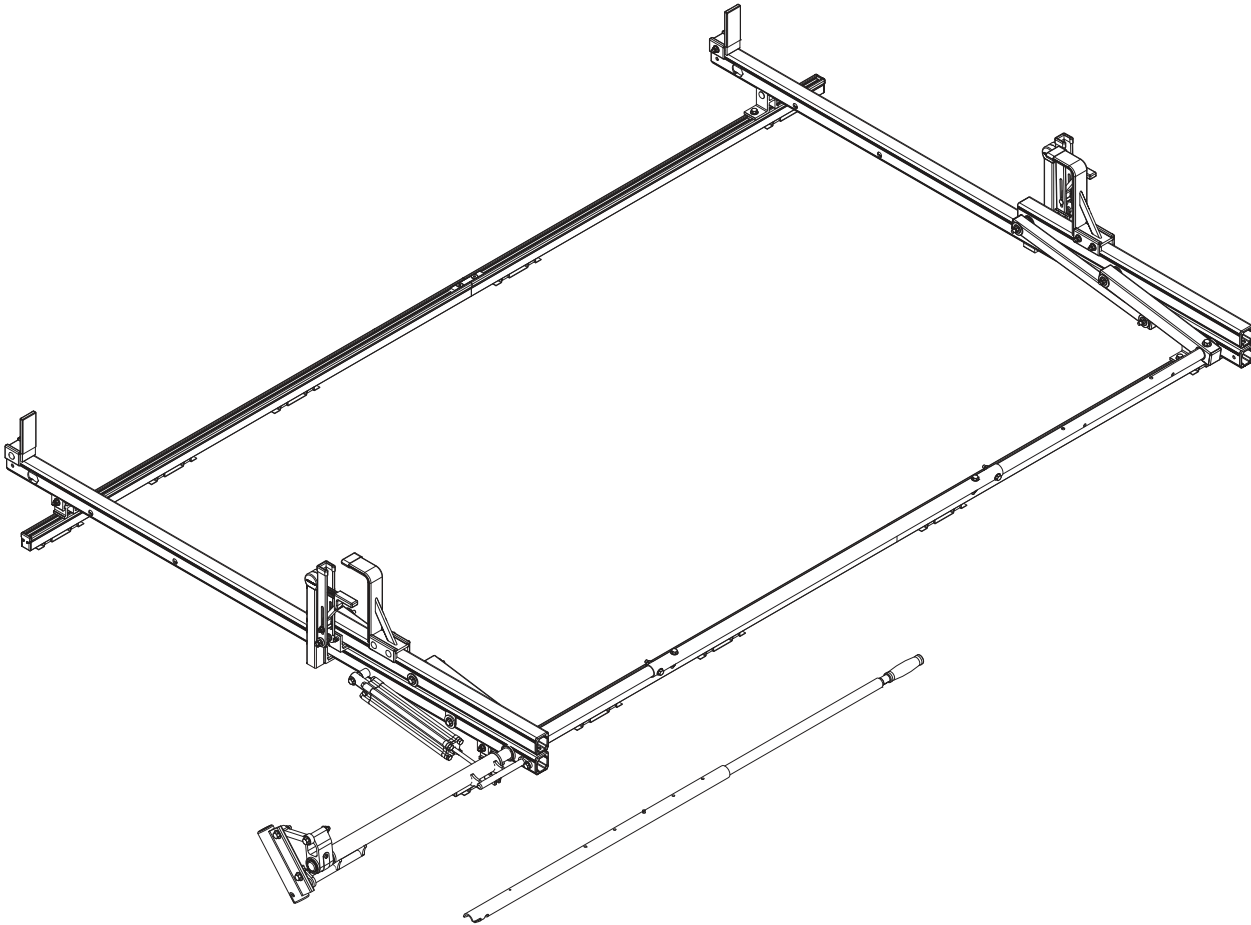


HBR VAN B

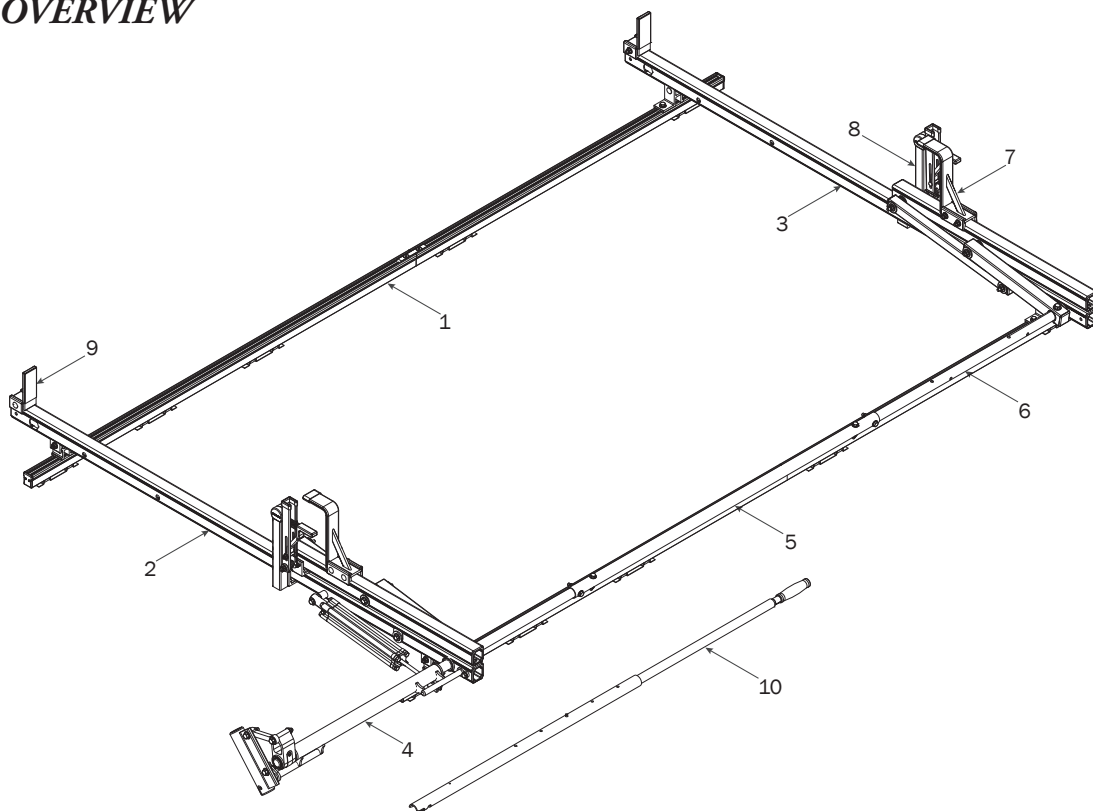

1—FBM-0048 (Qty 1)
Channels with hardware


Channels (2X)

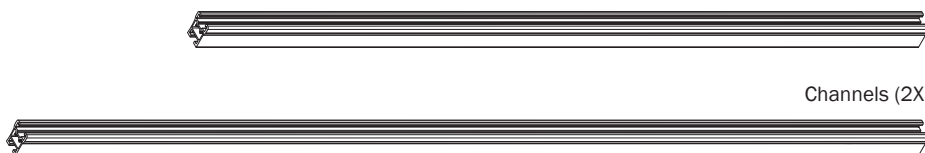


Channels (2X)




M8 x 45MM Bolt (2X)

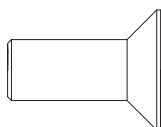


M8 x 20MM (18X)

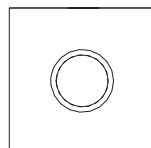

Square Nut (20X)

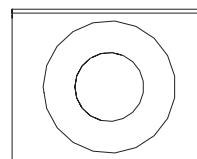

T Slot Insert (18X)

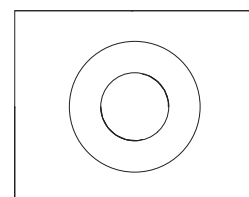

Channel Strip (2X)



Brackets (4X)



Top Connector (2X)



Bottom Connector (2X)




End Caps (4X)




Screws (8X)

M8 x 40MM Bolt (2X)


2—Rear Crossbar Assembly (Qty 1)

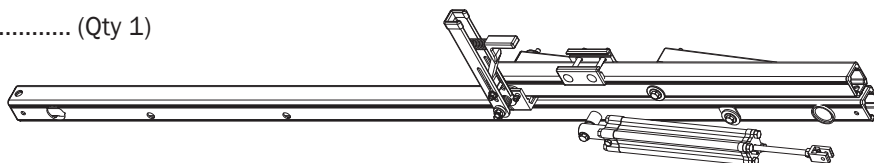

3—Front Crossbar Assembly (Qty 1)

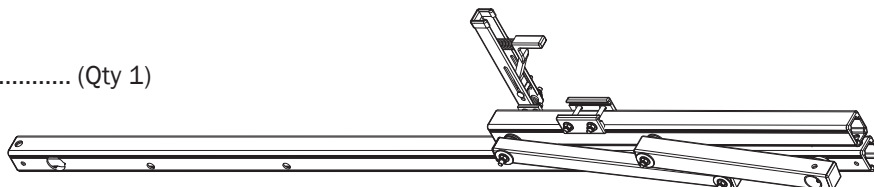

4—Drive Shaft (Qty 1)
Rear, Right Hand, 50.00"

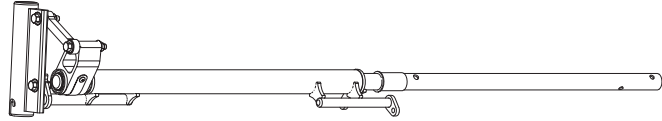


5—Connecting Bar (Qty 1)
48.00"




6—Front Drive Shaft (Qty 1)
B Version, 35.75"




7—Z Post (Qty 1)
Adjustable, 7.25"

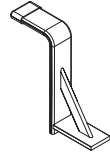


8—L Post (Qty 1)
Gen2, Roller Cap, 9.25"

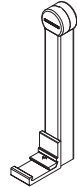


9—Ladder Stop Assembly (Qty 2)
1.75"

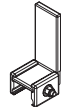

10—HRR Removeable Handle Assembly (Qty 1)

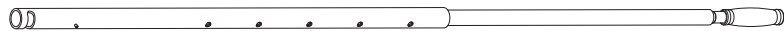


11—HKT-8163 (Not called out in Overview) (Qty 1)

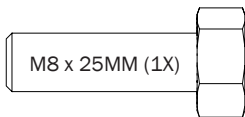

M8 x 25MM (1X)




M8 x 50MM (4X)

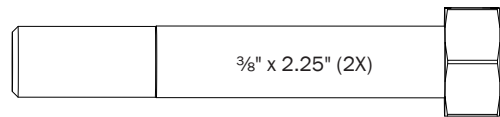


3/8" x 2.25" (2X)



Cotter Pin (1X)

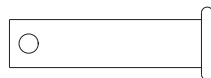


Clevis Pin (1X)

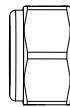


M8 Lock Nut (5X)




3/8" Lock Nut (2X)

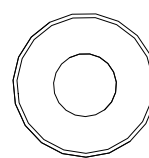

5/16" Flat Washer (10X)

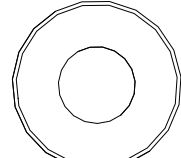


3/8" Flat Washer (4X)

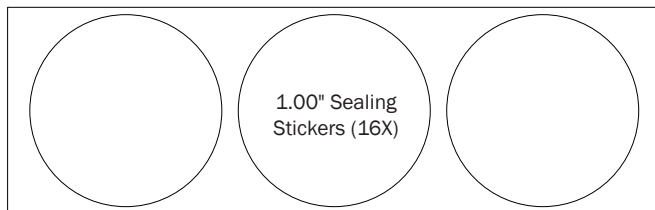

1.00" Sealing
Stickers (16X)






Anti-Seize (1X)

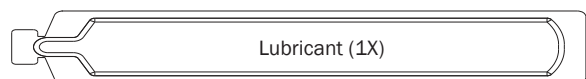


Lubricant (1X)


FBM-0048 MOUNTING SYSTEM CHANNELS TO ROOF

0.1 Assemble Mounts as shown below.

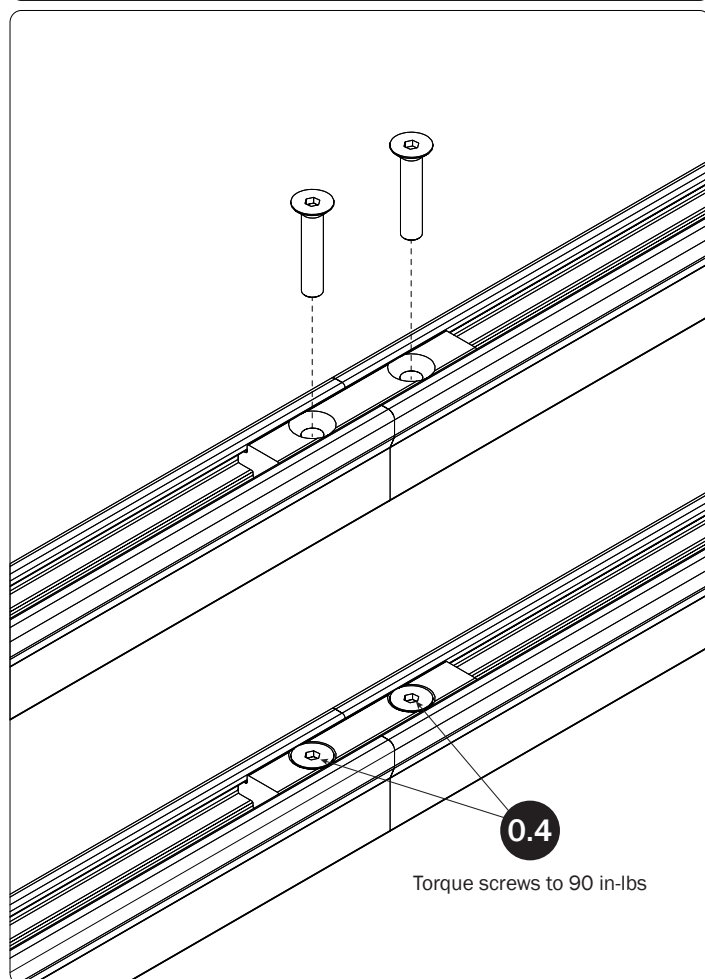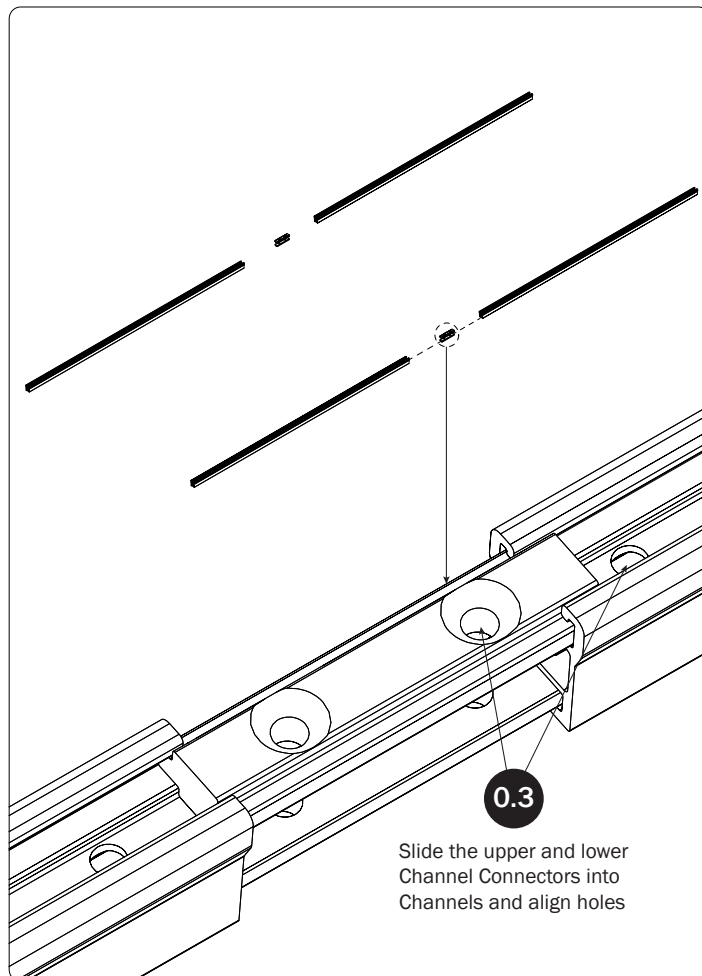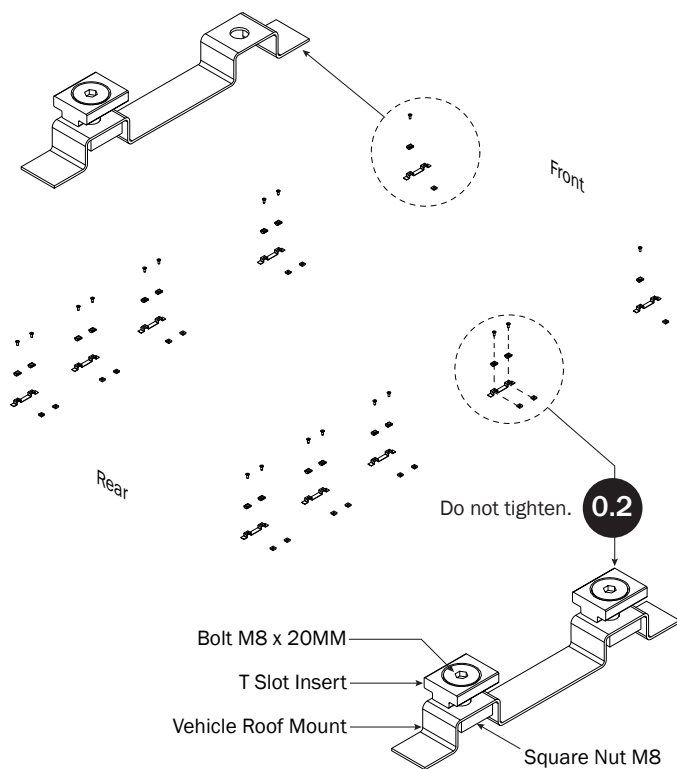





0.5 Slide Channels onto roof Mounts and set distances as shown.

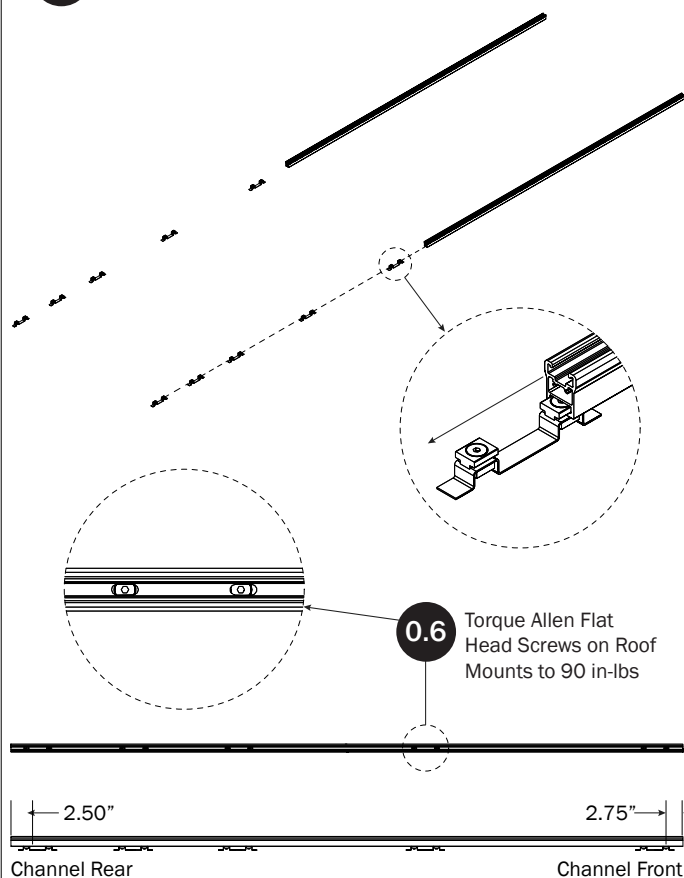


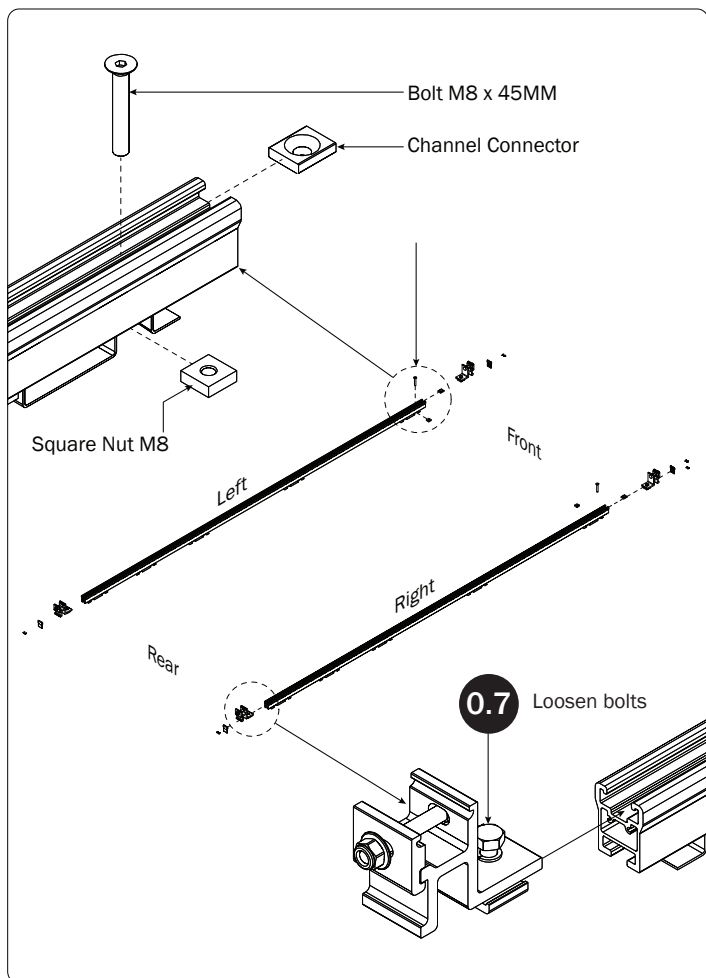


0.8 Finger-tighten to retain positions. Do not torque until Step 1.2

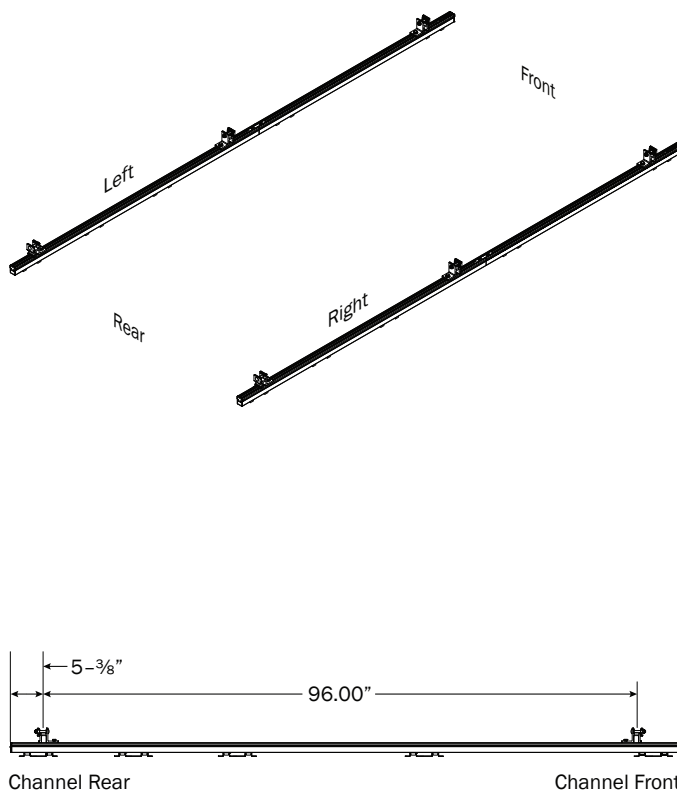


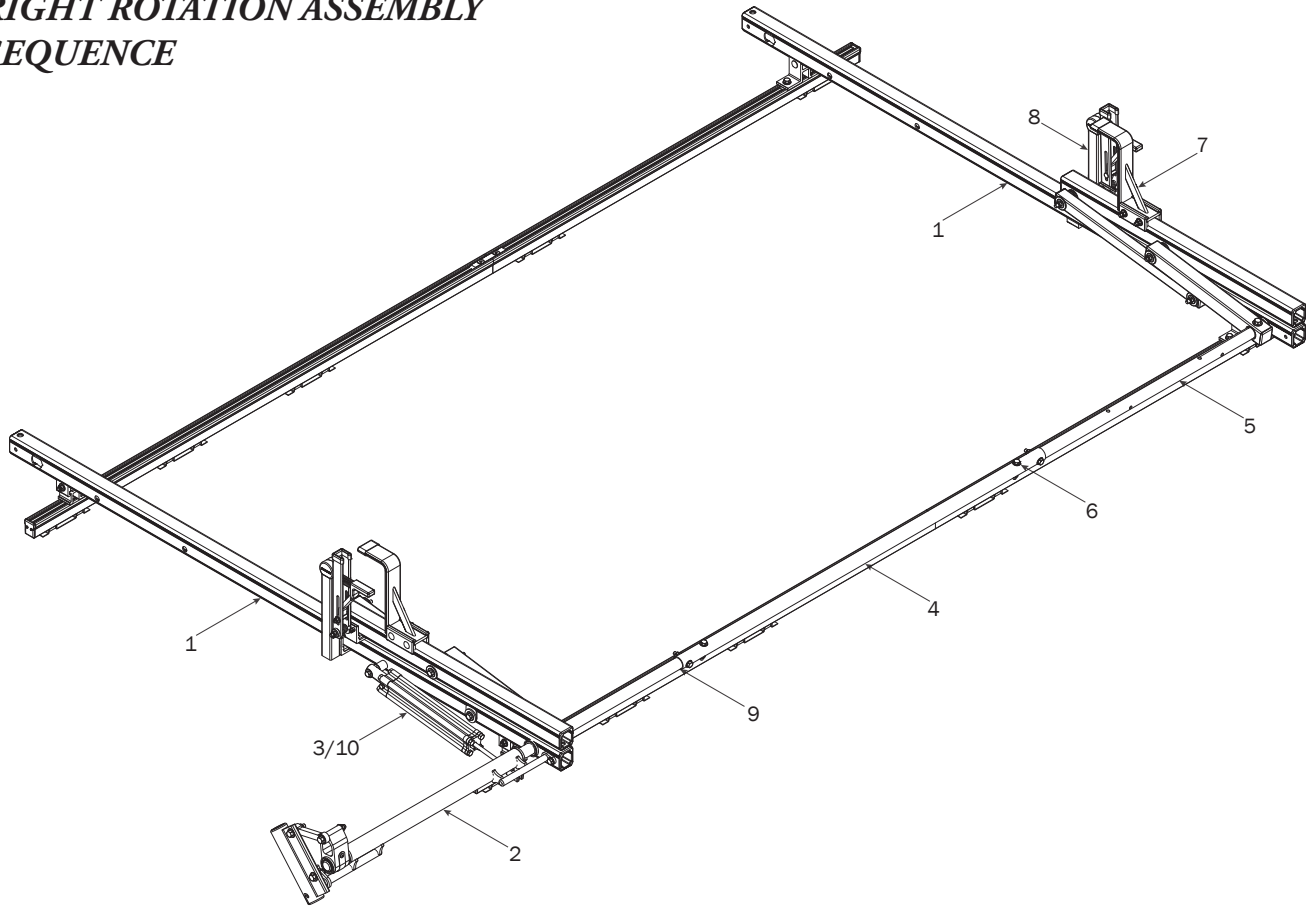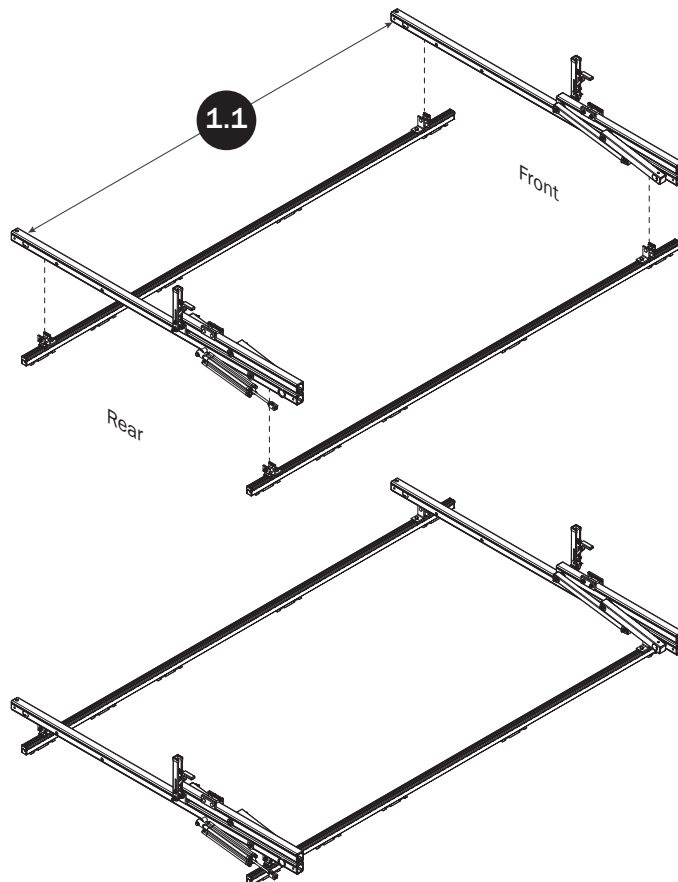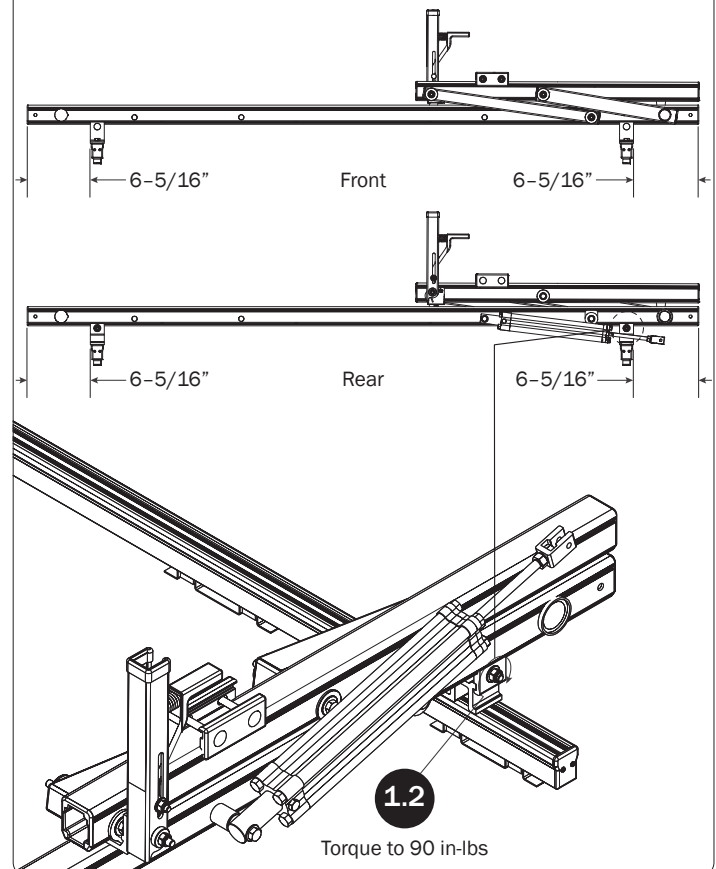**RIGHT ROTATION ASSEMBLY
SEQUENCE****CROSSBARS****CROSSBAR ADJUSTMENT**


REAR DRIVE SHAFT

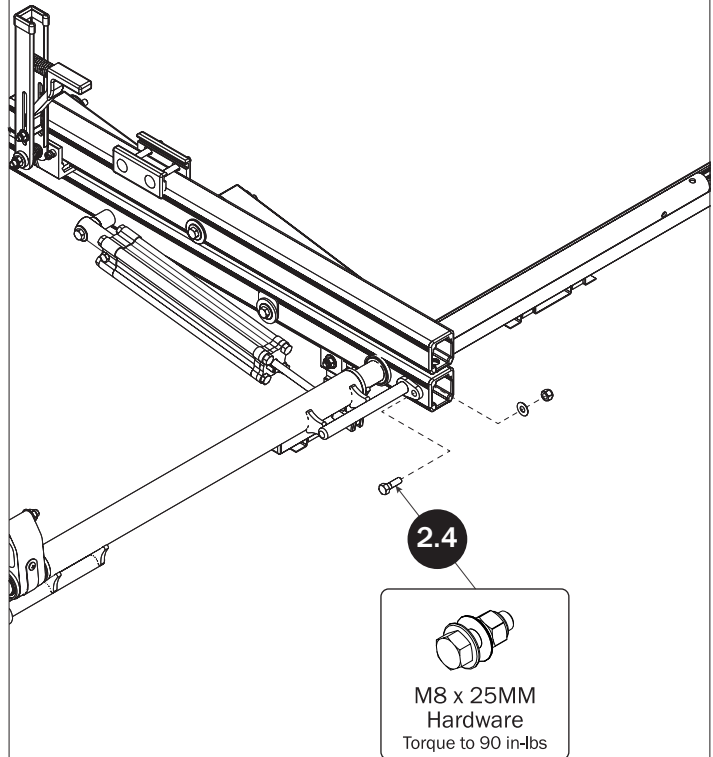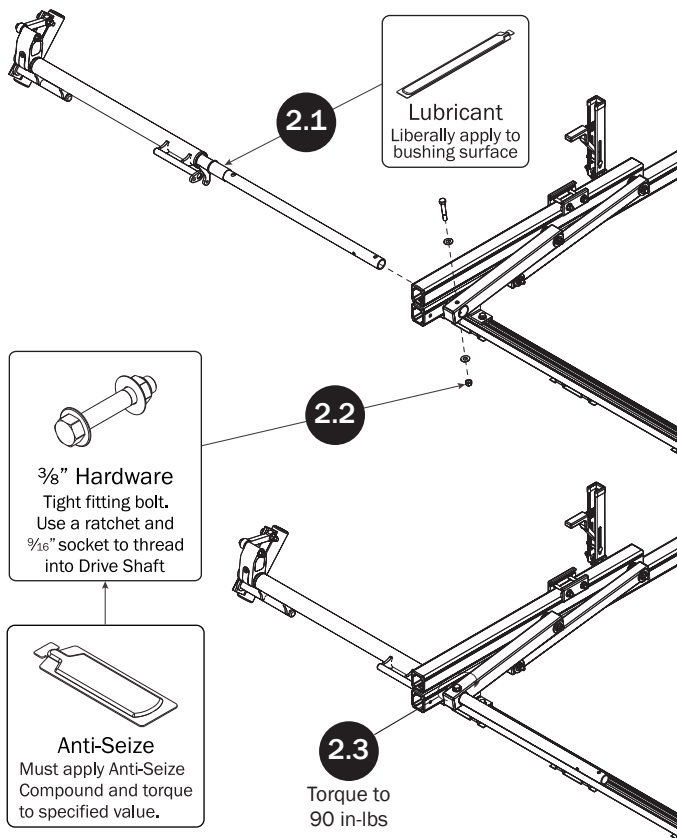


CYLINDER HARDWARE

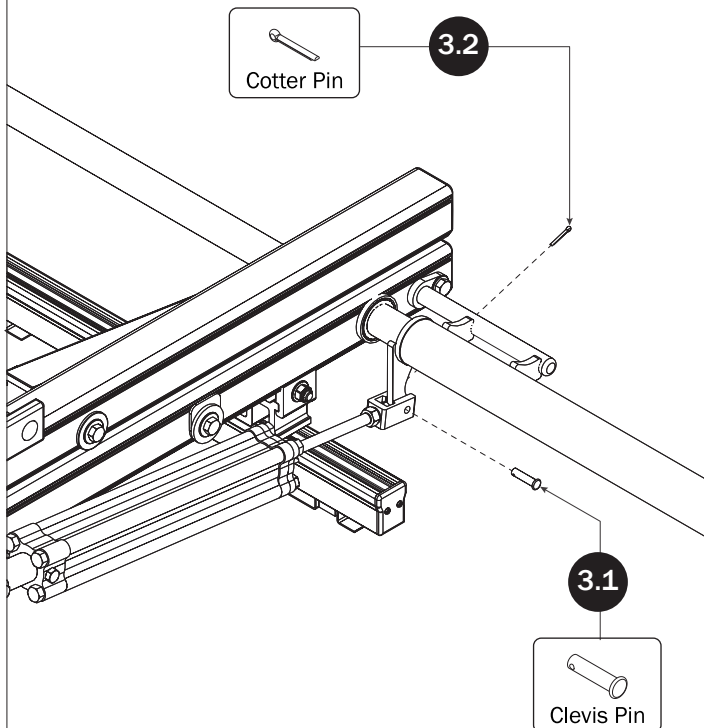


CONNECTING BAR

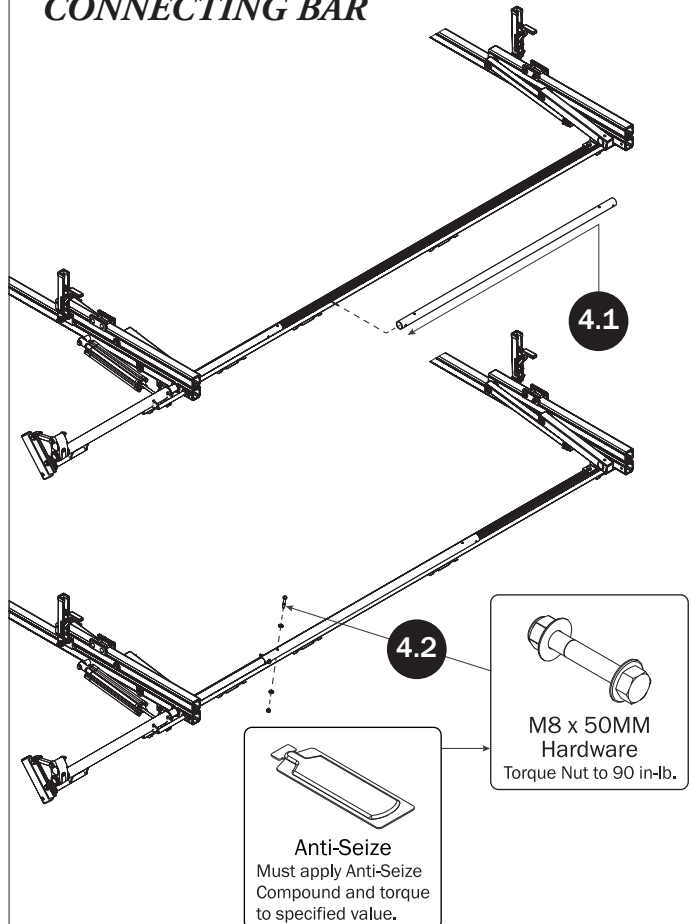


FRONT DRIVE SHAFT

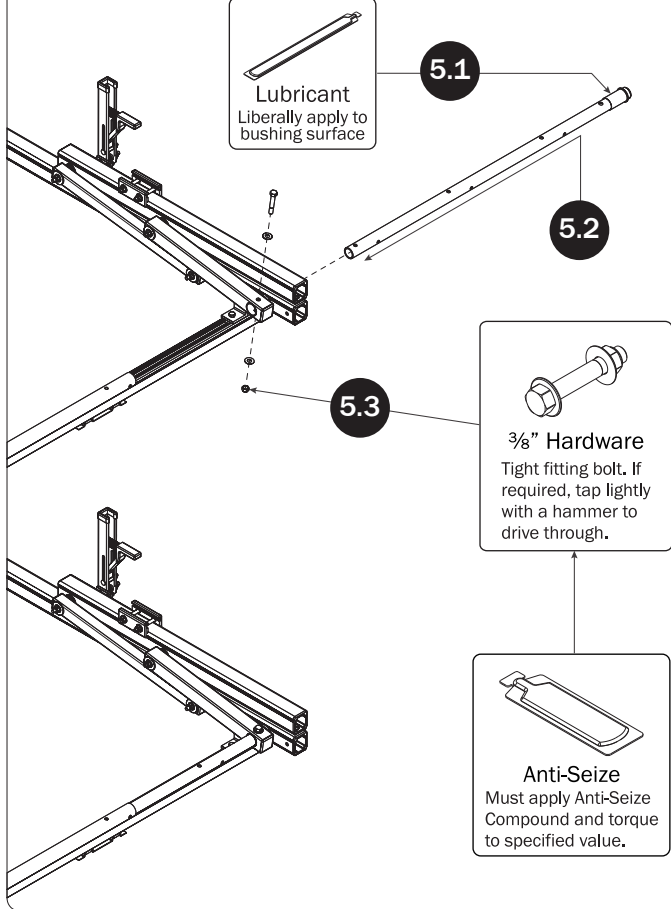


CONNECTING BAR FASTENERS

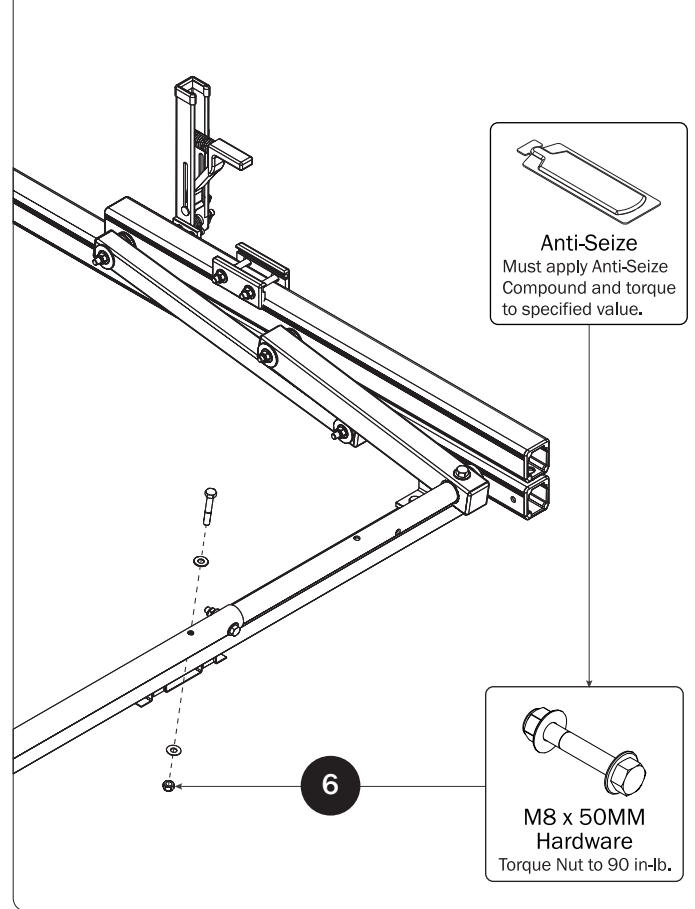


Z POST SEE QUICK START GUIDE FOR ADJUSTMENTS

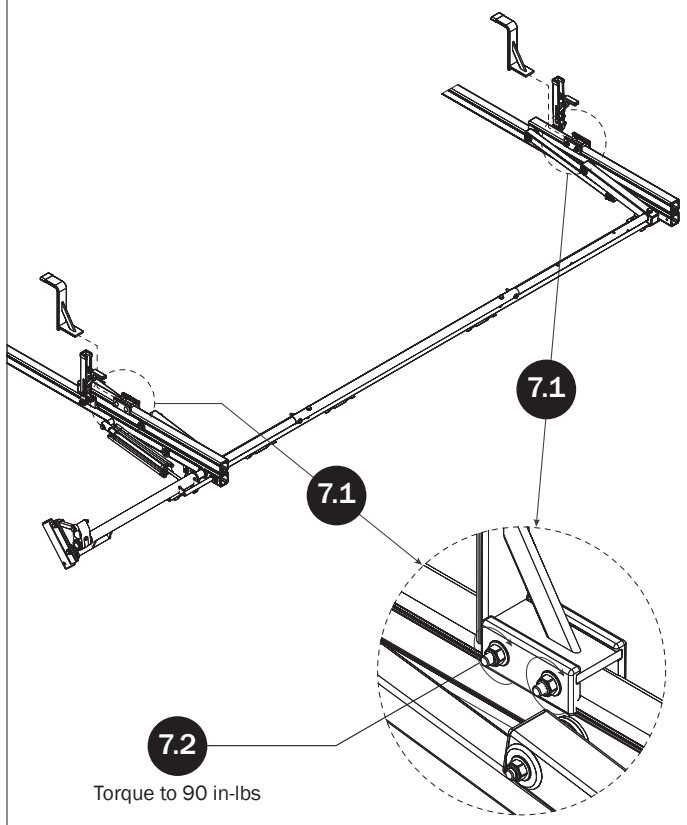


L POST SEE QUICK START GUIDE FOR ADJUSTMENTS


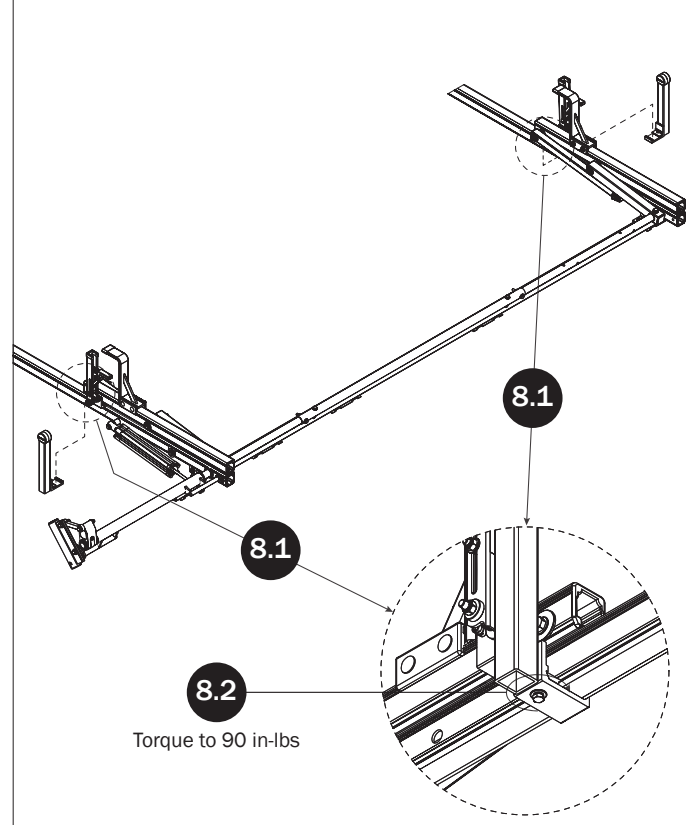


DRIVE SHAFT SEALING

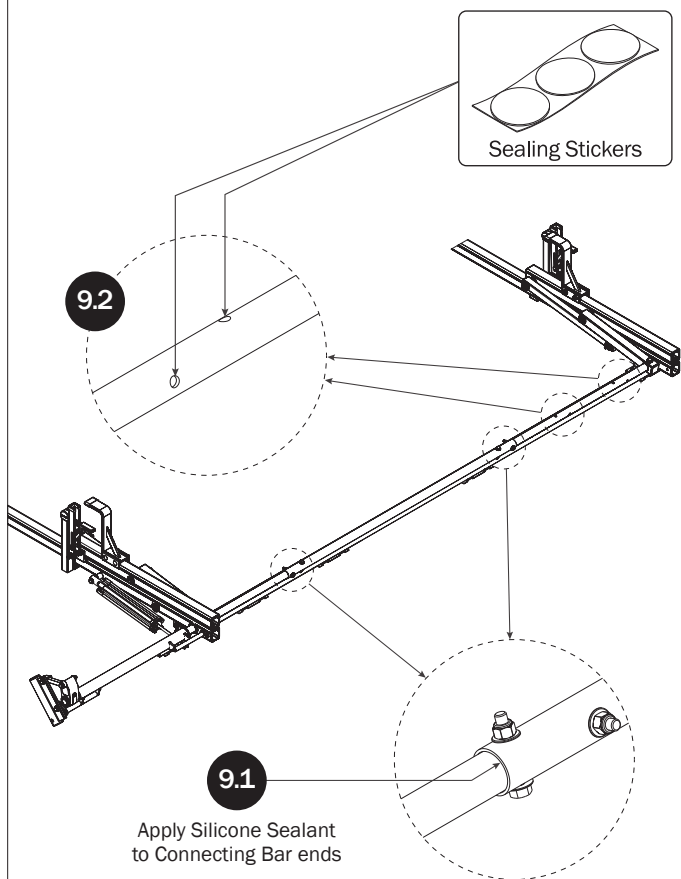

CYLINDER ADJUSTMENT

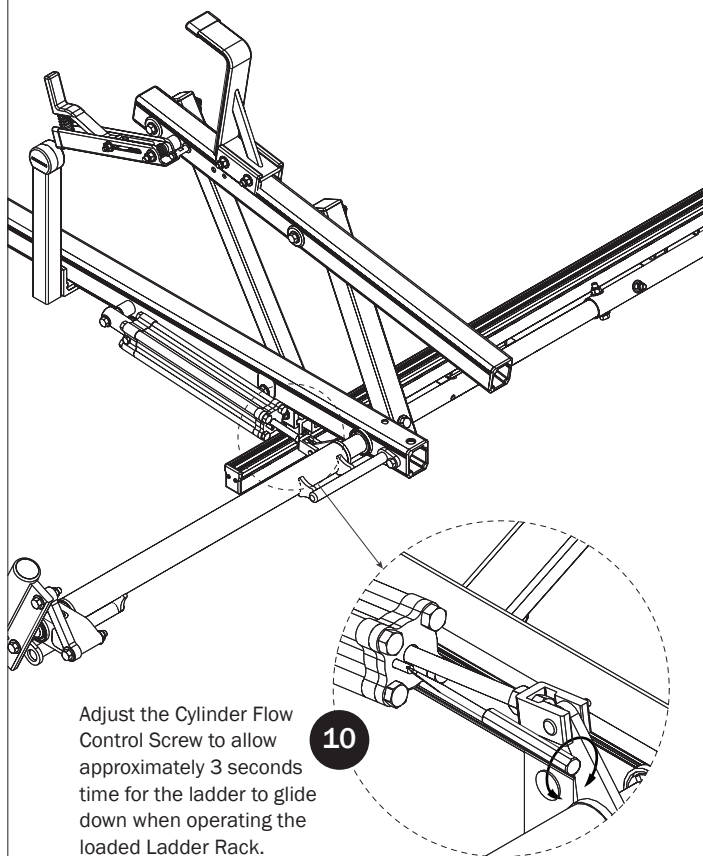

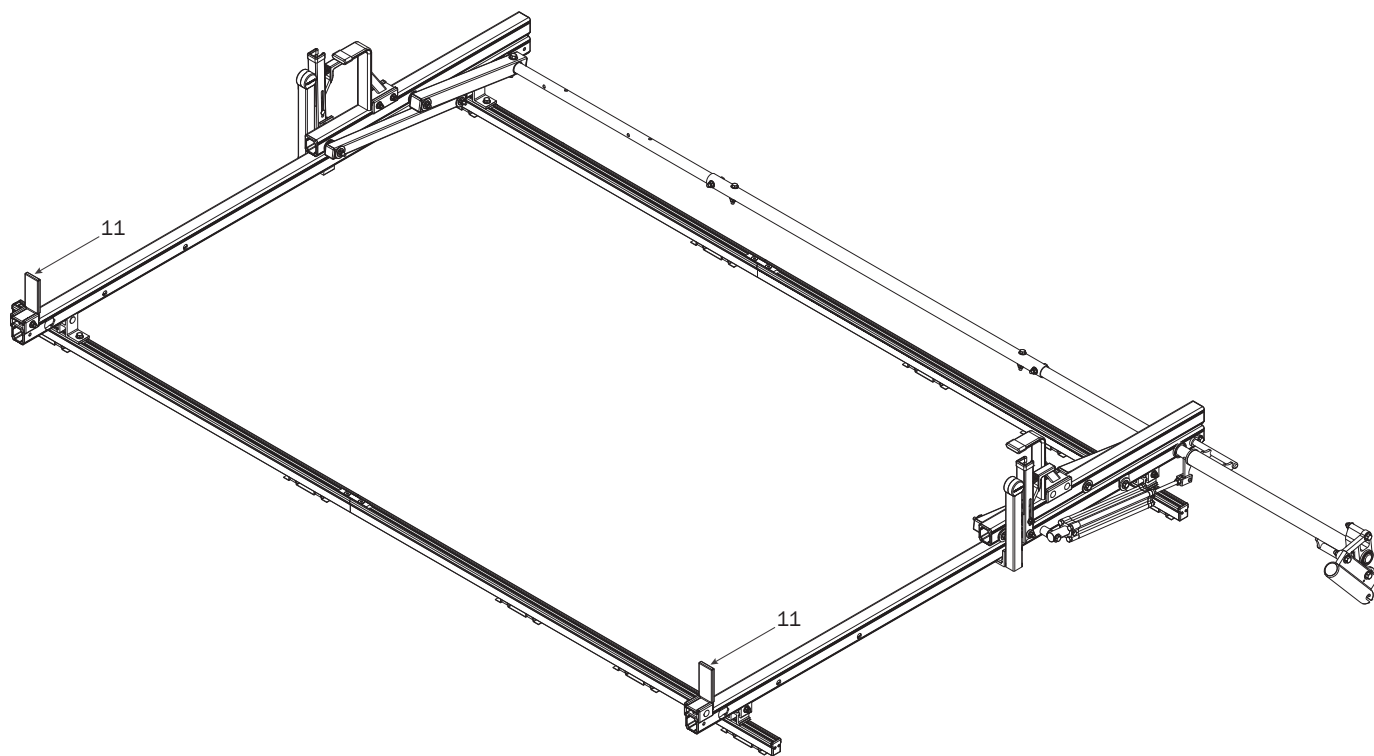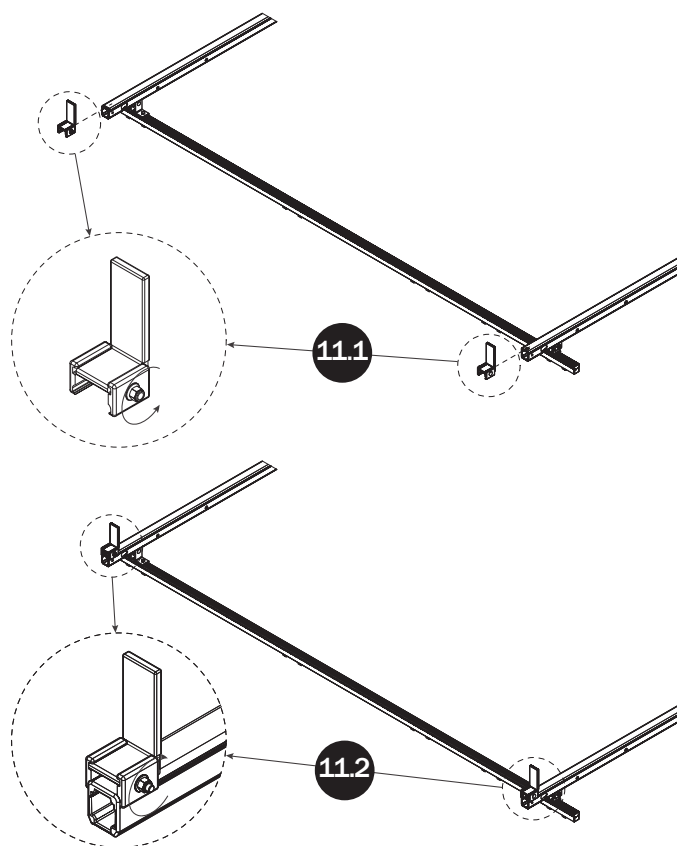LEFT SIDE BASE*LADDER STOPS*

Page Intentionally Left Blank

