


PRIME DESIGN™


A Safe Fleet Brand

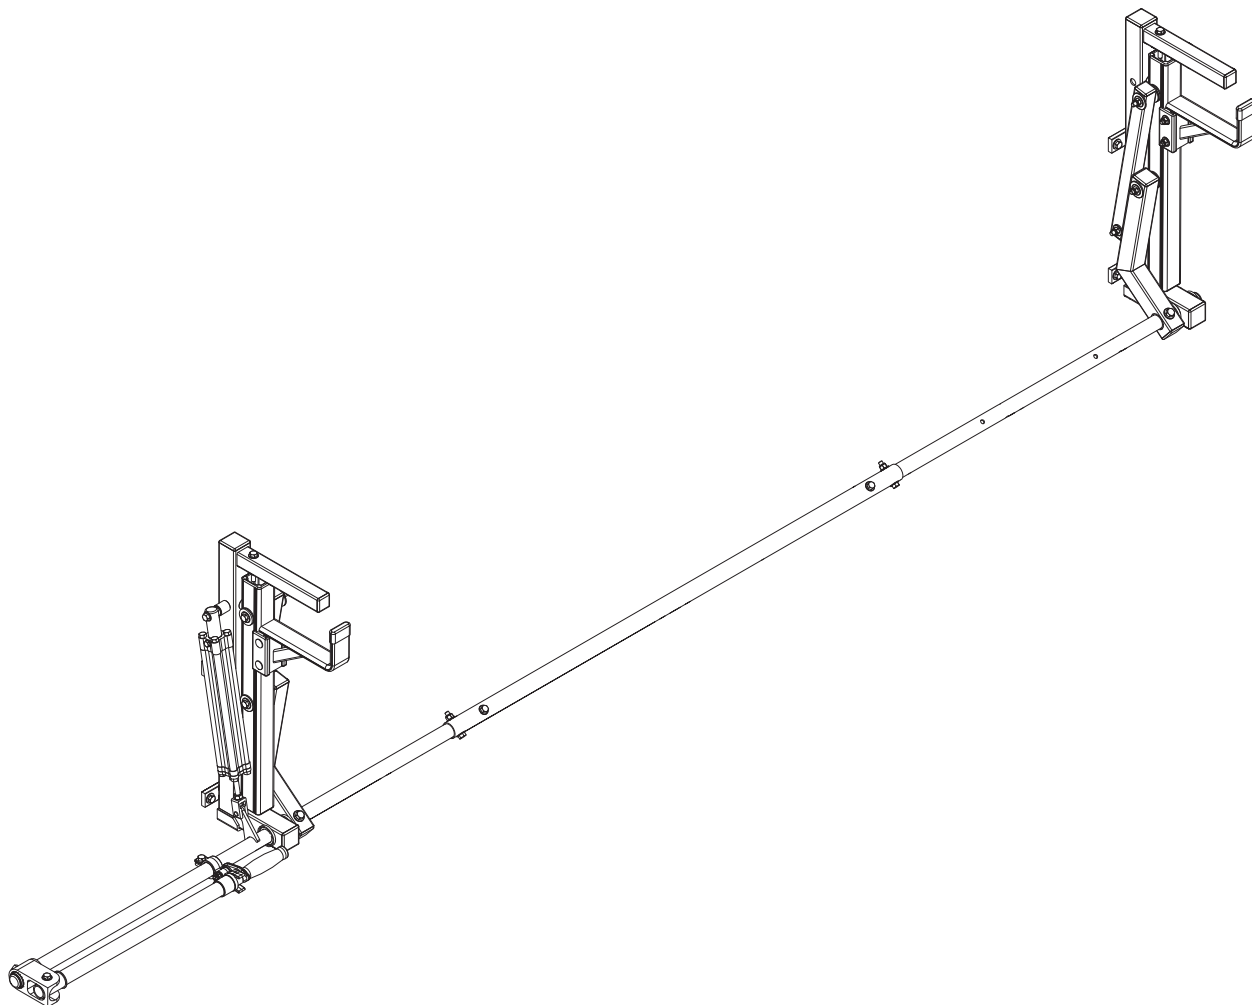


PRIME DESIGN, A SAFE FLEET BRAND

Address: 580 Opperman Drive, Eagan, MN 55123 • Toll Free: 1.8.PRIME.RACK
Fax: 651-552-1799 • Email: info@primedesign.net • Website: www.primedesign.net


CONTENTS OVERVIEW

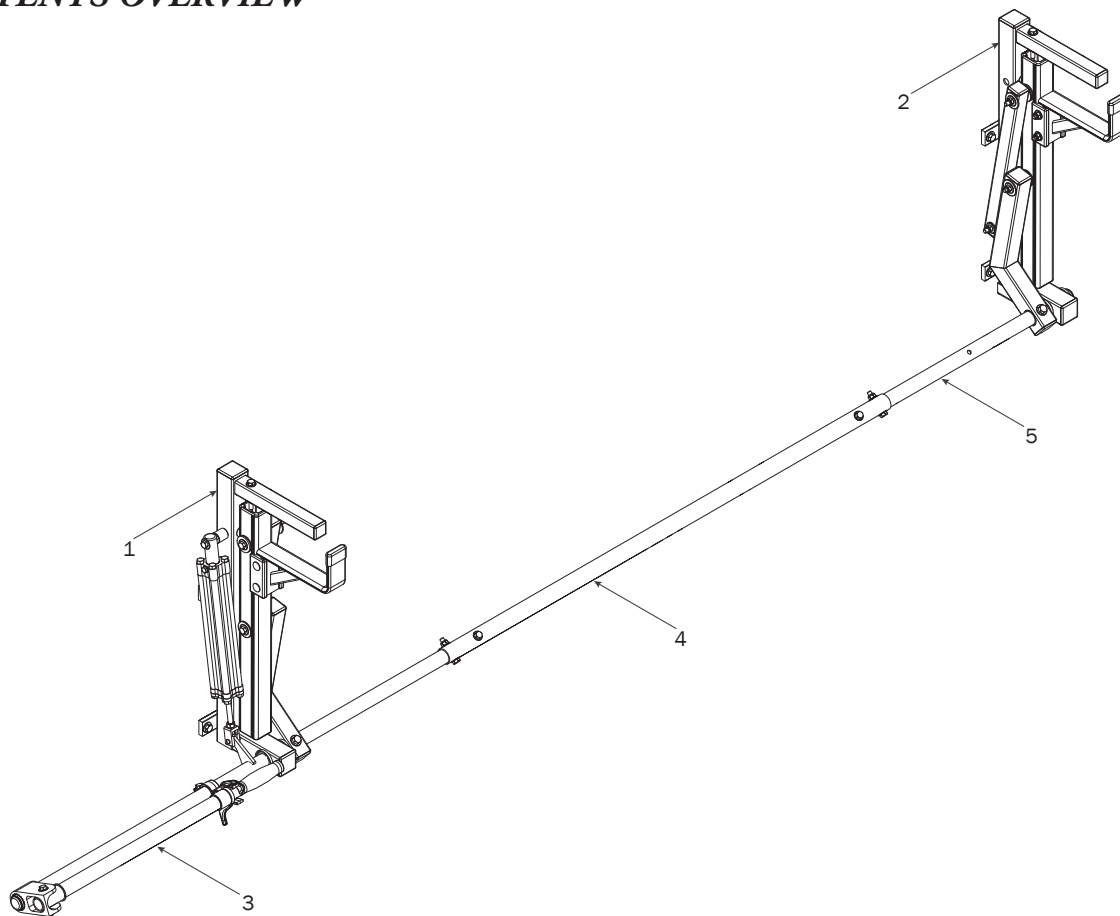


1—Rear Rotation Assembly..... (Qty 1)

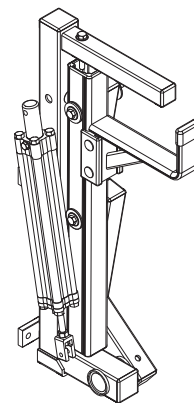

2—Front Rotation Assembly..... (Qty 1)

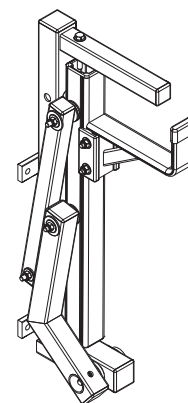

3—Rear Drive Shaft..... (Qty 1)
Right Hand, 50.00"




4—Connecting Bar..... (Qty 1)
48.00"




5—Front Drive Shaft..... (Qty 1)
B Version, 35.75"




HKT-8163-Rotation Hardware Kit




Clevis Pin (1X)




M8 x 50MM (4X)




3/8" x 2.25" (2X)



Cotter Pin (1X)




M8 x 25MM (1X)




M8 Lock Nut (5X)




3/8" Lock Nut (2X)

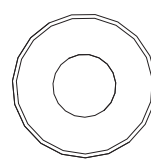


5/16" Flat Washer (10X)

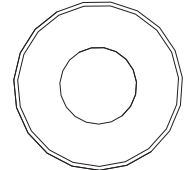


3/8" Flat Washer (4X)

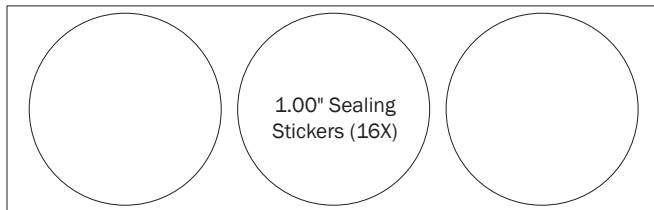

1.00" Sealing
Stickers (16X)

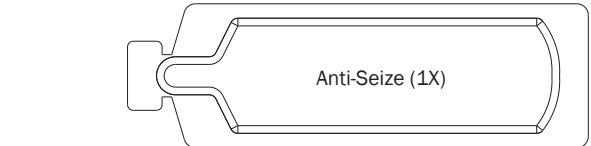


Anti-Seize (1X)




Lubricant (1X)


Mounting Hardware




M8 Lock Nut (8X)

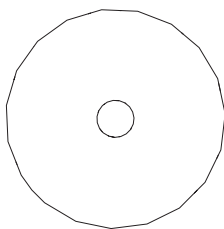

Neoprene Washer (8X)

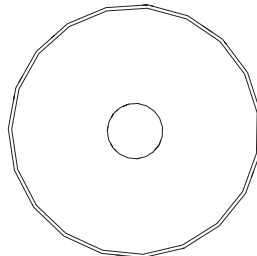

Fender Washer (8X)

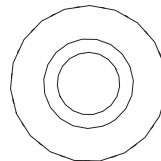


5/16" Seal Washer (8X)



M8 x 30MM (8X)


UTILITY BODY MOUNTING

- 0.1** 6.00-8.00 Ft: Drill holes into the Service Body mounting location according to dimensions shown.

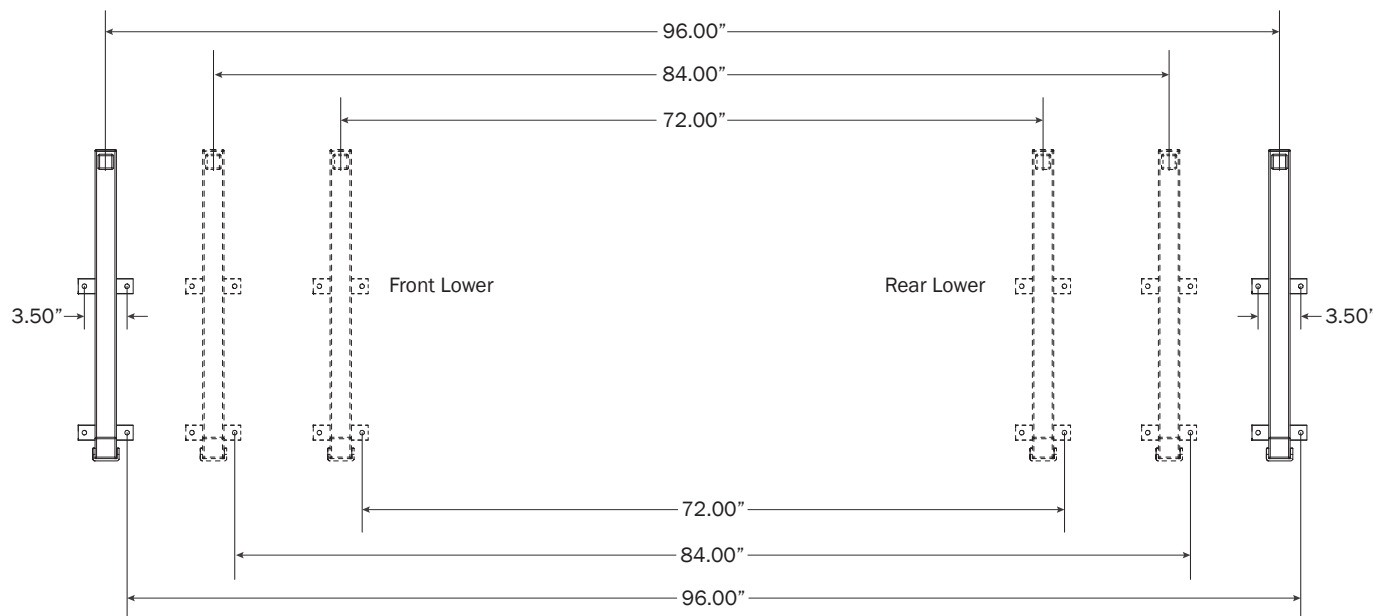

- 0.2** Position and align the vertical Uprights until the mounting holes realign to the body holes drilled during Steps 0.1.


- 0.3** Using the fastening hardware shown below, attach the vertical Uprights to the Utility Body. The Neoprene Washer, Fender Washer, and Locknut install from the inside of the Utility Body in the order shown, while the Bolt and Seal Washer install from the outside.

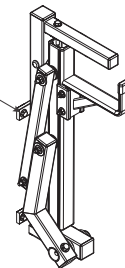


- 0.4** Torque to 90 in-lbs





Mounting Hardware (8X)




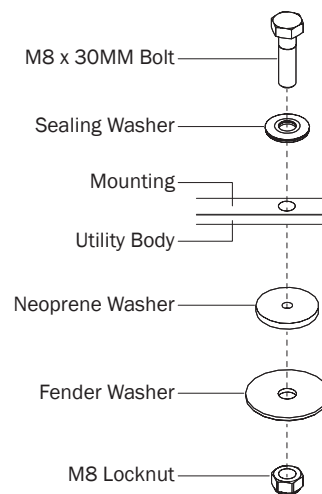


RIGHT ROTATION ASSEMBLY SEQUENCE

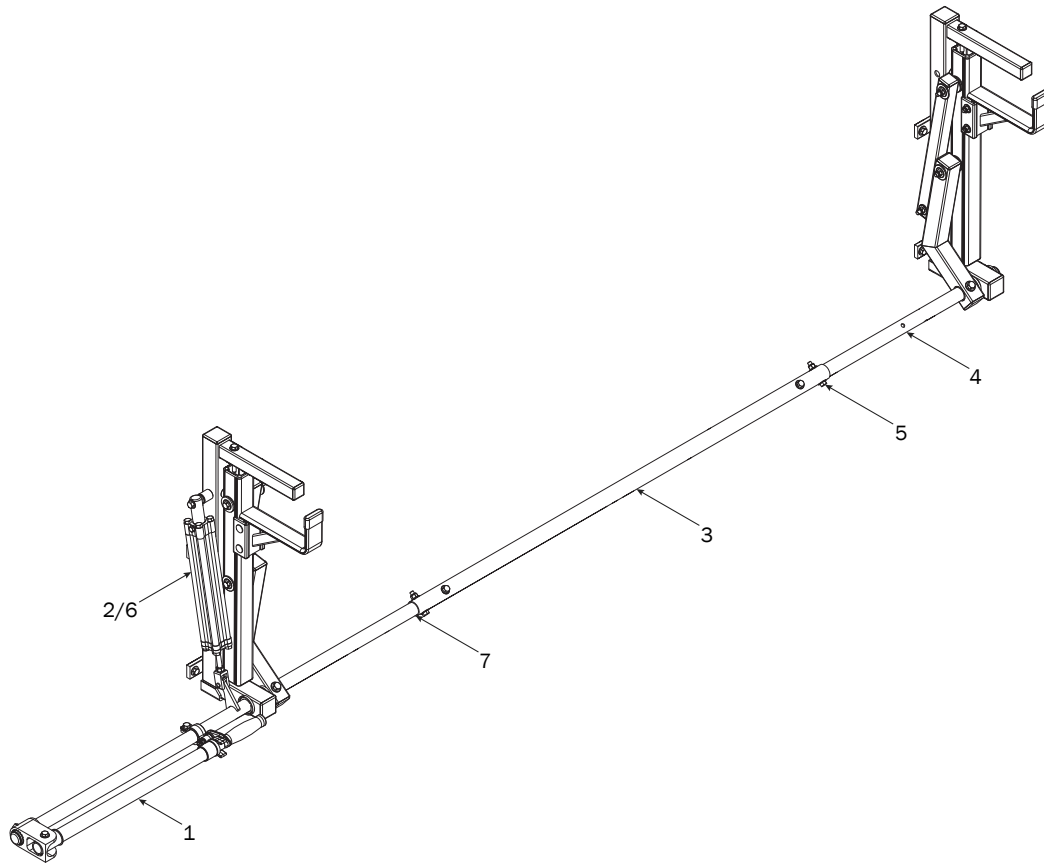


REAR DRIVE SHAFT

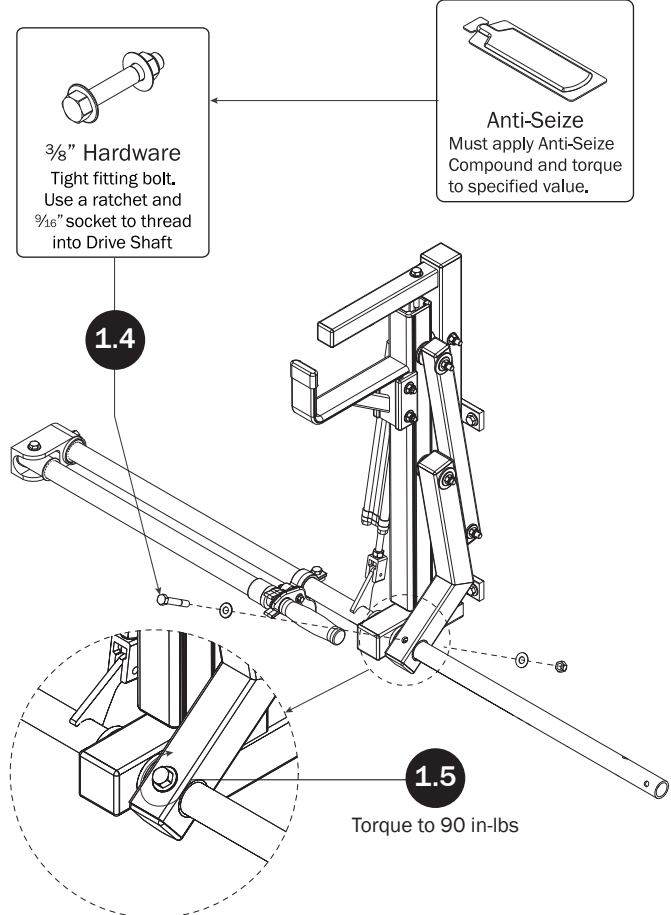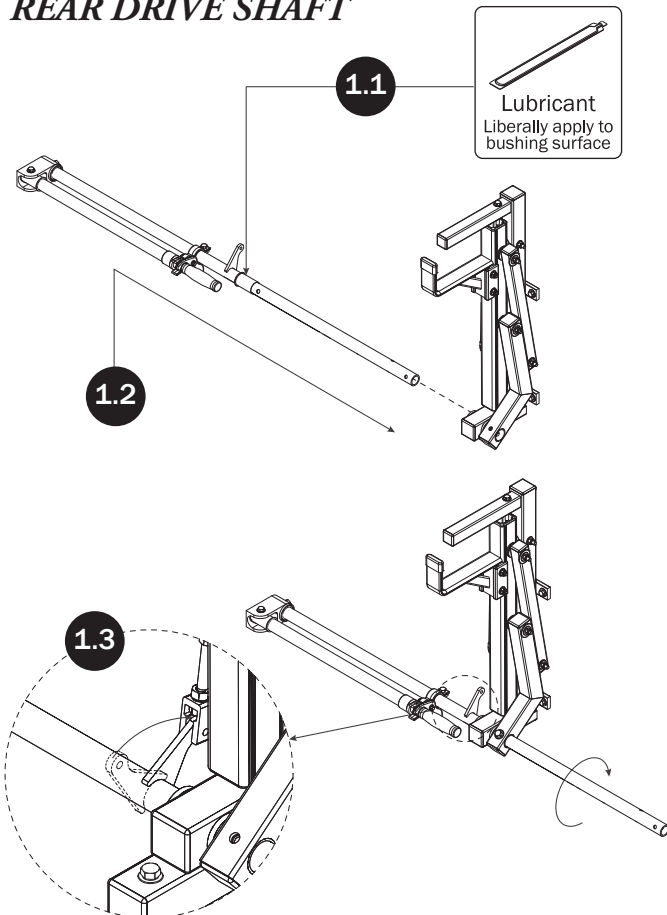

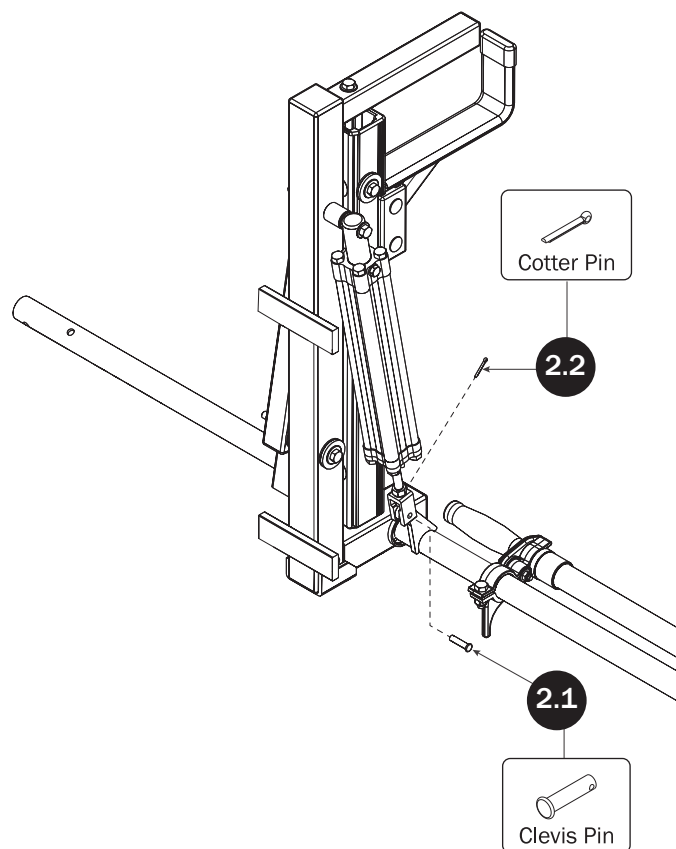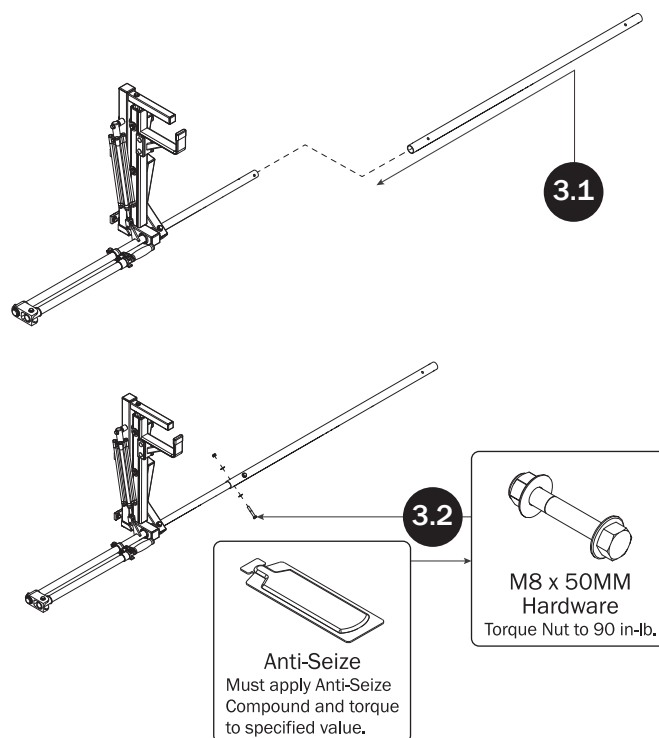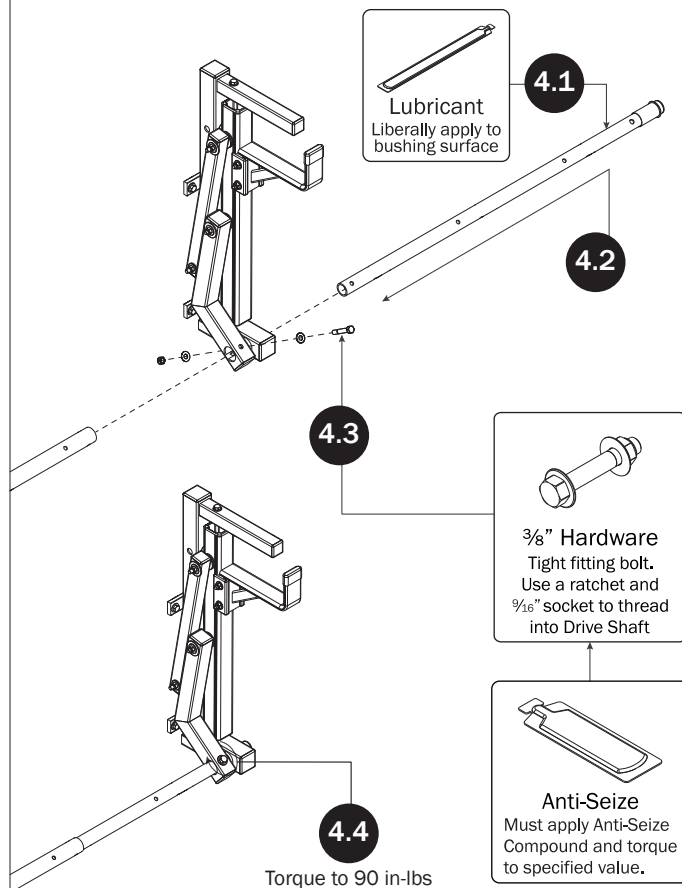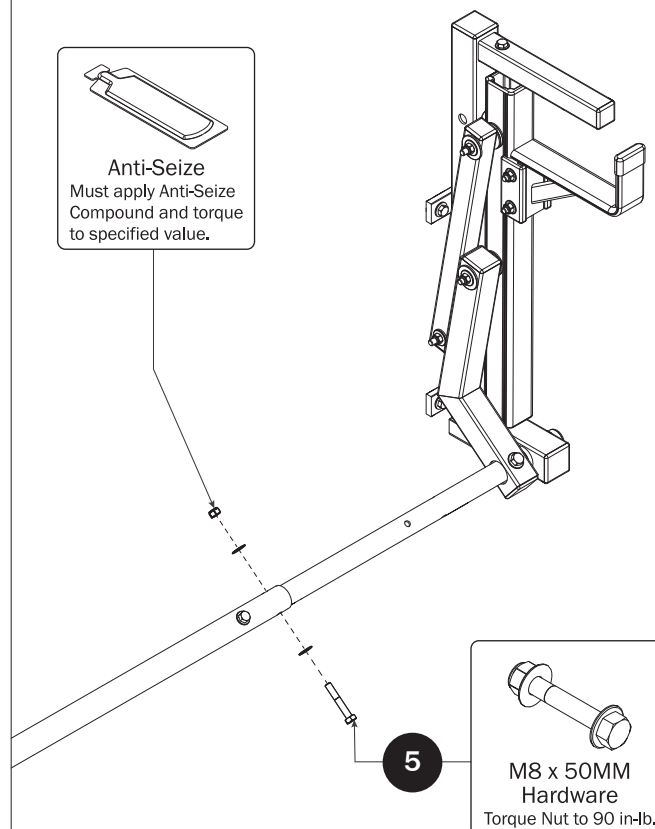CYLINDER HARDWARE**CONNECTING BAR****FRONT DRIVE SHAFT****CONNECTING BAR FASTENERS**

CYLINDER ADJUSTMENT

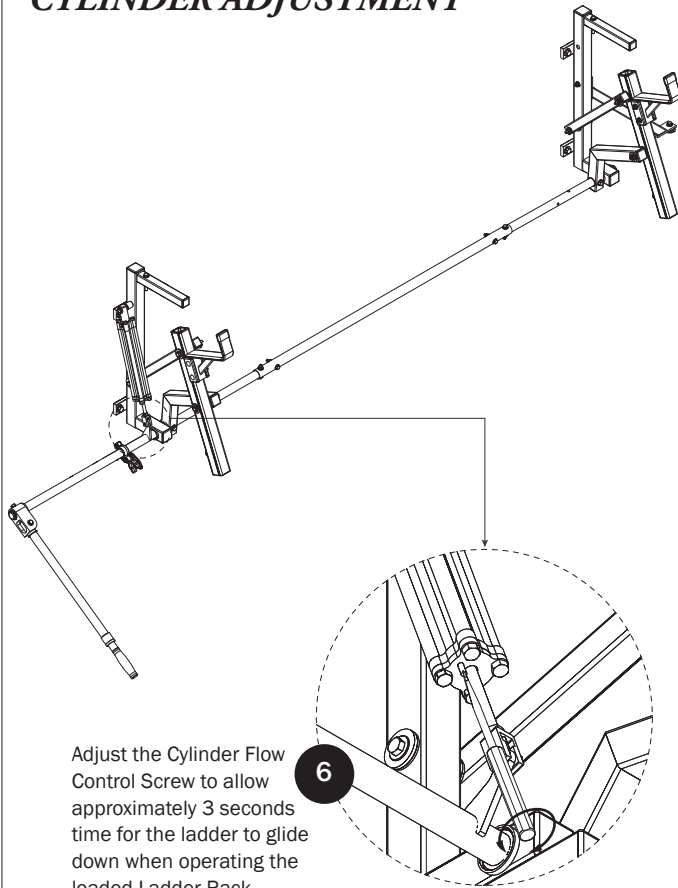

DRIVE SHAFT SEALING

