

## HRR3-E-SP-M

### ErgoRack, Sprinter

Three Crossbars, Powder Coat Finish  
Rack Weight (empty): 167 lbs

\*Callouts in this Configuration Overview indicate full module assemblies only.

For details on individual parts, please refer to the linked Module Overviews below.

- A: ..... [FEA-0020 Rotation Driveshaft Assembly](#)
- B: ..... [FBM-1008-BLK Mounting System](#)
- C: ..... [CBR-0008 Mid Crossbar Kit](#)
- D: ..... [FEA-0004 Slide Rotation Assembly](#)
- E: ..... [CBR-0007 Crossbar Assembly](#)
- F: ..... [FEA-0003 Slide Rotation Assembly](#)
- G: ..... [FEA-0019 Rotation Driveshaft Assembly](#)


[Modular Assembly Manuals](#)

### ErgoRack Van—Load specifications:

Check vehicle manufacturer recommendations for roof capacity weight limits.

CROSSBAR SPACING	STEP LADDER	EXT. LADDER
4 ft Spacing	6 – 8 ft.	16 – 20 ft.
5 ft Spacing	8 – 10 ft.	16 – 24 ft.
6 ft Spacing	8 – 12 ft. <sup>†</sup>	16 – 28 ft.
7 ft Spacing	10 – 12 ft. <sup>†</sup>	20 – 32 ft.
8 ft Spacing	10 – 12 ft. <sup>†</sup>	20 – 36 ft.

<sup>†</sup>Rotation Configurations: 12 ft. step ladders require an extended upper add-on component.

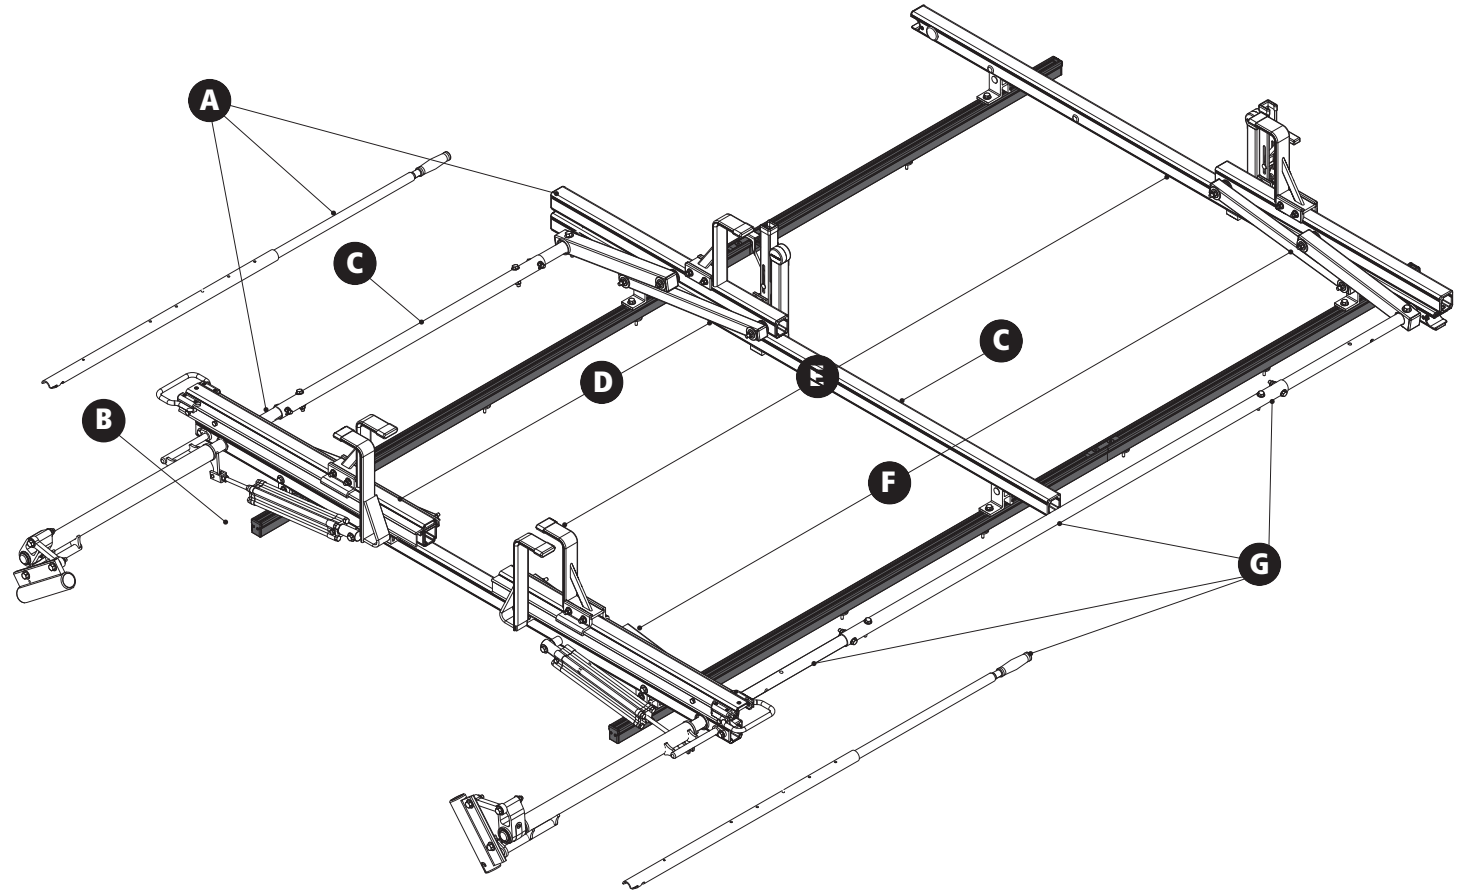

## HRR3-E-SP-M

### ErgoRack, Sprinter

*Approximate dimensions as shown:  
Shown installed on a Sprinter L1H2*


#### All Wheelbases and Roof Heights

- A: Rack Width ..... 79"
- B: Rack Height ..... 16.50"
- C: Rear Crossbar Offset (Left)..... 10.125"
- D: Mount Spacing L/R..... 52"
- E: Crossbar Spacing (rear to center) .....4'
- F: Crossbar Spacing (center to front) .....2'-4'
- G: Total Crossbar Spacing.....6'-8'
- H: Rack Length..... 131.50"

#### Compatible Accessories Available

(Sold Separately)

- Rear Access Ladder.....[AAL Series](#)
- 8'-12' Conduit Carriers.....[CON Series](#)
- WorkPro LED Lighting.....[LED Series](#)
- Systems and Safety Components .....[RVS Series](#)
- Safety monitoring.....[DS2 Series](#)

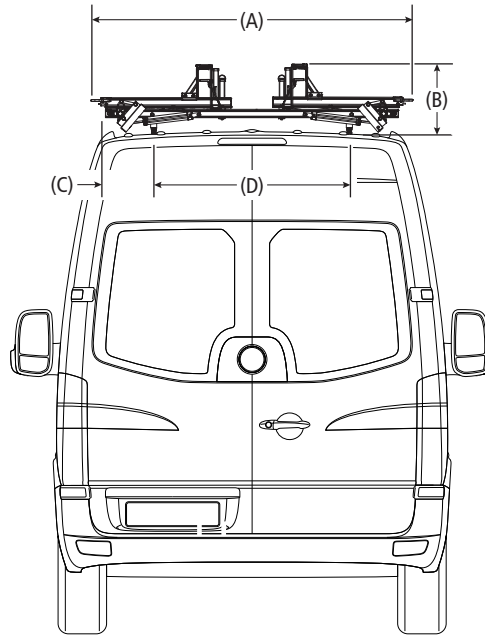

Rear Drive Shaft Offset: 29"

Note: The end of the driveshaft must not extend beyond the vehicle bumper

